 


# *Contoure*®

## Space Saver Appliances

10 cups coffeemakers  
Cafetera de 10 tazas  
Cafetiere de 10 tasses

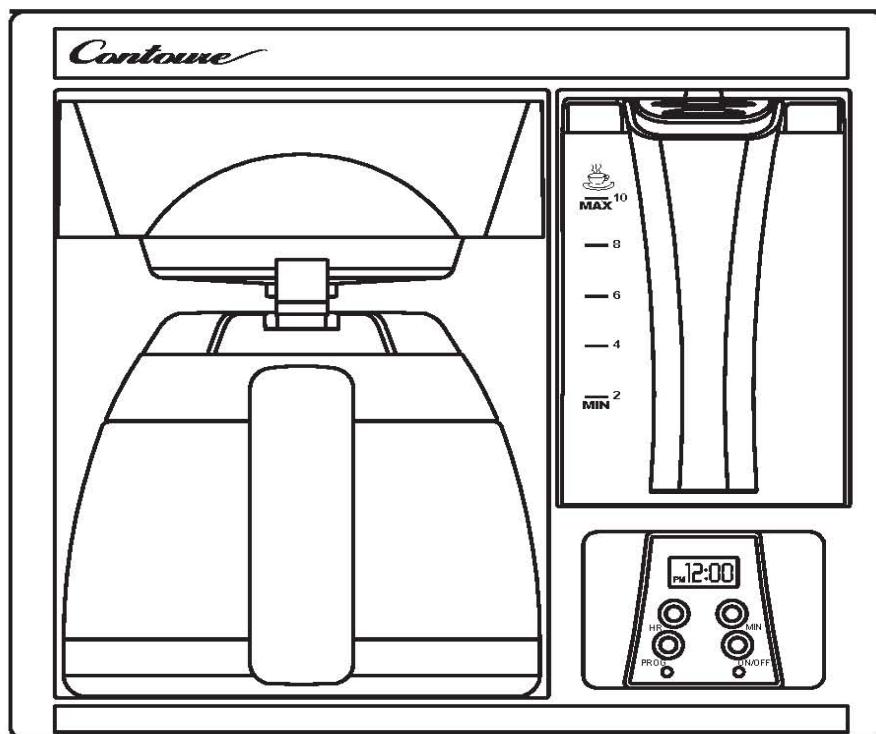

**CCM1000**

[www.contoure.com](http://www.contoure.com)

1-888-551-1041

PLEASE READ AND SAVE THIS USE AND CARE BOOK  
POR FAVOR LEA ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO  
VEUILLEZ LIRE ET CONSERVER CE GUIDE D'ENTRETIEN ET D'UTILISATION

# *Table O f C o n t e n t s*

|                             |     |
|-----------------------------|-----|
| Important Safeguards .....  | 1   |
| Parts List .....            | 2   |
| Mounting Instructions ..... | 3-4 |
| How To Use .....            | 5   |
| Cleaning.....               | 6   |
| Limited Warranty .....      | 7   |

## IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, basic safety precautions should always be followed including the following:

- Please read all instructions before operating or using the Coffee Maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, or injury, do not place cord, plug or Coffee Maker base in water or other liquid.
- To reduce the risk of fire or electric shock, do not remove the rear cover of the Coffee Maker. There are no user serviceable parts inside. Repairs should be done by authorized personnel only.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug when Coffee Maker is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the Coffee Maker.
- Do not operate Coffee Maker without water in the reservoir before brewing.
- Do not operate the Coffee Maker with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return the Coffee Maker to the nearest authorized service facility for examination, repair, or adjustment.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same circuit with this Coffee Maker.
- The use of an accessory not approved for operation with this Coffee Maker, may result in fire, electric shock, or injury.
- Do not use the Coffee Maker outdoors.
- Do not let cord hang over the edge of table or counter, or come in contact with hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- To reduce risk of fire, do not mount Coffee Maker over or near any portion of a heating or cooking appliance.
- To reduce risk of fire or electric shock, do not place any electric or gas heating or cooking appliance under the Coffee Maker.
- To reduce the risk of electric shock, do not mount over a sink.
- Do not store anything directly on top of the appliance surface.
- Keep the lid on the carafe when in use.
- The carafe is designed for use with the Coffee Maker. It must never be used on a range top, stove or in a microwave oven.
- Do not clean the carafe with abrasive cleansers, steel wool or other abrasives.
- Allow the filter basket to cool after brewing before removal from the Coffee Maker.
- Do not use this Coffee Maker for anything other than its intended use.
- Do not pour liquid other than water or the cleaning solution specified in this manual into the water reservoir.
- Do not operate any electric appliance in the presence of explosive and/or flammable fumes.

- Remember to place the empty carafe into the Coffee Maker before brewing and when using the automatic timer feature.
- Before you connect the Coffee Maker, check whether the mains voltage indicated on the Coffee Maker corresponds with the mains voltage in your home.
- This product is intended for Household Use Only.
- Do not use the carafe if it has a loose or weakened handle.
- There is max mark on the water Reservoir, do not overfill.

### POLARIZED PLUG

This appliance has a polarized plug – one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact qualified electrician to modify the plug in any way.

### TAMPER RESISTANT SCREW

This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. No user serviceable parts inside. Repair should be done only by authorized service personnel.

### ELECTRICAL CORD

The cord length of this Coffee Maker was selected to reduce safety hazards that may occur with a longer cord. If more cord length is needed, an extension with a polarized plug may be used. It should be rated not less than 10 amperes at 120 Volts, and have UL or CSA listed.

**NOTE: If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.**

**CAUTION: Never attempt to use tacks through or against the cord. Use the Cord Hook to hold cord out of the way.**

### WARNING RISK OF FIRE OR ELECTRIC SHOCK



 
The lightning flash with arrow head symbol, within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompany the appliance.

## SAVE THESE INSTRUCTIONS

# CCM1000/CCM1400 – Contoure Coffee Maker Parts List

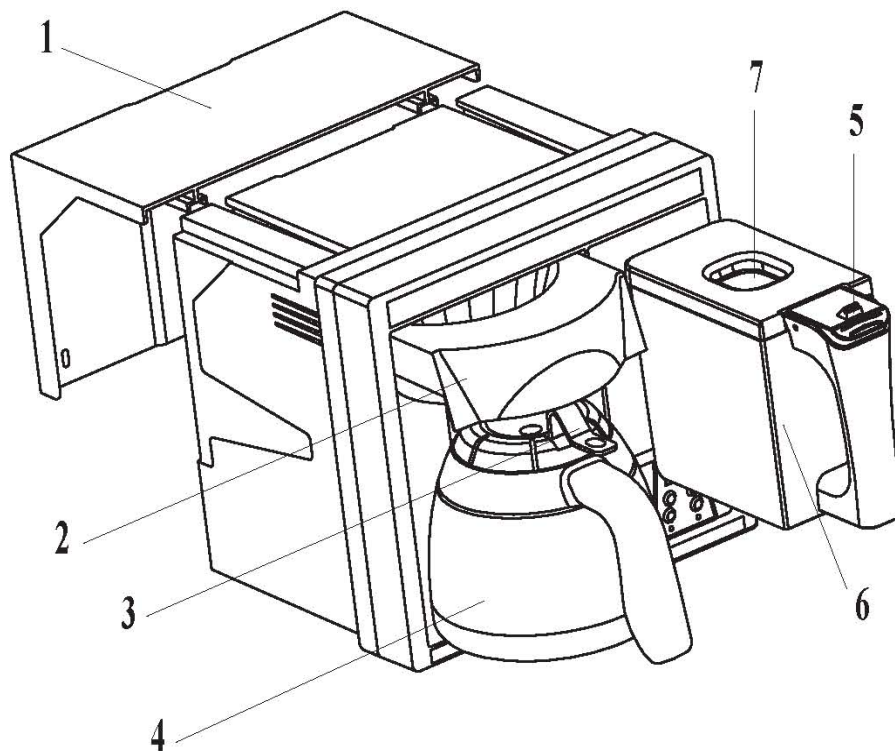

 1. Mounting Bracket
2. Brewing Basket
3. Push Button
4. Stainless Steel Thermal Carafe
5. Thumb Latch
6. Water Reservoir
7. Reservoir Lid

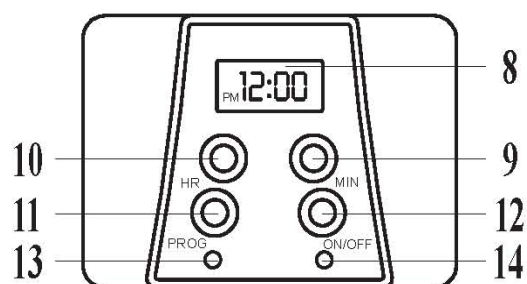


Optional Permanet Filter Basket –  
CCF100



[www.contoure.com](http://www.contoure.com)



 1. Mounting template
2. Screws - wall mount
3. Screws - under cabinet (flat)
4. Screws -under cabinet (overhang)
5. Spacers
6. Anchor
7. Nuts
8. Nuts Cover
9. Washers

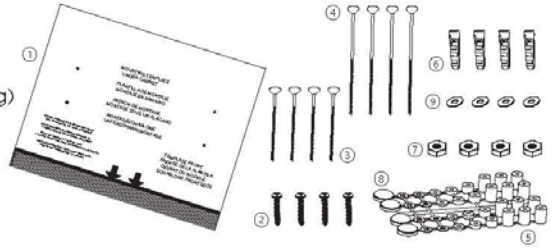

### MOUNTING INSTRUCTION

#### (CAUTION: WEAR EYE PROTECTION)

1. Before installation, remove the Carafe and Water Reservoir from the Coffee Maker.
2. Lift up the latch at the rear of the Reservoir chamber to release the unit then slide it out along the track guides from the Mounting Bracket.

#### A) Wall-Mounted

1. Select the right face of the Mounting Template then stick it at the desired location. Drill holes on the holes location marked on the Mounting Template.
2. Remove the Mounting Template. Insert the Anchor into the holes.
3. Align the holes then screw the Mounting Bracket on the wall.

#### B) Under-Cabinet Mounted – Flush (Flat) Bottom

 
 
 
 
 
 
 
 
 
 
 
 
1. Select the right face of the Mounting Template then stick it at the desired location.
2. Drill holes on the holes location marked on the Mounting Template.

3. Remove the Mounting Template. Insert the screws through the bottom of the track guides to the cabinet then tighten the screws with the nuts.

#### C) Under-Cabinet Mounted – Overhang (Lip Extending Down) Bottom

1. Select the right face of the Mounting Template. Measure the width of the overhang then fold the Mounting Template. Stick Mounting Template at the desired location.
2. Drill holes on the holes location marked on the Mounting Template.
3. Insert screws from the bottom of the track guides then put the Spacers on the screws.
4. Remove the Mounting Template. Put the Mounting Bracket under the cabinet and align the screws to the holes then tighten the screws with the nuts.

#### D) After installed the Mounting Bracket, slide the unit along the way of the track guides until locks into place.

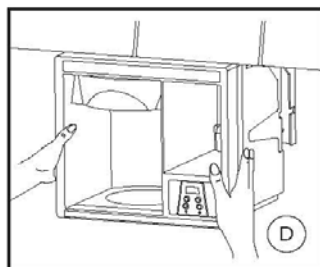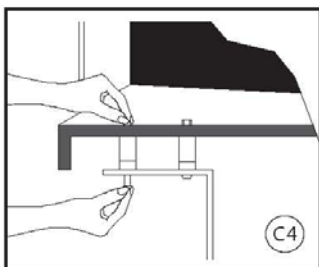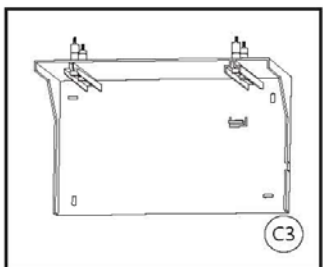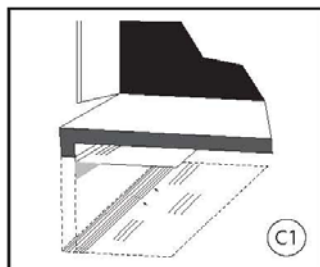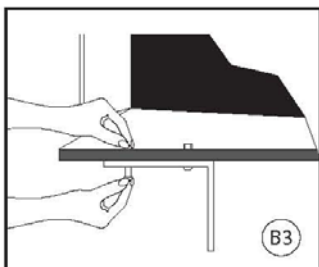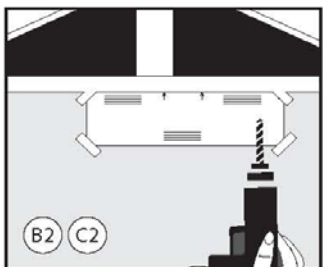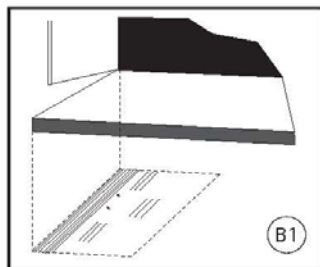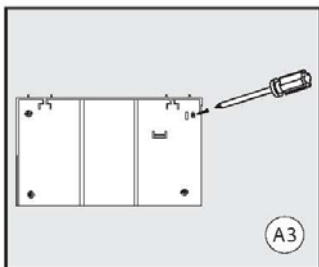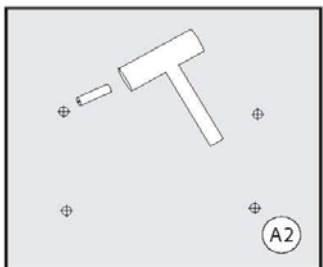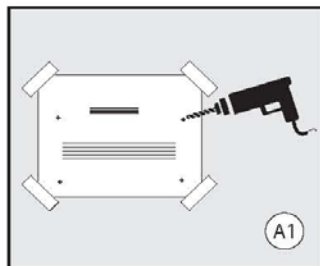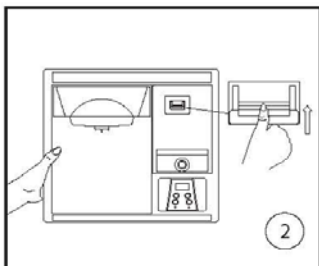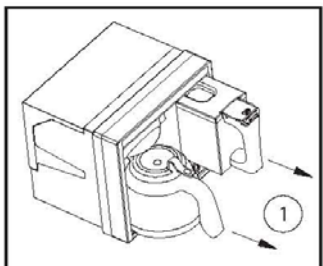

## HOW TO USE

### REMOVE AND RESTORE THE RESERVOIR FROM THE COFFEE MAKER

1. When you remove the Reservoir, hold the Reservoir handle and depress the Thumb Latch then pull it out from the Coffee Maker.
2. When you restore the Reservoir, push it back to the Reservoir chamber until the Thumb Latch is locked the unit.

### REMOVE AND REPLACE THE COFFEE MAKER FROM MOUNTING BRACKET

1. To remove the unit from the Mounting Bracket for servicing or cleaning, first remove the Carafe and Reservoir. Lift up the Latch at the rear of the Reservoir chamber to release the unit and slide it out along the track guides from the Mounting Bracket. (pg.4 pic.2)
2. To replace the unit in the Mounting Bracket, slide the unit along the track guides all the way back until it locks into place.

### THERMAL CARAFE

1. The Carafe is made of double stainless steel and is vacuum insulated. It can keep the coffee warm inside the Carafe.
2. The Carafe comes with the brew through lid. The valve on the lid will open automatically to let coffee drip into the Carafe when the Carafe is set in place in the Coffee Maker. The valve will close to keep coffee warm when the Carafe is pulled out from the Coffee Maker.



3. To remove the lid from the carafe, turn the lid counter-clockwise. To close the lid, turn the lid clockwise until the Push Button aligns with the handle.
4. To pour out coffee from the Carafe, depress and hold the Push Button in order to open the valve on the lid.

**CAUTION: Do not drink directly from the spout of the Carafe. Do not fill the Carafe with carbonated beverages. Do not directly heat the Carafe.**

### PREPARATION FOR USE

1. Before use, remove and inventory all packing material, literature and Mounting Hardware.
2. Brew 10 cups of fresh water through the system using a single paper filter as instructed below, but do not add coffee grounds to the paper filter.
3. When water has brewed through, the Coffee Maker will shut off automatically with "beep" sound to alert.
4. Clean the water Reservoir, Filter Basket, Thermal Carafe and Lid. (see "CLEANING")

### BREWING COFFEE

When the unit is plugged in, the blue backlite on the LCD display will illuminate and the clock will flash. It will stop flashing in about 10 seconds after setting the clock. You may set the clock at anytime before or after brewing. (see "SETTING THE CLOCK/TIMER") The clock cannot be set during the brewing cycle.

1. Remove Carafe from Coffee Maker and set aside. Remove the brewing basket, place a "basket type" coffee filter inside the Brewing Basket. (Note: For best results, filter should fit within brewing basket. If filter height exceeds, trim to fit.). Add coffee grounds according to the amount to be brewed (usually one tablespoon for every cup. Adjust to suit your taste). Restore the filter basket to the Coffee Maker. Replace the empty Carafe to the Coffee Maker. To prevent overflow of the Carafe, make sure the Carafe is empty each time before starting to brew.
2. Pull out the water Reservoir, and fill with cool (room temperature) water through the lid to the desired cup level (see the gauge next to the handle). Do not overfill the Reservoir above the Max. line. Push back the filled Reservoir into the Coffee Maker and make sure it is secured with thumb latch.
3. Press the "ON" button on the control panel to immediately start the brewing cycle. The light indicates the unit is ON. If you'd like to set your timer for AUTO ON, see "SETTING CLOCK/TIMER".
4. The Coffee Maker will shut off automatically after brewing. The indicator light will go out and the unit will be OFF, there will be a "beep" sound to alert coffee is brewed.

**CAUTION: Coffee Maker becomes very hot during and after brew cycle, handle with extreme care, as hot parts and escaping steam may cause burn.**

### PAUSE AND SERVE FEATURE

The Basket is featured with a valve that stops coffee drip from the Basket when the carafe is removed during brewing.

**NOTE: The Carafe must be replaced under the Basket in less than 30 second to prevent the Basket from overflow.**

**CAUTION: Do not pull out the Filter Basket at any time during brewing cycle. Be sure the Carafe is placed all the way back into the unit to continue dripping after sneaking a cup.**

### SETTING THE CLOCK/TIMER

You may set the clock at any time before or after brewing. When the unit is plugged in, the clock will flash (12:00) AM. The clock will stop flashing in about 10 seconds after setting the clock. You can enter into the clock setting again by pressing and holding the HR or MIN button for few seconds.

1. To set the current time: Press the HR and MIN buttons until you reach the current time. You may hold the button down to advance the numbers quickly. AM and PM will appear at the left side of the display. When the time is set, the display time keep flashing few seconds then the clock starts. To reset the time, press and hold the HR or Min button a few seconds, the clock will flash again then you can adjust the time.
2. To set the auto-on time: Press the PROG button, the clock and the PROG light will flash. Then press the HR and MIN buttons until you reach your desired pre-set brewing start time. Press PROG button again, the PROG light will then stop flashing and stay on to indicate the function activated. The LCD will return to display the current time.
3. To cancel the auto-on time, press the PROG button again and the PROG light will turn off.

**NOTE: You can stop brewing cycle at any time when you press the ON/OFF button once.**

## CLEANING

### CLEAN THE COFFEE MAKER

Be sure that Coffee Maker is unplugged and cool. Discard the paper filter and grounds, and clean as follows:

1. Thermal Carafe and Carafe Lid are both top rack dishwasher-safe; or they may be hand washed.
2. Filter Basket, Reservoir and Reservoir Lid may be

rinsed with water and cleaned with soft damp cloth.

3. The Unit may be cleaned with soft damp cloth.

### CAUTION:

- Do not use abrasive cleansers or scouring pads.
- Never immerse the Coffee Maker into the water or any liquid.
- Do not clean inner or outer surface of the Carafe with a hard tool.

### DECALCIFICATION

Mineral deposits left by hard water can clog the Coffee Maker. Excessive steaming or a prolonged brewing cycle is the sign that decalcification is needed. Basically, it is recommended to do the decalcification approximately once every 1-3 months. During decalcification, more steaming occurs than when brewing coffee. You may need to remove the Coffee Maker from the Mounting Bracket (see HOW TO USE) and place it on a counter to clean.

1. Fill the Reservoir half full with white vinegar then add water up to 10-cup line mark;
2. Place the filled Reservoir back to the Coffee Maker and secure;
3. Remove Carafe, then remove filter basket and put an empty paper filter in the Filter Basket, then put the Filter Basket to the unit in place;
4. Set the Thermal Carafe securely into the unit in place then turn the Coffee Maker ON;
5. Let half the cleaning solution brew into the Carafe, then turn the Coffee Maker OFF to soak. Allow the Coffee Maker to remain OFF for at least 15 minutes to soften the deposits;
6. Turn the Coffee Maker ON again to brew the remaining cleaning solution into the Carafe;
7. When the Coffee Maker is shut OFF automatically, empty the carafe and discard the soiled filter from the Filter Basket. Fill The Reservoir with cold water up to 10-cup line mark, put the empty Filter Basket and Carafe back to the unit in place;
8. Turn ON the Coffee Maker for a complete brew cycle to flush out the remaining cleaning solution;
9. Wash the Reservoir, Filter Basket, and Carafe as instructed. Return the Coffee Maker to the Mounting Bracket.



## **LIMITED WARRANTY**

THE SELLER NAMED BELOW MAKES THE FOLLOWING WARRANTY WITH RESPECT TO THIS APPLIANCE OR PRODUCT.

1. This Warranty is made only to the first retail purchaser (hereinafter called the "Original Purchaser") who obtains this product for personal use. It is made with the approval and cooperation of the manufacturer.
2. This Warranty will be in effect for one year from the date of purchase by the Original Purchaser. It is suggested that the Original Purchaser retain proof of direct purchase or a copy of the vehicle or vessel bill of sale as evidence of purchase.
3. This Warranty specifies that this appliance shall be free from defect in material and workmanship under normal use. This warranty does not apply to any appearance item nor to any product damaged or defaced, nor to any product subject to misuse, abnormal service, improper installation or handling, operation contrary to or not in accordance with the specific operating instructions, nor to any items used in conjunction with or attached to this product.
4. Original Purchaser. This Warranty entitles the Original Purchaser to have the defective product repaired or replaced, at seller' discretion, at no cost with respect to parts and repair labor.
5. In order to obtain the benefits of this Warranty, the seller named below should be notified as soon as defect is observed while Warranty is in effect. The Original Purchaser will be given coded authorization to return the product to the seller. All charges incurred in shipment of the product between the Original Purchaser and the seller shall be the responsibility of the Original Purchaser.

THIS SHALL BE THE EXCLUSIVE WRITTEN WARRANTY OF THE ORIGINAL PURCHASER AND NEITHER THIS WARRANTY NOR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, SHALL EXTEND BEYOND THE PERIOD OF TIME INDICATED ABOVE. IN NO EVENT SHALL THE MANUFACTURER, THE SELLER, THE SERVICE AGENT, THEIR ASSOCIATES, DEALERS, DISTRIBUTORS, OR AFFILIATES BE LIABLE FOR CONSEQUENTIAL ECONOMIC DAMAGE OR CONSEQUENTIAL DAMAGE OF PROPERTY. SOME STATES DO NOT ALLOW THE ABOVE LIMITATION; THEREFORE THE EXCLUSION MAY NOT APPLY TO YOU. IN ADDITION, THIS WARRANTY GIVES SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

**SELLER** Contoure Int, Inc. 1540 Northgate Blvd. Sarasota, FL 34234 PH: 888-551-1041  
[www.contoure.com](http://www.contoure.com)