

Mito PRV15 Round Radio Reset

When the microprocessor inside the radio does not get proper +12 volts, it can cause the buttons to stop responding. If the trailer does not have deep cycle batteries installed yet, the voltage can drop as below 9 volts. Electronics may not function properly when exposed to low voltage conditions and the volume buttons may not function.

To resolve the issue:

- 1 Remove all power to the radio (both red and yellow wires). You can remove the 2 fuses from their holders rather than cutting power wires.
- 2 Press and hold down the power button for 20 seconds
- 3 Repower the radio.
- 4 Test radio for correct button operation