


# OPERATING MANUAL

Quest-QR1000

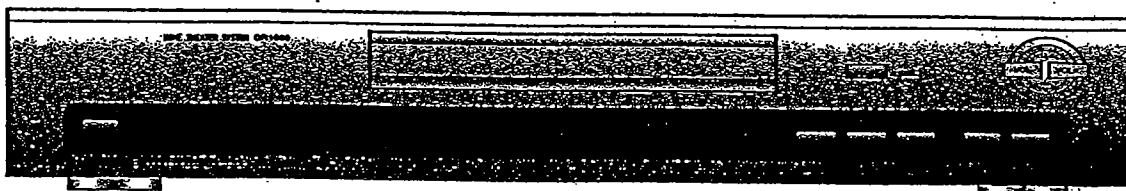

# IMPORTANT SAFETY INSTRUCTION



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN!



**WARNING:** To reduce the risk of fire or electric shock, DO NOT expose this product to rain or moisture.



The lighting flash with arrowhead symbol, within an triangle, alerts the user to "dangerous voltage" which could cause electric shock.



The exclamation point within a triangle indicates to the user to read important operating and maintenance instructions in the manual


## NOTES

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel.

# FEATURES

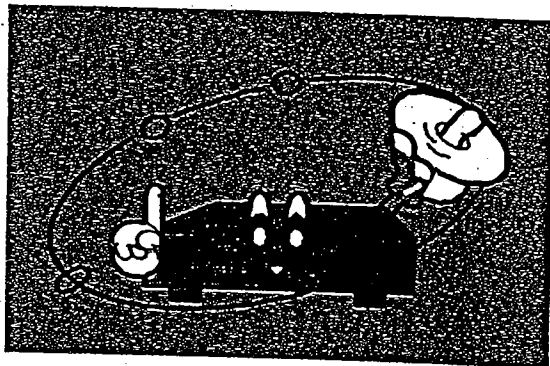

## DIGITAL HOME THEATER SYSTEM

### 1. Digital Audio/Video All-In-one

Enjoy digital Audio/Video media in hi-resolution with hi-fi sound. This Digital Home Theater System includes a DVD player, digital six-channel hi-fi amplifier and digital AM/FM radio.

### 2. Compatibility

DVD, CD, CD-R, CD-RW and JPEG discs compatible.

## DVD FUNCTIONS

### 1. High Resolution

Adopt an MPEG2 decoding format to achieve horizontal resolution more than 500 lines.

### 2. Superior sound

Built-in Dolby AC-3 decoder to output digital audio signal to reproduce high quality sound effects.

### 3. Complete Range of Output Jacks

Video, S-video, Y/Pb(Cb)/Pr(Cr), Optical, coaxial and 2ch audio out.

### 4. Special Function

Supports multi-angle and multi-language playback for enjoying unique video features.

### 5. Video Output

Standard Video, S-Video and Y/Pb(Cb)/Pr(Cr) output and easy PAL/NTSC shift.

### 6. Audio Output

2ch analog audio output, optical and coaxial digital audio output can be connected to any amplifying equipment.

### 7. Screen

Supports 4:3 and 16:9 aspect ratios.

### 8. Zoom Function

The JPEG picture can be enlarged relevant times for enjoyment.

### 9. All Playback Functions

Fast forward and backward, slow playback, step playback, repeat playback and program playback.

### 10. Search By Time

Search for the desired picture quickly, especially for finding favorite screens.

### 11. Last Memory Playback

Can continue playing from the stopped point in power on status.

## HI-FI PURE DIGITAL AMPLIFIER

1. Full digital amplifier with six built-in separate amplifying units.

2. Two front speakers, one center speaker, two surround speakers and one subwoofer.

3. One-line external analog stereo audio input amplifiers.

4. The volume of front, surround, center and subwoofer can be controlled independently, or together, and settings can be memorized.

5. Subwoofer outputs high power to produce intense bass.

## RADIO FUNCTIONS

1. Receive AM/FM signals clearly.



2. Search for radio stations automatically.

3. Memorize radio stations easily.

4. Search for radio stations in high or low frequency ranges.

# DISCS INFORMATION

## DISCS FORMATS SUPPORTED BY THIS PLAYER

|     | DISC LOGO   | CONTENTS                         | SIZE | MAXIMUM TIME                     |
|-----|---|----------------------------------|------|----------------------------------|
| DVD |  | Audio+ Video<br>(active picture) | 12cm | 120min (SS-SL)<br>240min (DS-DL) |
|     |   |                                  | 8cm  | 40min (SS-SL)<br>80min (DS-DL)   |
| CD  |  | Audio                            | 12cm | 74min                            |
|     |   |                                  | 8cm  | 20min                            |

- ◆ Software maker specifies the operation method of some DVD discs. Please refer to the instruction manual of disc.

### NOTES

#### 1. Using of Discs

- Do not touch the playing surface of the compact disc.
- Do not stick paper or label on the disc.
- Do not expose disc to direct sunlight.
- Do not place disc near water or in dusty place.



#### 2. Cleaning of Discs


- If a disc has fingerprints or dust on it, lightly wipe the disc with soft cloth from the center of the disc outward in a radial manner.
- Never use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvents to clean your discs.



**WARNING : PLEASE REMOVE ALL CD'S AND/OR DVD'S FROM THE PLAYER BEFORE TOWING OR DRIVING YOUR RV**

# PARTS INTRODUCTION

## FRONT PANEL

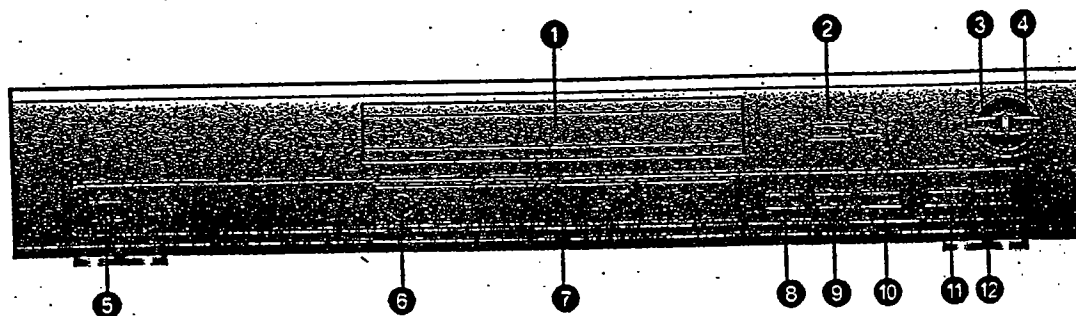

**1. Disc tray**

-Used to load disc.

**2. EJECT button**

-Press to open/close the disc tray.

**3. VOL - button**

-Press to lower volume of amplifier.

**4. VOL + button**

-Press to raise volume of amplifier.

**5. POWER button**

-Press to turn on/off the power.

**6. REMOTE sensor**

-Receives the signal from the remote control.

**7. Display panel**

-Indicates the current status of the unit.

**8. FUNCTION button**

-Press to select DVD, Radio and Audio IN.

**9. PLAY button**

-Press to begin the playback of the inserted disc.

**10. STOP/BAND button**

-Press to stop playback in DVD status.

-Press to shift between AM and FM in radio status.

-Press to stop tuning in auto tuning status.

**11. REVERSE scan button**

-Press to search backward.


**12. FORWARD scan button**

-Press to search forward.


# PARTS INTRODUCTION

## DISPLAY PANEL


### DVD DISC PLAYBACK

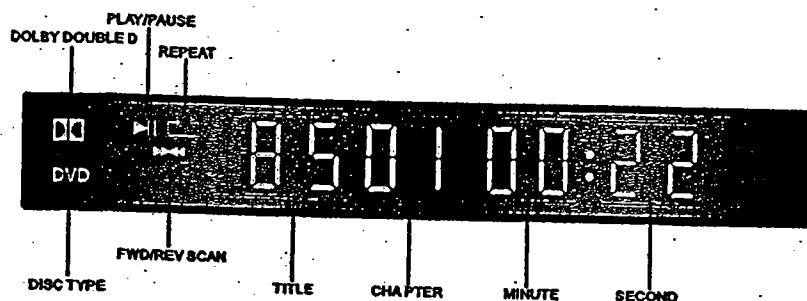

### RADIO

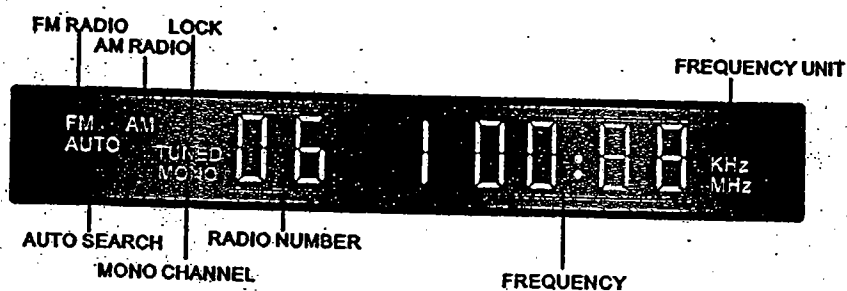

## REAR PANEL

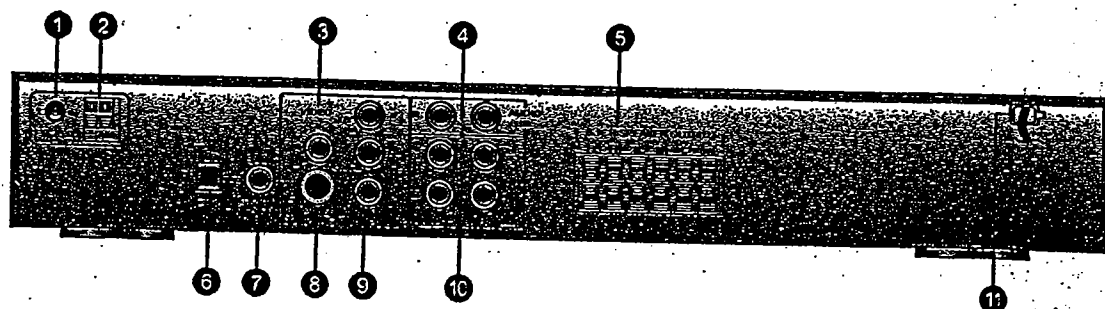


1. FM 75  $\Omega$  coaxial antenna jack
2. AM antenna jack
3. Video output jack
4. Audio input jacks
5. 5.1CH speaker audio output jacks

6. Optical digital audio output jack
7. Coaxial digital audio output jack
8. S-Video output jack
9. Y/Pb(Cb)/Pr(Cr) output jacks
10. Stereo audio output jacks
11. Power-supply cord

# REMOTE CONTROL

## REMOTE CONTROL

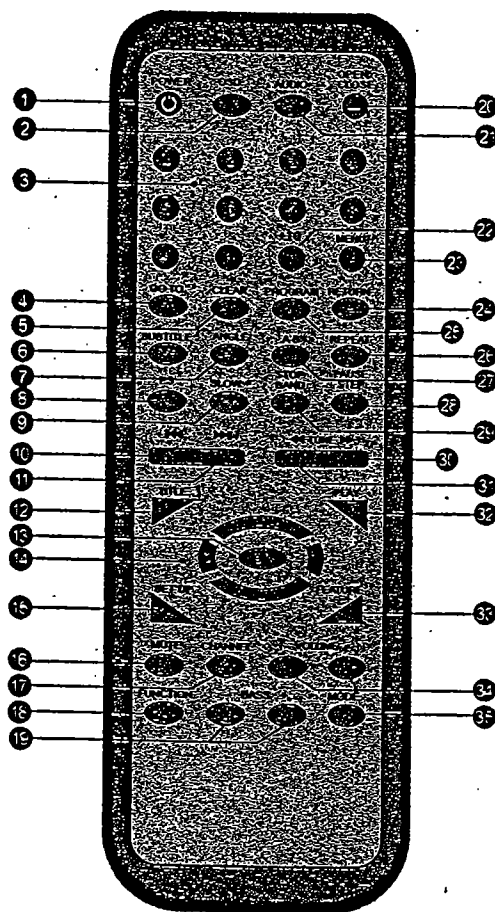

### 1. POWER

-Press to switch the player on or to put in standby.

### 2. OSD

-On screen display.

### 3. 0-9

-Press to select the track number.

### 4. GOTO

-Press to select the time you want to start playback.

### 5. CLEAR

-Press to clear the incorrect input.

### 6. SUBTITLE

-Press to display and select different subtitle of DVD discs.

### 7. ANGLE

-Press to select different angle for the DVD discs with multi-angle.

### 8. PS

-Press to shift between progressive and interlace scan.

### 9. SLOW

-Press to slow forward or reverse for DVD discs.

## REMOTE CONTROL

### 10. ⏮

-Chapter/track reverse search.

### 11. ⏭

-Chapter/track forward search.

### 12. TITLE

-Press to display title menu for DVD discs.

### 13. OK

-Press to confirm after the selection for menu.

### 14. ◀ ▶ ▲ ▼

-Menu direction button.

### 15. SETUP

-Press to display the setup menu.

### 16. MUTE

-Press to mute the sound.

### 17. CHANNEL

-Press to select different speaker channels.

### 18. FUNCTION

-Press to select different input modes.

### 19. BASS +, -

-Press to increase or decrease the bass of amplifier.

### 20. OPEN/CLOSE

-Press to open/close the disc tray.

### 21. AUDIO

-Press to select different audio language.

### 22. +10

-Press to select the track number more than ten.

### 23. MENU

-Press to display/close the menu for some discs.

### 24. RETURN

-Press to return to menu.

### 25. PROGRAM

-Press to activate program options.

### 26. REPEAT

-Press to repeat a disc, track or title.

### 27. A-B

-Press to repeat a selected section.

### 28. PAUSE/STEP

-Press to pause playback.

-Press to activate frame-by-frame playback.

### 29. STOP/BAND

-Press to stop playback.

-Press to select AM or FM signals.

### 30. ⏩

-Press to scan forward.

### 31. ⏪

-Press to scan backward.

### 32. PLAY

-Press to begin playback.

### 33. FEATURE

-Press to turn on/off zoom and move function.

### 34. VOLUME +, -

-Press to increase or decrease the volume.

### 35. MODE

-In radio status or external audio input status, press to select the output of three-channel or six-channel




## SYSTEM CONNECTION

- ◆ Do not connect the power cord until all other connections have been made.
- ◆ The Home Theater System has a 2ch analog audio output, a S-video output, a digital audio output (optical & coaxial) and a component output. You can choose the appropriate one to connect to your television.

### CONNECTING to the TV

Connections should be made as follows:

In the figure below, the VIDEO OUT, S-VIDEO OUT and COMPONENT OUT jacks are shown. If the TV has S-VIDEO IN or COMPONENT IN jacks, you can achieve a more vivid picture by using these connections.

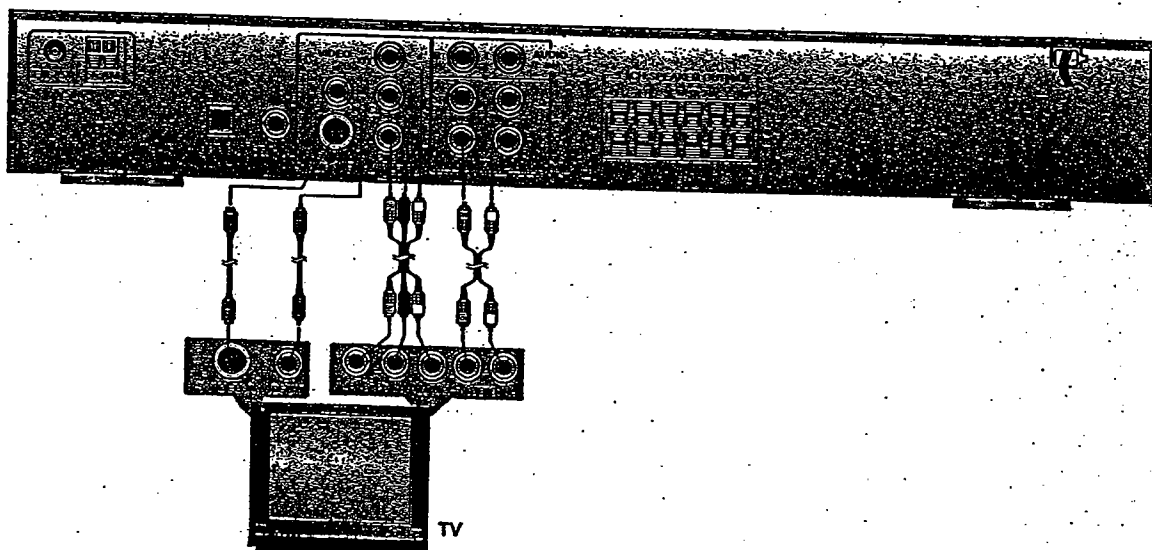


#### Y/Pb(Cb)/Pr(Cr) connection

If a display device with Y/Pb(Cb)/Pr(Cr) jacks is connected, then you should connect the jacks with three Y/Pb(Cb)/Pr(Cr) cables.


# SYSTEM CONNECTION

## CONNECTING to the ANTENNA

Connect the supplied AM and FM antennas to listen to the radio.

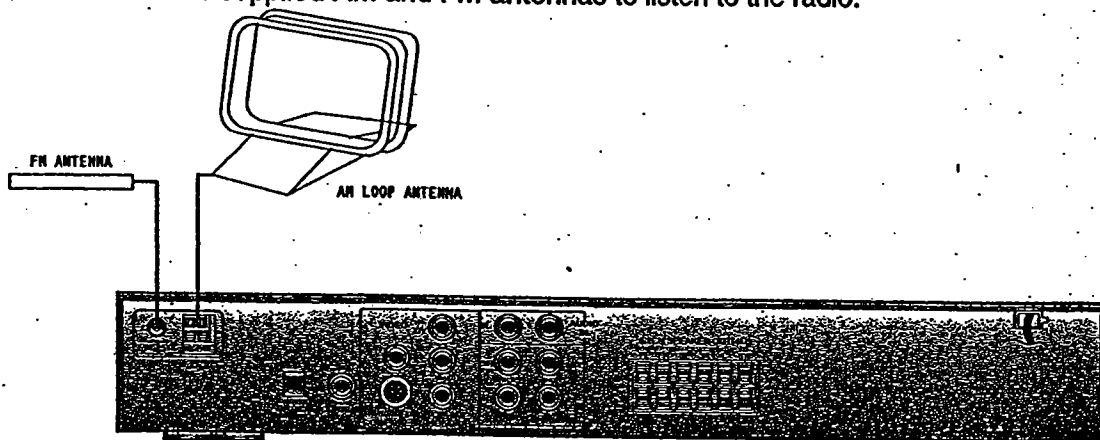

- ◆ In order to improve the signal, move the AM loop antenna away from system and other equipment.
- ◆ Extend the antenna fully.
- ◆ Keep the FM antenna as horizontal as possible after connection.
- ◆ When connecting the supplied AM loop antenna, connect two black cords to the AM and ground jacks as shown below:

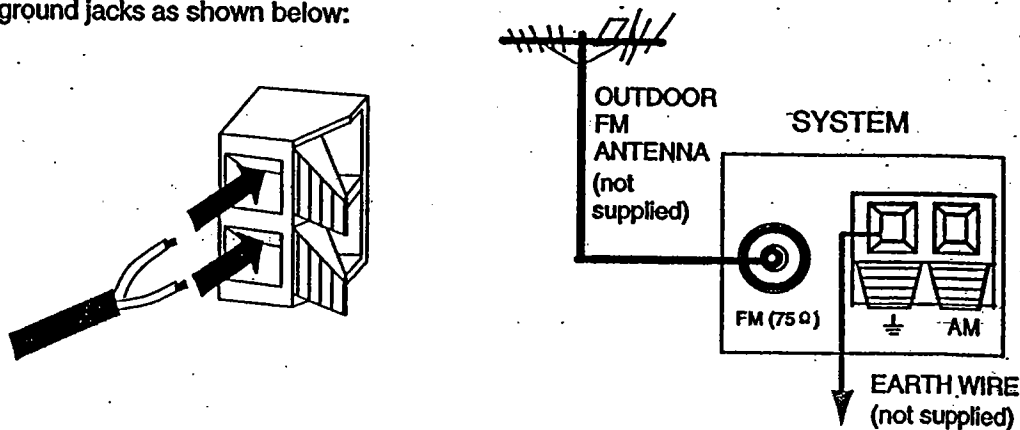

- ◆ If the FM reception is poor, please use a 75 Ω coaxial cable (not supplied) to connect system to an outdoor FM antenna as shown above.
- Note:** If you connect system with outdoor FM antenna, you should earth the system in order to avoid lightning strike. **IMPORTANT:** Do not connect the earth wire to gas pipe to prevent gas explosion.

## SYSTEM CONNECTION

### RADIO FUNCTIONS

The player has AM and FM radio functions to receive clear radio stations.

Operation steps:

1. Press the FUNCTION button to change to Radio.
2. Then press the STOP/BAND button to select AM or FM signals.
3. Press the TUNE button to select the radio station.
  - 1) Change stations by pressing the UP or DOWN direction buttons. The display panel will display the radio frequency.
  - 2) Select radio stations automatically by pressing the ◀TUNE or ▶TUNE scan buttons. When the station is found, the auto search will stop. If you like the station, press the OK button to memorize this station. If you want to stop searching, press the STOP/BAND button.
4. Memorizing radio stations


If you choose a radio station and want to listen to it later, you can press the OK button to memorize it. The memory location number on the display panel flashes twice to show that the memorization has been done. The first memorized station will be put in the first memory location number. If you memorize other radio stations, they will be memorized in the second memory location number, third memory location number, and so on. This player can store 16 AM and 16 FM radio stations. When you memorize the seventeenth radio station, it will replace the first one, and so on.
5. Accessing memorized radio stations

If you know the memory location number of a radio station you have memorized, you can press the number buttons on the remote control to access it. To access a memory location above 10, press the ▶ button to access the next higher number of memory location, and the ◀ button to access the next lower number of memory location.
6. In radio status, press AUDIO button to change the radio signal into mono signal and MONO in the display panel will be lit. Press it again to resume the original signal, and MONO will go out.
7. When listening to the radio, press the MODE button to select three-channel output or six-channel output.

# SYSTEM CONNECTION

## CONNECTING the SPEAKERS to the PLAYER

Use the supplied cables to connect the player to the speakers. Note that the polarity should be correct. **IMPORTANT:** Do not connect the player to speakers other than those supplied.

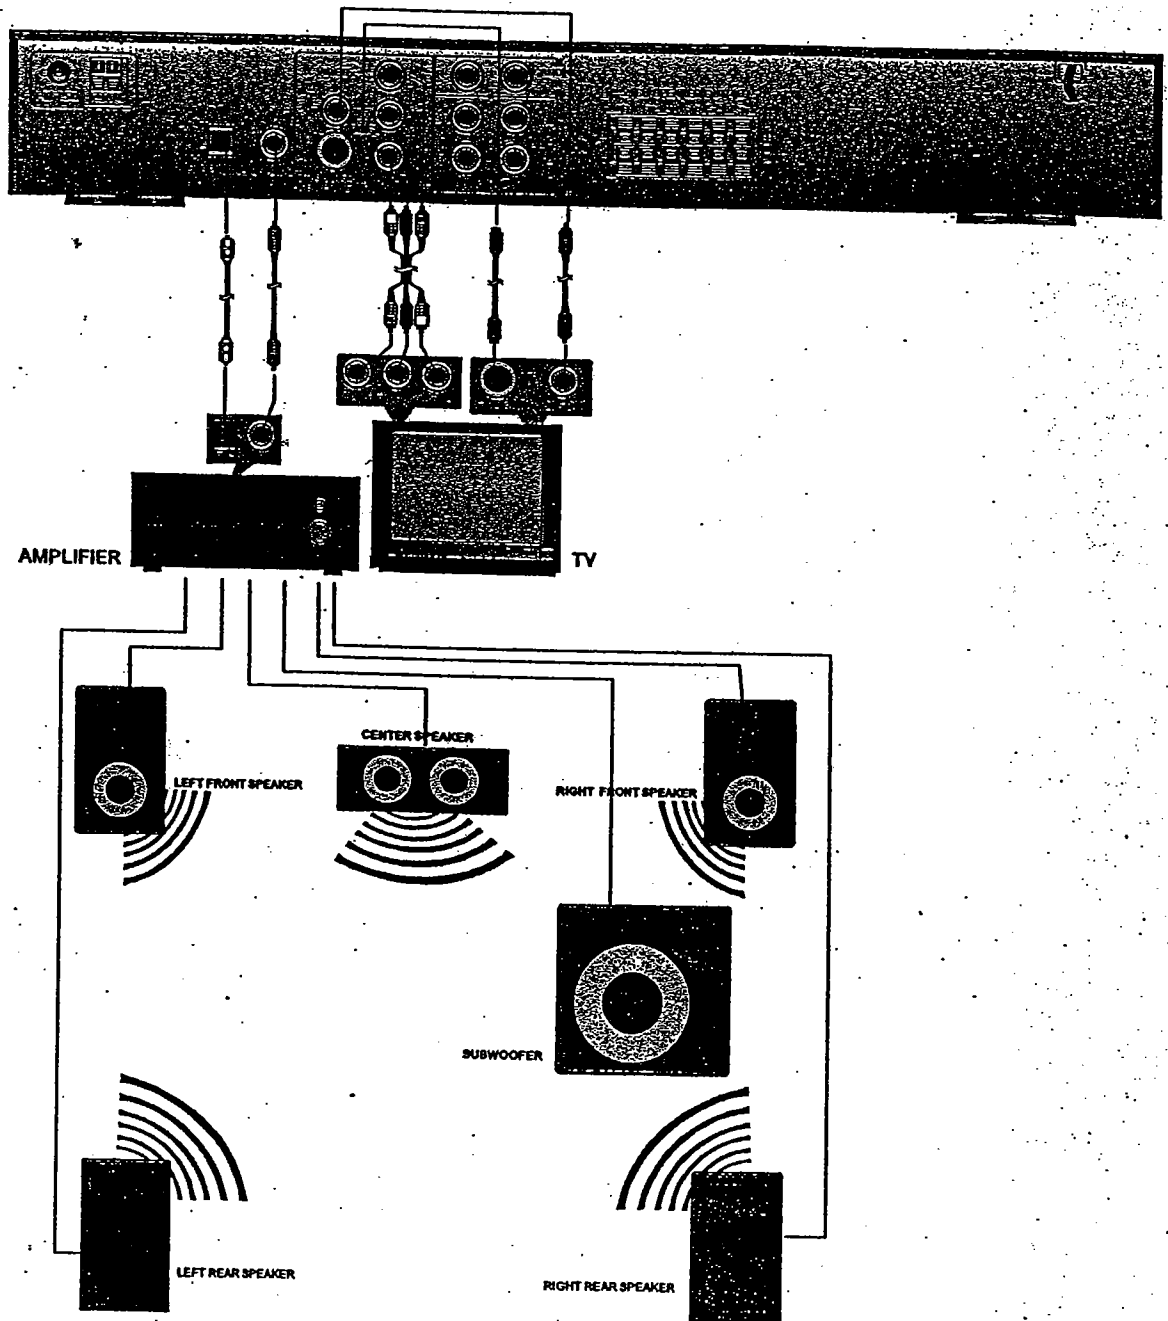

## DIGITAL AMPLIFIER

The digital amplifier of digital home theatre system has the following outstanding functions:

1. Hi-fi amplifying
2. Digital audio amplifying
3. Reach more than 80% efficiency
4. One-channel analog stereo input jack

Operation introduction of digital amplifier:

1. Press FUNCTION button to select radio input, external input and DVD input.
2. Press MUTE button to turn off amplifying signal output. Press again to resume.
3. If you want to adjust the signal of front left/right, subwoofer, center, surround left/right or all signals, press CHANNEL button to shift to the signal needing adjustment and then press VOLUME- or VOLUME+ to adjust to the effect you like. Press Bass Up/Down to raise or lower the volume.

4. DVD functions:

 
For enjoying movies or music, set speakers to be:

|       |        |       |           |
|-------|--------|-------|-----------|
| Front | Center | Rear  | Subwoofer |
| Small | Small  | Small | On        |

5. External audio input:

- 1) Press the MODE button to select three-channel output (display panel displays 2.1 CH) or six-channel output (display panel display 5.1 CH).
- 2) See display below.

The following is the relevant display when adjusting the all volume or separate volume.




## NORMAL OPERATION

**Preparation:** After connection, turn on the power of relevant equipment and select video input.

### 1. Turn on the player's power

Press the POWER button on front panel to turn on the power and the player will search for the disc automatically. If there is a disc in, the player will automatically play it.

### 3. Load the disc into the disc tray

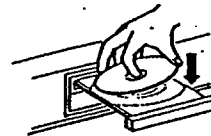

Load the disc as shown in the figure in order not to damage the player or the disc.

2. Press EJECT on front panel or OPEN/CLOSE button on remote control to open the disc tray.

4. Press the EJECT button or OPEN/CLOSE button to close the disc tray and begin playback.

**NOTE:** Do not play bad quality or damaged discs as this may damage the lens inside the player.

## DVD PLAYBACK

### MENU

Normally there is a selecting menu in a DVD disc. You can use the MENU button to enter the selecting menu directly, and use the direction buttons to highlight the item you would like and press the OK button to select it.

### TITLE & CHAPTER

Normally there are several titles in a DVD disc, and also there are several chapters in a title. You can select any one of titles or chapters quickly by using the Number buttons to enter the number of the chapter.

### LANGUAGE

There are several kinds of audio languages in a DVD disc. When you play a multi-language DVD disc, press the AUDIO button on remote control to select a different audio language.

**NOTE:** This function is only available for discs that have several audio bitstreams.

## NORMAL OPERATION


### SUBTITLE

The DVD player can support up to 32 kinds of subtitles. When you play a multi-subtitle disc, press the SUBTITLE button on remote control to select different subtitle.

**NOTE:** This function is only available for discs that several audio bitstreams have been recorded onto.

### ANGLE

The DVD player supports multi-angle function. Multi-angle means that a scene is shot from more than one angle so that audience can watch from any angle. If there are multiples in a scene, you can use the ANGLE button to select the angle you like to enjoy. Press the ANGLE button continuously to view different angles.

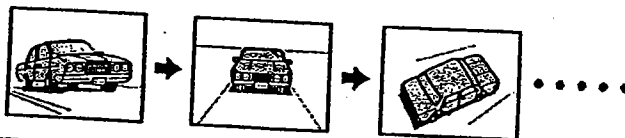

### VOLUME

During playback, press the VOL+ button to increase the volume and press the VOL- button to decrease the volume.

**WARNING :** PLEASE REMOVE ALL CD'S AND/OR DVD'S FROM THE  
PLAYER BEFORE TOWING OR DRIVING YOUR RV

## NORMAL OPERATION

### CD PLAYBACK

The player will play all tracks for CD discs continuously in default status. You can press the **◀** and **▶** (PREV/NEXT SKIP) buttons or number buttons to select a certain track.

### PICTURE CD PLAYBACK

#### JPEG playback operation

##### 1. Normal Playback

Place a disc with 'JPEG' in the player. The left column is the menu for last level, and the right is the menu for next level. Use the OK button and the Left/Right direction button to select submenu with picture. Use the Up/Down button to select the contents in the menu.

For example: Use direction buttons to select the name of the picture, and then press the OK button to confirm to play. Many discs have other contents besides pictures.

##### 2. Picture Rotation

It can be operated when the picture is displayed. Once another picture is selected, it will be cancelled automatically.

There are four kinds of rotational modes: Rotate left, Rotate right, Rotate up and Rotate down. You can use direction buttons to select.

##### 3. Zoom

FEATURE button is used to turn on/off zoom and move function.

When this function is turned on, use the **◀** and **▶** buttons to control zoom proportion and TV screen will display relevant proportion. Then you can use directional navigation arrows to move the picture.

When this function is turned off, the picture will resume normal size, and then press the MENU button to return to root menu.

◆ Depending on how the disc was made, a JPEG disc may allow playback, but not rotation or zooming of the images.



## PLAYBACK FUNCTIONS

### STOP


During playback, press the STOP button on remote control to stop playback. For DVD discs, after pressing the STOP button once, pressing the PLAY button will resume play from the stopped point.

### PAUSE

Press the PAUSE/STEP button on remote control to pause, and press it repeatedly to achieve frame-by-frame playback.

### REPEAT

1. Use the REPEAT button to repeat a title, a chapter, a track and a disc respectively according to different discs, and also to cancel repeat.
2. Use the A-B button to repeat section A to B. Press it once to set the starting point A, twice to set the ending point B, and the third time to cancel repeat.

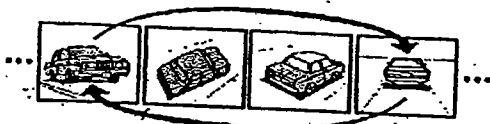

◆ Some discs do not support repeat function.

### SEARCH BY TIME

You can use the GOTO button to search by time, namely to play from a specific time. During DVD playback, press the GOTO button once and TV screen will display the title or chapter, then you can use number buttons to select any one of them. Press the GOTO button twice, then you can use number buttons to input the time you desired (hour, minute, second), and the player will play from the inputted time.

◆ Some DVD discs do not support search function.

### FAST FORWARD & REWIND

Press the ◀ and ▶ buttons to activate fast forward or rewind.

### SLOW FORWARD & REWIND

Press the SLOW button to activate slow forward or rewind.

◆ There is no slow playback function for CD.

## PLAYBACK FUNCTIONS

### DISC INFORMATION DISPLAY

Press the OSD button on remote control to display the relevant disc information.

### PLAY

Press the PLAY button to start playback. Press the POWER button on remote control to enter standby status, and press it again to resume playback status. If there is no operation for a long time, the player will automatically enter screen saver status and then enter standby status.

### PROGRAM PLAYBACK

Use the PROGRAM button to activate program playback of DVD and CD discs.

Operation steps:

1. In stop status, press the PROGRAM button to enter program status.
2. Use the number buttons to input contents according to prompts.
3. Repeat step 2 to program more contents.
4. Use the direction buttons to move cursor to "START" and then press the OK button or the PLAY button to begin the program playback.

### ZOOM

To enlarge or reduce the picture, press the FEATURE button on the remote control.

Continually pressing the zoom button will change the mode accordingly:

Enlarge x2, enlarge x3 and enlarge x4 or reduction x1/2, reduction x1/3 and reduction 1/4 repeat press the FEATURE button on the remote control to resume normal playback.

**WARNING : PLEASE REMOVE ALL CD'S AND/OR DVD'S FROM THE  
PLAYER BEFORE TOWING OR DRIVING YOUR RV**

# SYSTEM SETUP

## SETUP MENU

In stop status, press the SETUP button on the remote control and the TV screen will display a main menu. It includes General Setup, Audio Setup, Video Setup, Preference and Password Setup.

Operation steps:

1. Press the SETUP button to enter the setup menu.
2. Use the UP/DOWN direction buttons to select the item you want to set.
3. Press the OK button to enter the submenu.
4. Use the UP/DOWN direction button to select the item in submenu, and then press the RIGHT direction button enter it.
5. Use the UP/DOWN direction button to select the item you like and press the OK button to confirm. Press the LEFT directional navigation arrows to return to the submenu and then select "MAIN PAGE" to return to the main menu.
6. Press the SETUP button to exit from the setup menu.

◆ Preference will be only effective in stop status.

## GENERAL SETUP

The general setup is shown as following:

### 1. TV Display

Supports Normal/PS, Normal/LB and Wide aspect ratios.

### 2. Angle Mark

Some chapters in some DVD discs include many different angles. If the angle mark is set to be "On", then there will be a multi-angle mark displaying on the screen when playing the contents with multi-angle. Here you can use ANGLE button to enjoy different angles. If the angle mark is set to be "Off", then there will be no angle mark on the screen.

### 3. OSD Language

There are English and Chinese for selection. You can select it according to your preference.

### 4. Captions

Some DVD discs have hidden captions. You can turn on or off the hidden captions by using this item.

## SYSTEM SETUP

### 5. Screen Saver

Choose "ON" and the unit will enter the mode of screen saver automatically if there has been no operation for a period of time.

### 6. Last Memory

This setting allows you to select 'On' or 'Off'. When you select 'On' and open the disc tray, the player will resume the movies and/or music to your last stop after the disc tray close again.

### AUDIO SETUP

#### 1. Speaker Setup

##### 1) Downmix

Selecting "LT/RT" in the 'Downmix' will alter the audio output into a mixed Dolby output. By selecting 'Stereo' in the 'Downmix' menu, the player will output a common stereo signal. By selecting 'V SURR' in the "Downmix" menu, the player will output virtual surround signal. By selecting 'Off', the player will alter the 5.1 CH audio outputs (now the setups of the center speaker and the rear speaker are effective).

##### 2) Front Speaker

You can select 'Large' or 'Small'.

##### 3) Center Speaker

When 'Downmix' is in 'Off' status, you can set 'Center Speaker' to be 'Large', 'Small' or 'Off'.

##### 4) Rear Speaker

When 'DOWNMIX' is in 'Off' status, you can set 'Rear Speaker' to be 'Large' 'Small' or 'Off'.

##### 5) Subwoofer

You can set it to be 'On' or 'Off'.

##### 6) Test Tone

When 'Downmix' is in 'Off' status and the disc is not loaded, this function is available.

##### 7) Dialog

When "Downmix" is in "LT/RT、Stereo", use this item to adjust the dialog volume.

##### 8) Post DRC

When 'Downmix' is not in 'Off' status, Post DRC can be done.

#### 2. SPDIF Setup

##### 1) SPDIF Output

You can select "SPDIF Off", "SPDIF / RAW" or "SPDIF / PCM". "SPDIF Off" indicates that the SPDIF signal output to amplifier is turned off. "SPDIF / RAW" indicates raw code is output to amplifier. "SPDIF / PCM" indicates PCM channel signal is output to speakers that has only two output channels.

##### 2) PCM Channel

When SPDIF / PCM is selected, you can select "SPDIF L/R", "SPDIF LS/RS" or "SPDIF C/LFE" for PCM channel." SPDIF L/R" indicates to select channel left/right; "SPDIF LS/RS" indicates to select surround left/right; "SPDIF C/LFE" indicates to select central or subwoofer channel.

## SYSTEM SETUP

### 3) LPCM Out

You can select "48K", "96K" or "192K".

### 3. Dolby Digital Setup

#### 1) Dual Mono

This function is used to set audio output: Stereo, L-Mono, R-Mono and Mix-Mono.

#### 2) Dynamic

The Dynamic Range Compression can be turned off by selecting 'Off' from the submenu, or set to full compression by selecting 'Full'. There are also intermediate levels of compression available for selection.

### 4. 3D Processing

#### PRO Logic II

Press PLAY button to activate setup selection mode and then press up/down direction button to select "On, Off, Auto". If the player is playing 2ch music, then the music will be output in 5ch virtual sound and the music can be played with multi-channel speaker. Selecting "Off", this function would not be available. If TITLE does not support this function and you use it, then the effect will be poor. You should set the PRO Logic II in "Auto".

### 5. HDCD

#### Filter

This setting allows you to select 'Off', 44.1K or 88.2k.

### VIDEO SETUP

#### 1) Video

You can select CVBS, YUV and RGB in it.

#### 2) Quality

- a. Sharpness
- b. Brightness
- c. Hue
- d. Saturation
- e. Luma Delay

## SYSTEM SETUP

### PREFERENCE

#### 1. TV Type

Different countries or areas have different TV systems. You can select relevant video systems according to the TV system in your area. If your TV is with multi-system, then it is suggested to set to be "Multi" which means the video system will be the same as the disc system.

#### 2. Audio

There are several audio languages in some DVD discs. If there is no specific prescript in the disc, then the set audio language will have the priority to be played first. "Others" can be selected according the contents of the disc.

#### 3. Subtitle

There are several subtitle languages in some DVD discs. If there is no specific prescript in the disc, then the set subtitle language will have the priority to be played first. "Others" can be selected according to the contents of the disc.

#### 4. Disc Menu

There are several multi-language signals in some DVD discs. If there is no specific prescript in the disc, then the set menu language will have the priority to be played first. "Others" can be selected according the contents of the disc.

#### 5. Parental

DVD discs with parental function are divided into several levels. You can select relevant level according to the disc and your desire.

#### 6. Default

Use this function to reset all the setting.

#### 7. Version

### PASSWORD SETUP

#### 1) Password Mode

You can select On or Off.

#### 2) Password (Change)

- a. Press number buttons to input the original password 136900.
- b. If you input an incorrect password, please input the original password again until the password can be corrected.
- c. Press number buttons to input the new password.
- d. Confirm the new password.

# TROUBLESHOOTING

| SYMPTOM  | CHECK TO VERIFY  |
|--|--|
| There is no sound.                                     | <ul style="list-style-type: none"> <li>-If the connection between DVD and TV or speakers is correct.</li> <li>-If TV or speakers work normally.</li> <li>-If TV is in mute status.</li> </ul>  |
| There is no picture.                                   | <ul style="list-style-type: none"> <li>-If the connection with TV or speakers is correct.</li> <li>-If TV has been turned on or in video status.</li> <li>- If the TV system does match that of DVD player. If it does, press PS button on remote control to shift.</li> </ul> |
| The player does not play.                              | <ul style="list-style-type: none"> <li>-If the disc is loaded upside down.</li> <li>-If the disc is dirty or warped.</li> </ul>  |
| The remote control does not work.                      | <ul style="list-style-type: none"> <li>-If there are obstructions between remote control and player.</li> <li>-If you point remote control at remote sensor.</li> <li>-If the batteries are weak.</li> <li>-If the batteries are inserted and polarity is correct.</li> </ul>  |
| Poor AV performance.                                   | <ul style="list-style-type: none"> <li>-If the disc is dirty, warped or damaged.</li> </ul>  |
| Cannot continue to play and play a section repeatedly. | <ul style="list-style-type: none"> <li>-If it is in A-B repeat status.</li> <li>  If so, press A-B button to cancel it.</li> <li>-If the disc is dirty or damaged.</li> <li>  If so, clean it or search by time to skip the section.</li> </ul>                                |
| Poor radio effects.                                    | <ul style="list-style-type: none"> <li>-If antenna connection is correct.</li> <li>-If antenna is away from system or other subassemblies.</li> <li>-If antenna is fully extended.</li> </ul>  |

## Others:

Static or other external interference may cause abnormality of the player. In this circumstance, unplug the power-supply cord from the outlet and plug it in again to reset the player so that the normal operation will be resumed. If you are still having problems, then please disconnect the power and consult your service center or a qualified technician.