

# quick start guide

## 5.1CH Digital Home Theater System HT-Z210

- 1 disc playback
- 2 remote control functions
- 3 connecting the speakers
- 4 connecting the video out to your tv
- 5 connecting audio from external components
- 6 listening to radio

### 1 disc playback

1. Press the **OPEN/CLOSE** (⏏) button to open the disc tray.
2. Load a disc.
  - Place a disc gently into the tray with the disc's label facing up.
3. Close the compartment by pressing the **OPEN/CLOSE** (⏏) button again.
  - Playback starts automatically.




Thank you for purchasing this Samsung 5.1CH Digital Home Theater System. We have manufactured this product to provide you with many hours of Audio/Video Entertainment. This "QUICK START GUIDE" guide has been included to get you up and running in the least amount of time as possible.

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Samsung Electronics America, Inc.  
1-800-SAMSUNG (7267864)  
www.samsung.com/us



### 2 remote control functions

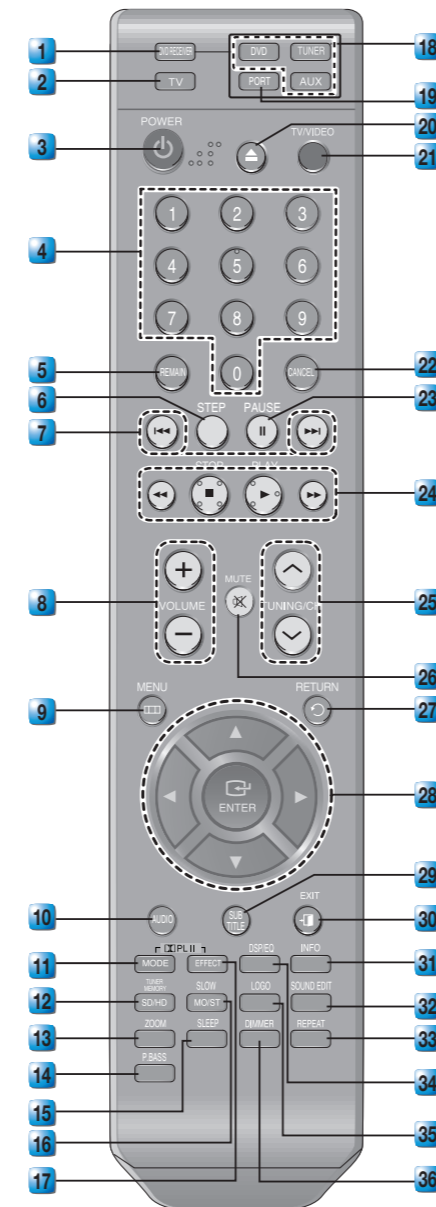

- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1</b> DVD RECEIVER button<br/>You can operate your DVD receiver with the remote control.</p> <p><b>2</b> TV button<br/>You can operate your Samsung TV with the remote control.</p> <p><b>3</b> POWER button<br/>Press to turn the Home Theater or your Samsung TV On/Off.</p> <p><b>4</b> Number (0-9) buttons</p> <p><b>5</b> REMAIN button<br/>You can check the elapsed or remaining time on a disc.</p> <p><b>6</b> STEP button<br/>The picture moves forward one frame each time the button is pressed during playback.</p> <p><b>7</b> Tuning Preset/CD Skip buttons<br/>Tune in radio broadcasting, skip the song/scene.</p> <p><b>8</b> VOLUME button<br/>Press + to raise the volume and - to lower it.</p> <p><b>9</b> MENU button<br/>Press to see the menu.</p> <p><b>10</b> AUDIO button<br/>Selects the Disc's Audio language.</p> <p><b>11</b> <b>PL II MODE</b> button<br/>Allows you to select six different Dolby Pro Logic II audio modes.</p> <p><b>12</b> TUNER MEMORY, SD/HD button<br/>Press to memorize radio frequencies. Press to select SD or HD mode.</p> <p><b>13</b> ZOOM button<br/>Enlarges the picture during disc playback.</p> <p><b>14</b> P.BASS button<br/>Provides more powerful bass.</p> <p><b>15</b> SLEEP button<br/>Press to set the sleep off time.</p> <p><b>16</b> SLOW button<br/>Selects three different slow motion playback speeds.</p> <p><b>17</b> MO/ST button<br/>You can listen to radio broadcasts in MONO or STEREO.</p> <p><b>18</b> <b>PL II EFFECT</b> button<br/>Adjusts the Dolby Pro Logic II audio effect.</p> <p><b>19</b> DVD button<br/>Press to select the DVD mode.</p> <p><b>20</b> TUNER button<br/>Press to listen to radio broadcasting.</p> <p><b>21</b> AUX button<br/>Press to select external audio input.</p> | <p><b>18</b> PORT button<br/>USB port selection</p> <p><b>19</b> OPEN/CLOSE button</p> <p><b>20</b> TV/VIDEO button<br/>Press TV/VIDEO button to select the Video input on your TV.</p> <p><b>21</b> CANCEL button<br/>Used to cancel a wrong entry.</p> <p><b>22</b> PAUSE button<br/>Press to pause.</p> <p><b>23</b> PLAY button<br/>Press to play.</p> <p><b>24</b> STOP button<br/>Press to stop.</p> <p><b>25</b> SEARCH buttons<br/>Fast backward or forward through a song/scene.</p> <p><b>26</b> TUNING/CH button<br/>Press to select the channel or to tune in radio broadcasting.</p> <p><b>27</b> MUTE button<br/>Press to mute the sound.</p> <p><b>28</b> RETURN button<br/>Press to return to the previous menu.</p> <p><b>29</b> Cursor/ENTER button<br/>Used to select or move up/down, left/right when setting the menu function.</p> <p><b>30</b> SUBTITLE button<br/>Selects the disc subtitle language.</p> <p><b>31</b> EXIT button<br/>Press to exit the setup screen.</p> <p><b>32</b> INFO button<br/>View or change disc playback information on screen.</p> <p><b>33</b> SOUND EDIT button<br/>Adjust the speaker sound settings and level.</p> <p><b>34</b> REPEAT button<br/>Repeat playback of a chapter, title, group or track.</p> <p><b>35</b> DSP/EQ button<br/>Digital Signal Processor/Equalizer functions in STEREO mode.</p> <p><b>36</b> LOGO button<br/>You can make your own TV wallpaper (screen saver).</p> <p><b>37</b> DIMMER button<br/>The front display brightness will be adjusted.</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### 3 connecting the speakers


1. Press down the terminal tab on the back of the speaker.
2. Insert the black wire into the black terminal (-) and the red wire into the red (+) terminal, and then release the tab.
3. Connect the connecting plugs to the back of the Home Theater.
  - Make sure the colors of the speaker terminals match the colors of the connecting plugs.

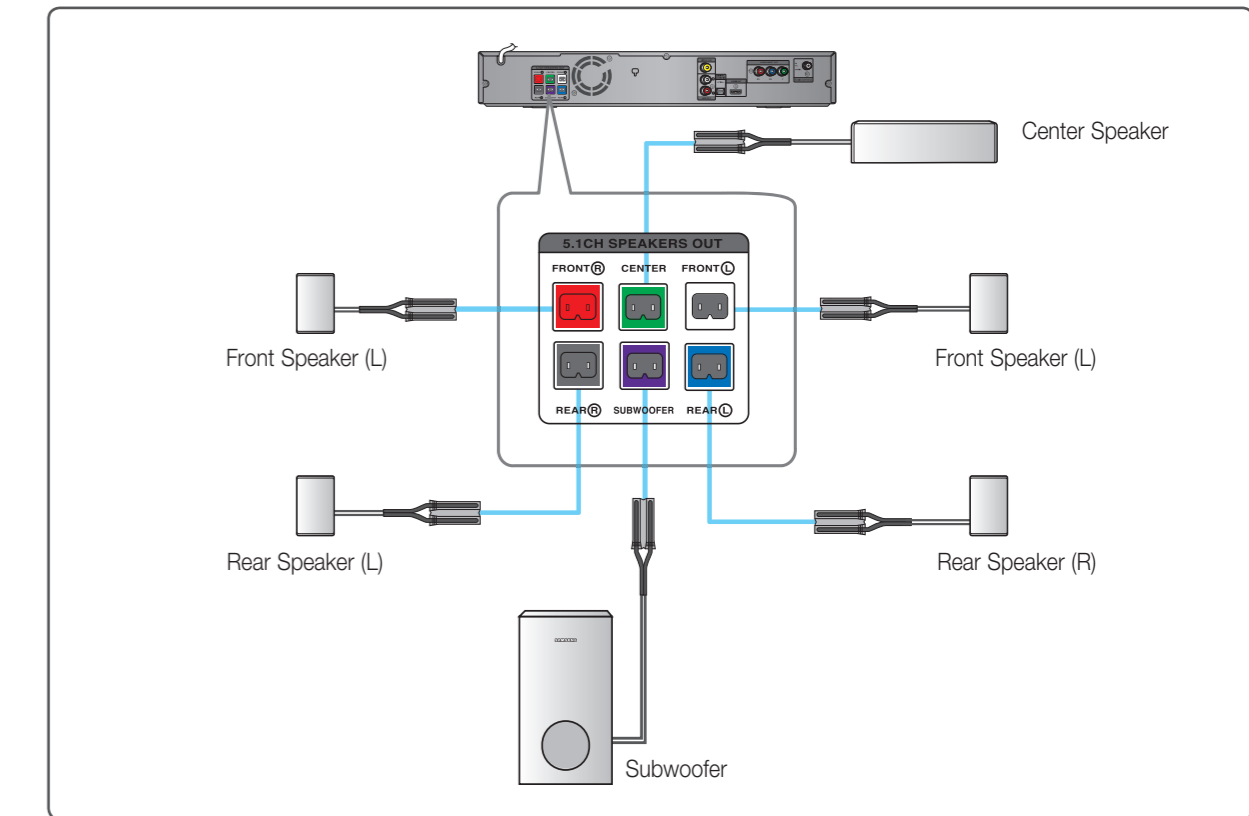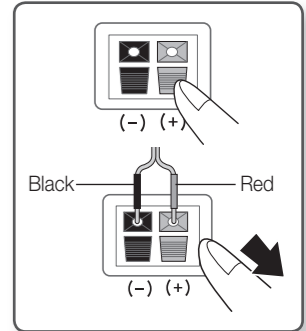

- ! Do not let children play with or near the speakers. They could get hurt if a speaker falls.
  - When connecting the speaker wires to the speakers, make sure that the polarity (+/-) is correct.
  - Keep the subwoofer speaker out of reach of children so as to prevent children from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
  - Do not hang the subwoofer on a wall through the duct (hole).
- ☞ If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

## 4 connecting the video out to your tv

Choose one of the three methods for connecting to a TV.

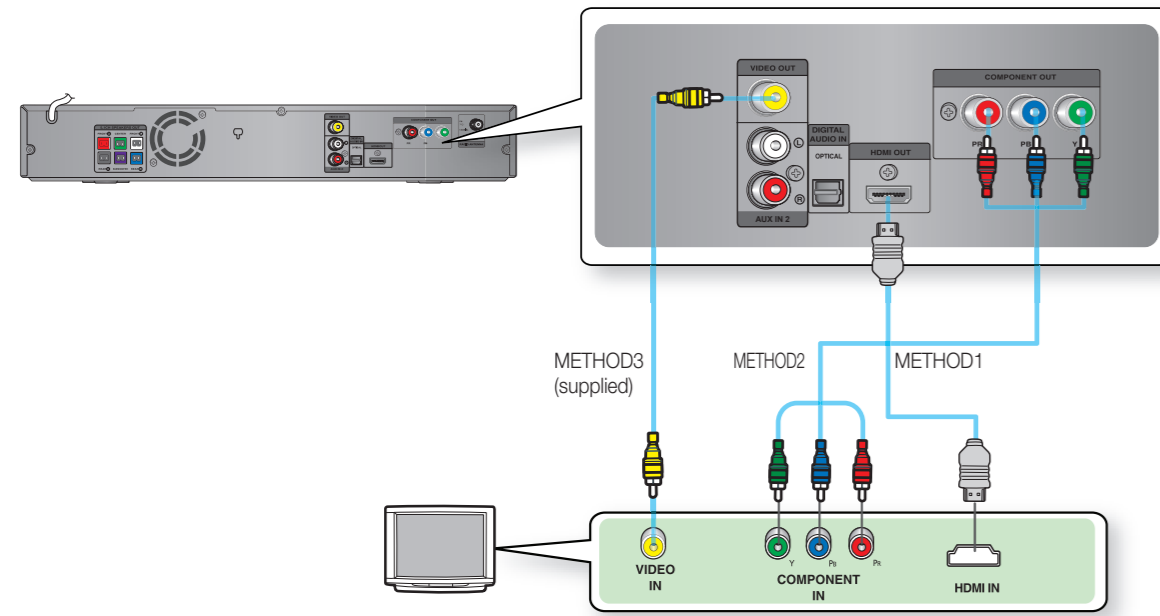

### METHOD 1 : HDMI

Connect the HDMI cable from the HDMI OUT jack on the back of the DVD Home Theater to the HDMI IN jack on your TV.

### METHOD 2 : Component Video

If your television is equipped with Component Video inputs, connect a component video cable(not supplied) from the Component Video Output (Pr, Pb and Y) Connectors on the back of the main unit to the Component Video Input Connectors on your TV.

### METHOD 3 : Composite Video

Connect the supplied video cable from the VIDEO OUT jack on the back of the main unit to the VIDEO IN jack on your TV.


- Resolutions available for the HDMI output are 480p, 720p, 1080i/1080p.
- This product operates in Interlace scan mode (480i) for Component Output.
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your Home theater. See your TV owner's manual for more information on how to select the TV's Video Input source.
- If you use an HDMI cable to connect a Samsung TV to the main unit, you can operate the Home Theater using the TV's remote control. (This is only available with SAMSUNG TVs that support Anynet+(HDMI-CEC).)
- Please check the *Anynet+* logo (If your TV has an *Anynet+* logo, then it supports Anynet+ function.)

## 5 connecting audio from external components

### AUX1 : Connecting an External Component/MP3 player

Components such as an MP3 Player.


- Connect AUX IN 1 (Audio) on the Home Theater to the Audio Out of the external component/MP3 player.
- Press the **AUX** button on the remote control to select **AUX1** input.
  - You can also use the **FUNCTION** button on the main unit.The mode switches as follows :  
**DVD/CD → D.IN → AUX 1 → AUX 2 → USB → FM.**

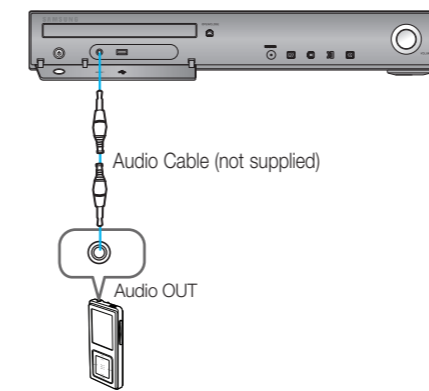

### AUX2 : Connecting an External Analog Component

Analog signal components such as a VCR.

- Connect **AUX IN 2** (Audio) on the Home Theater to the Audio Out of the external analog component.
  - Be sure to match connector colors.
- Press the **AUX** button on the remote control to select **AUX 2** input.
  - You can also use the **FUNCTION** button on the main unit.The mode switches as follows :  
**DVD/CD → D.IN → AUX 1 → AUX 2 → USB → FM.**

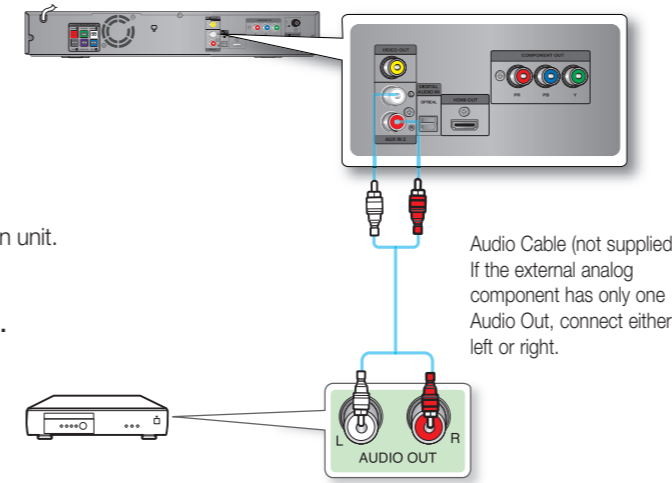


- You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.

### OPTICAL : Connecting an External Digital Component

Digital signal components such as a Cable Box/Satellite receiver (Set-Top Box).


- Connect the Digital Input (OPTICAL) on the Home Theater to the Digital Output of the external digital component.
- Press the **AUX** button on the remote control to select **DIGITAL IN**.
  - You can also use the **FUNCTION** button on the main unit.The mode switches as follows :  
**DVD/CD → D.IN → AUX 1 → AUX 2 → USB → FM.**

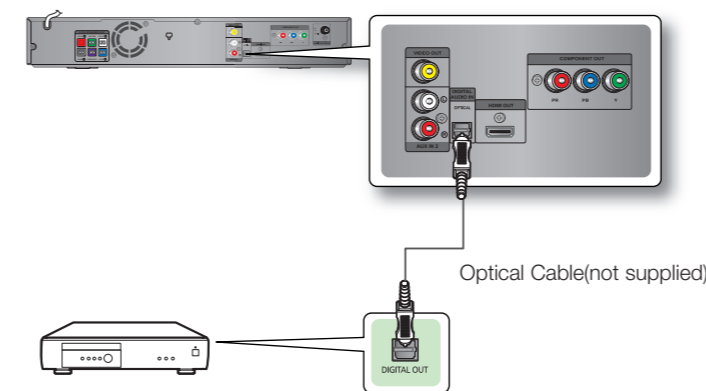

## 6 listening to radio

### Connecting the FM Antenna

- Connect the FM antenna supplied to the FM 75Ω COAXIAL Jack.
- Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

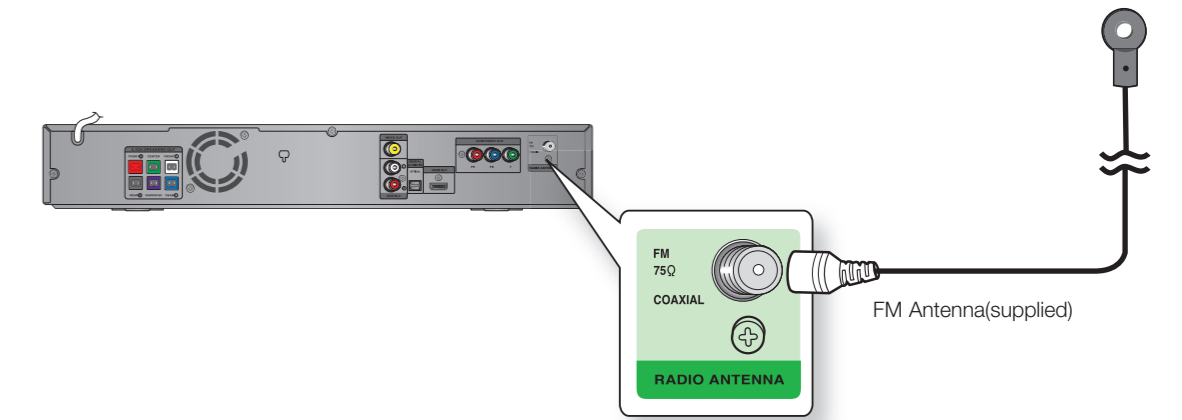

- This unit does not receive AM broadcasts.

### Listening to Radio

#### Remote Control

- Press the **TUNER** button to select the FM band.
- Tune in to the desired station.
  - Automatic Tuning 1** : When the **◀▶** button is pressed, a preset broadcast station is selected.
  - Automatic Tuning 2** : Press and hold the **▲▼** button to automatically search for active broadcasting stations.
  - Manual Tuning** : Briefly press the **▲▼** button to increase or decrease the frequency incrementally.

#### Main Unit

- Press the **FUNCTION** button to select the FM band.
- Select a broadcast station.
  - Automatic Tuning 1** : Press the **STOP** button to select **PRESET** and then press the **◀▶** button to select the preset station.
  - Automatic Tuning 2** : Press the **STOP** button to select **MANUAL** and then press and hold the **◀▶** button to automatically search the band.
  - Manual Tuning** : Press the **STOP** button to select **MANUAL** and then briefly press the **◀▶** button to tune in to a lower or higher frequency.