How to install and replace the iRV31 to the iRV32 power harness.

- 1. The original iRV31 power harness only has 2 lead wires, Red for battery and black for ground please see attached for picture
- 2. The iRV32 has 4 lead wires, red for ignition, yellow for battery, black for ground and optional blue for external amplifier turn on. Please see attached for picture.
- 3. When replacing the current iRV31 harness simply cut the red wire from the harness.
- 4. Take the new iRV32 harness by combining the red and yellow together and connecting it to the original iRV31 red wire.
- 5. Cut the original black wire from the iRV31 and combine it with the new iRV32 black wire.
- 6. Tape or cut the blue wire and do not use. (option for external amplification)



