

## Door Swing Change

To change the swing of the door on the BDE 280 Everchill 12v Refrigerator, you must move the hardware from one side of the doors to the other and make a small modification to the bottom hinge.

First, remove the protective cap over the top hinge of the refrigerator and carefully remove the screws holding the top hinge to the refer. Ensure that you do not let the freezer door fall off once you remove the bolts holding the hinge on. Once the top door hinge is removed, remove the door and set aside. The top hinge then must be moved to the opposite side of the refer and reinstalled in a later step.



Next carefully remove the middle hinge bracket from the refer. Ensure that when you remove the two bolts from the middle hinge that you do not let the fridge door fall and get damaged. Ensure that you do not lose either of the plastic washers on the hinges as they help keep the door opening and closing smoothly and they ensure proper spacing of the door. Remove fridge door and set aside.



Next remove the travel safety lock from the middle section opposite of the middle hinge you just removed.



Next remove the bottom hinge from the refrigerator and also remove the two leveling feet from the bottom of the refrigerator. Once the bottom hinge is removed, before you can reinstall it on the other side you must remove and swap the posts that hold the door to the bottom bracket with a flat head screwdriver and a socket/wrench on the bottom. One is longer which is the post the door sets on and one is shorter which is what the soft close post. Those are the two posts which must be swapped. Once the hinge posts are switched you may reinstall the hinge and leveling feet.



On the bottom of the refrigerator door there is a plastic soft close insert that must be taken off of the door, flipped over and moved to the other recessed pocket on the other side of the door. Uninstall by removing one screw and insert. Reinstall on the opposite side of the door in the recessed pocket for the insert and secure with the same screw you removed from the other side.



Once you have reinstalled the bottom hinge and moved the insert to the correct side, set the refer door back on carefully and close the door so it will stay in place.

Reinstall the middle hinge and plastic washers.

Upon reinstalling the middle hinge, you must remove the soft close insert that is attached to the freezer door bottom by removing single screw holding it in place. Once the insert is removed, take the insert from your hardware that comes inside of the back with your owner's manual located in the crisper drawer in the fridge. There is another insert inside of that packet which is for the opposite side of the door. These inserts are not interchangeable, and you must switch the insert for proper door operation.



Once you have reinstalled the correct insert and you have reinstalled the middle hinge, set the freezer door on the hinge. Ensure that you do not let it fall off while the top hinge is not reinstalled.

Next, reinstall the top hinge to the fridge and you are done.