

Controls

Use two “AA” size batteries. The batteries may last approximately one year depending on how much the remote control is used. For best performance, it is recommended that batteries should be replaced on a yearly basis, or when the remote operation becomes erratic. Do not mix old and new batteries or different types.

BATTERY PRECAUTIONS

These precautions should be followed when using batteries in this device:

- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer’s directions.)
- Please use caution when inserting batteries to avoid battery damage. If the spring terminal in the remote control remains in contact with a side of a damaged battery it can cause a short circuit. Never use damaged batteries as they can become very hot and are dangerous.
- Dispose of batteries in an environmentally friendly way. Certain regions may regulate the disposal of batteries. Please consult your local authority.

TV Controls.
The control buttons on the TV and their functions.

VOL +

VOL -

CH +

CH -

MENU

SOURCE

POWER

Volume UP

Volume DOWN

Channel UP

Channel DOWN

Enters the MAIN MENU

Selects the TV Sets Input Source

Turns the TV Set ON & OFF

*Please note that the configuration of the controls may vary from model to model.

Controls

Unimote Remote Control.
The Furrion Unismart™ remote control’s functions.



The image shows a black Furrion Unimote Remote Control. It has a standard numeric keypad (0-9), a power button, and various function buttons like TV, STEREO, P.MODE, S.MODE, ASPECT, DISPLAY, INFO OSD, F.LIST, EPG, FAV, C.LIST, MENU, OK, VOL, CH, and a navigation pad. A red box highlights the top section (POWER, TV, STEREO, 1-9, 0/TA, P.MODE, S.MODE, ASPECT, DISPLAY, INFO OSD, F.LIST, EPG, FAV, C.LIST, MENU, OK, VOL, CH). Another red box highlights the bottom section (MTS AUDIO, SLEEP, CC, SETUP, RPT, RDM, A-B, PROG, ZOOM, SEARCH, PBC, SUBT, SEL, LOCK, SLOW, ST+ ANGLE, EQ, and the FURRION logo).

POWER

Turns the TV On & Off

TV

Switches to TV mode

1 - 0/TA

Numerical Buttons

Enters numbers and selects channels

PTV

Toggles between single & double digit input

PTV

Toggles between the current and previous channel

P.MODE

Picture Mode

Cycles through picture modes

S.MODE

Sound Mode

Cycles through sound modes

ASPECT

Aspect Ratio

Cycles through available display aspect ratios

DISPLAY

Display

Toggles on screen on the selected source On & Off

INFO OSD

INFO/OSD

Displays information on the selected TV channel

AUTO

Auto

Automatically adjusts the picture in PC mode

MENU

Menu

Enters the main menu

F.LIST

F.List

Displays the favorites list

C.LIST

C.List

Displays the channel list

FAV

FAV

Adds items to the favorites list

EPG

EPG

Displays the program guide

SOURCE

Source

Cycles through input sources

EXIT

Exit

Exits the current menu

Navigation Buttons

OK

Confirms selections

Mute

Mute

Toggles audio On or Off

VOL

Volume

Increases/ decreases volume

CH

Channel

Channel Up/Down

MTS AUDIO

MTS/ AUDIO

Cycles through MTS sound modes

SLEEP

SLEEP

Sets the sleep timer

CC

CC Closed Caption

Toggles Closed Captions On & Off

FIREPLACE

TV

TV

Selects Furrion Fireplace remote control functions

Please refer to your Furrion Fireplace manual for more information

FURRION9

Controls

The Furrion Unismart™ remote control allows control of other Furrion systems



Button Functions when the remote control is in Stereo Mode

POWER Turns the Entertainment System On & Off

1 - 0/TA Numerical Buttons Enters numbers and selects channels

INFO/OSD Displays DVD playback status

Volume Increases/ decreases volume

Previous/ Next: Press during playback to select the previous or next track/ chapter. Press and hold to fastforward or rewind. Automatic or Manual tuning in radio mode

Step Press to forward frame by frame during DVD/ VCD playback. Dial or Accept a call (when the system is connected to a cell phone)

AM/FM Selects AM/FM/WB Radio

AUX/ ARC Selects AUX/ ARC Mode

CLOCK Displays and sets the time

RDM Toggles random playback-mode on & off.

ZOOM Press to enlarge screen images.

EQ Toggles the sound mode Cinema, Rock, Classic & Flat.

SEARCH/ GOTO Jumps to a specific time on a DVD/VCD/MP3/ WMA or CD.

STEREO Switches to Stereo mode

Navigation Buttons OK Confirms selections

Play/ Pause Starts, Pauses or restarts Playback

Mute Toggles audio On or Off

Stop Stops playback

Eject Ejects DVD/ CD

APS Press to scan radio stations: A brief press searches through each stored station. Press & hold to scan and store the 6 strongest stations. End or Reject a call (when the system is connected to a cell phone)

DVD/USB Selects DVD/USB

AV Selects AV Mode

SETUP Enters the Setup menu for the entertainment system

A-B Press to start the A-B repeat function (playback loop of a segment of track)

ST/ ANGLE Toggles Stereo & Mono sound/ switches viewing angles on compatible media.

SEL Toggles between Volume, Bass, Treble & Balance; Hours & Minutes for adjusting.

SUBT Press to display subtitles on compatible media. Repeatedly press to cycle through subtitle options.

RPT Press to select repeat-playback modes.

PROG Used to start the programmed playback function.

TITLE/ PBC Displays DVD/ VCD Title lists/ Toggles PBC (Play Back Control) on & off.

LOC/ SLOW Toggles radio reception strength/ Press to start slow motion playback.

Set Up

Using the Menu

Press **TV** to select TV Mode and then **POWER** to turn on the TV. Press **MENU** to enter the menu.

Use the **Navigation Buttons** to navigate the menus and to select settings.

Press **OK** to confirm selections & setting and enter sub menus Press **EXIT** at any time to exit the menu.

Setup Wizard

The first time the TV is turned on, the SETUP WIZARD will start. The wizard will assist in configuring the TV for use. and scan for available channels.

1 Use **Navigation Buttons** to highlight **TV Location**, then press **Navigation Buttons** to select **Home Mode** or **Retail Mode**.

Press **Navigation Buttons** to highlight **Go to next step**, press **OK** or **Navigation Buttons** to go to the next step.



2 Use **Navigation Buttons** to highlight **Menu Language**, then press **Navigation Buttons** to select the desired language.

Press **Navigation Buttons** to highlight **Go to next step**, press **OK** or **Navigation Buttons** to go to the next step.



3 Use **Navigation Buttons** to highlight **Time Zone** then press **Navigation Buttons** to select the desired timezone.

Use **Navigation Buttons** to highlight **Daylight Saving Time** then press **Navigation Buttons** to select **On** or **Off**.

Use **Navigation Buttons** to highlight **Time Format** then press **Navigation Buttons** to select **12-hour** or **24-hour**.

Press **Navigation Buttons** to highlight **Go to next step**, press **OK** or **Navigation Buttons** to go to the next step.

