




SYNCING THE TV LIFT REMOTE

1

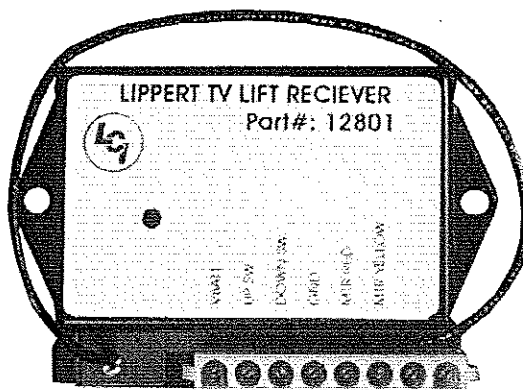

To sync a new TV Lift Remote to the receiver perform the following steps:

1. The manual reset button (1) is inside the hole located in the top of the TV Lift Receiver. The button can be depressed using a paperclip or small allen wrench. Depress the button with the paper clip or allen wrench and hold the button down (2).
2. While the button on the receiver is depressed, press any button on the replacement remote (3).
3. Release the receiver button.
4. The TV Lift Remote is now ready for use.

