

Quick Setup Guide

SERIES **4**
450

Congratulations on the purchase of your new Samsung TV. Read this setup guide to get your TV up and running quickly.

STOP

Please do not return this unit. If you have problems operating your TV call:
1-800-SAMSUNG (1-800-726-7864)
For web support please visit:
www.samsung.com/support

1-800-SAMSUNG (1-800-726-7864)

Samsung Electronics America, Inc.

105 Challenger Road Ridgefield Park, NJ 07660-0511

Samsung Electronics Canada Inc.

55 Standish Court Mississauga, Ontario L5R 4B2

Call Center hours of operation: Mon-Sun, 9:00 AM -12 AM EST.

 
To register this product, visit : www.samsung.com/register.

Getting Started

Step 1 : Install the Stand

Follow the steps below to connect the TV to the stand.


- Make sure to distinguish between the front and back of the Stand and Guide Stand when assembling them.
- Make sure that at least two people lift and move the LCD TV.
- Stand the product up and fasten the screws. If you fasten the screws with the LCD TV placed down, it may lean to one side.

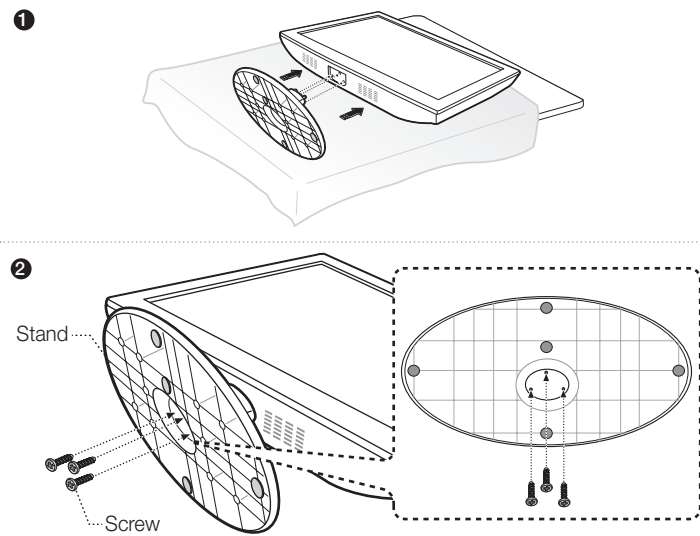


Step 2 : Install the Batteries into the Remote

To install batteries into your remote control, follow these steps:

 - Lift the cover on the back of the remote upward as shown in the figure to the right.
- Install two AAA batteries.
 - Make sure to match the + and - ends of the batteries to the diagram in the battery compartment.
- Replace the cover.

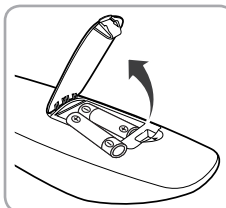

 
Step 3 : Connect Power and Antenna or Cable

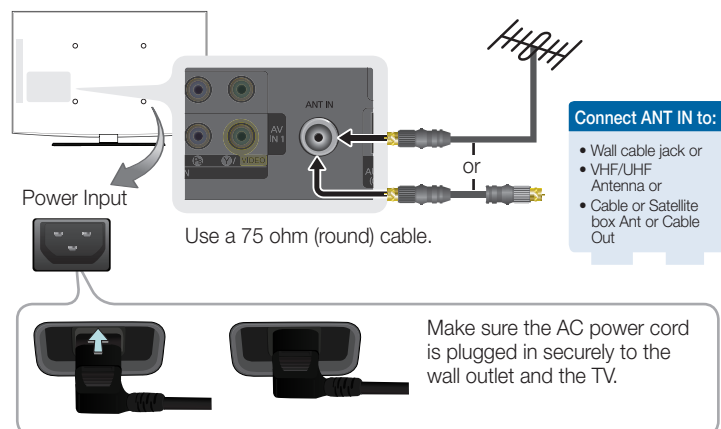

Step 4 : Connect External Devices

Connecting an AV device (Blu-ray player, cable/satellite box, etc.)

 For the very best picture quality, select HD signal sources and use HDMI cables and connections. Note that many digital cable programs are not in HD. Check with your video provider to ensure you are receiving HD signals.

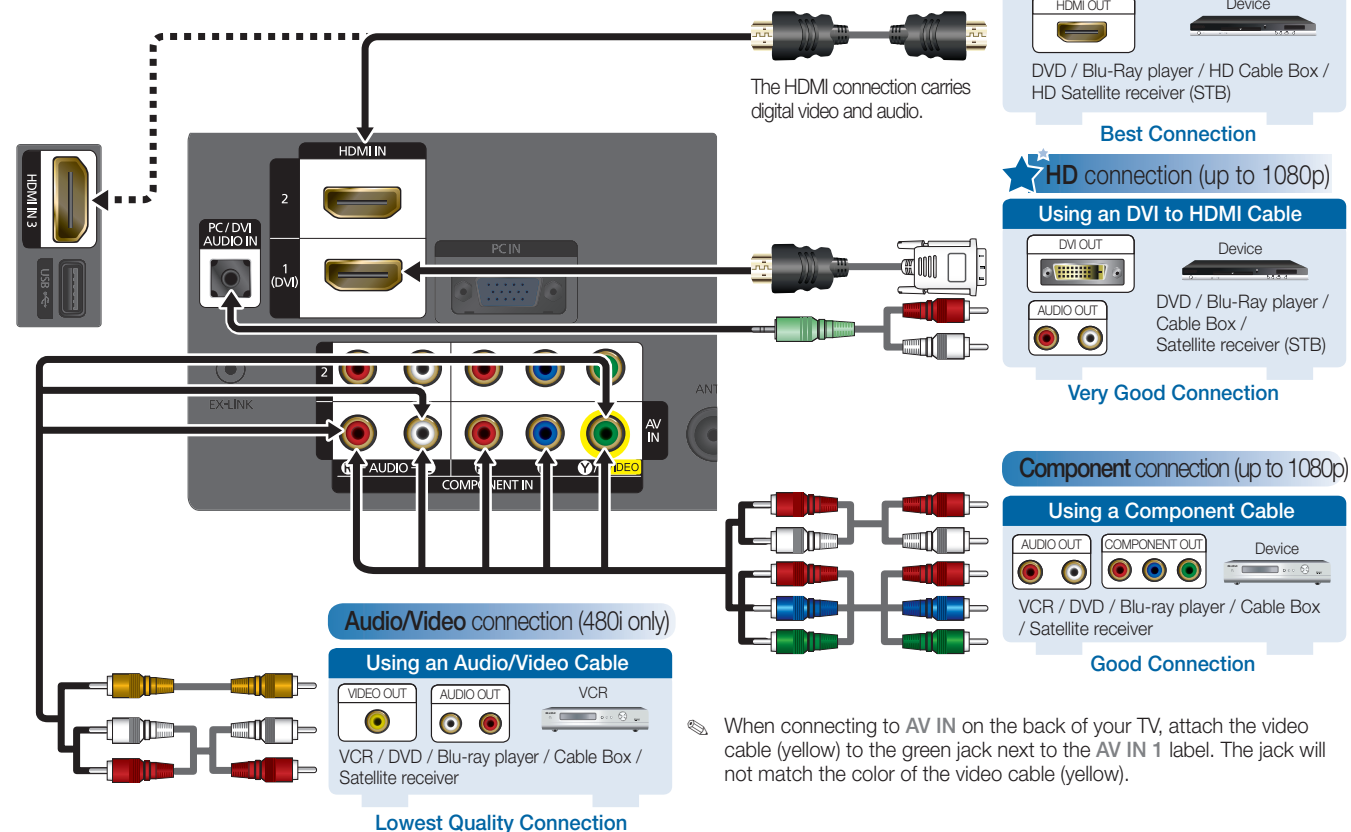

Remote Control Buttons and Functions:

This is a special remote control for the visually impaired persons and has Braille points on the Power, Channel, Volume buttons.

Turns the TV on and off.

Press number buttons for direct access to channels.

Press to select additional digital channels broadcast by the same station. For example, to select channel 54-3, press 54, press -, and then press 3.

Adjusts the volume.

Displays the channel list on the screen.

View the [Media Play](#).

Quickly selects frequently used functions.

Use these buttons to select On Screen Menu items and change menu settings.

Return to the previous menu.

Colored buttons for use in the [Channel List](#), [Media Play](#) menu, etc.

Use these buttons in the [Media Play](#) and [Anynet+](#) modes.

(): Controls recording on Samsung recorders with the Anynet+ feature)

Press to switch between the sources (Blu-ray player, cable box, DVD player, etc.) connected to your TV.

Return to the previous channel.

Cut off the sound temporarily.

Change channels.

Displays the main on-screen menu.

Displays Favorite Channel Lists on the screen.

Press to display information on the TV screen.

Exit the menu.

S.MODE: Selects the sound mode.

SLEEP: Setting the Sleep Timer.

MTS: Press to choose stereo, mono or Separate Audio Program (SAP broadcast).

P.MODE: Selects picture mode.

P.SIZE: Choose the picture size.

CC: Controls the caption decoder.

Changing the Picture Mode

Your TV has three preset Picture Modes with factory adjusted settings, each designed to give you an excellent picture under specific conditions.

The Picture Modes are listed and described in the table below:

Mode	Description
Dynamic	Brightens picture. For a vibrant, enhanced image in brightly lit or sunny room.
Standard	For a bright, detailed picture in a normally lit room.
Movie	For a studio quality cinema picture in a dimly lit or dark room.

To change the Picture Mode, follow these steps:

- With the TV on, press the **TOOLS** button on your remote. The **Tools** menu appears.
- Using the **▲** or **▼** on your remote, select **Picture mode**.
- On the **Picture Mode** menu, use the **◀** or **▶** on your remote to select the **Picture Mode** you want.
- Press the **EXIT** button to exit the menu.

Selecting a Source

To watch a movie on your Blu-ray player or watch your favorite TV show, you must select the correct source. A source is a device, such as a Blu-ray/DVD player, a cable/satellite box, antenna or a cable TV input. Sources can be connected to your TV through the HDMI, DVI, Component, Composite, or D-sub connections, or through the Antenna or Cable In connections.

To view the signal from a source connected to the HDMI, DVI, Component, Composite, or D-sub jack, press the **SOURCE** button on your remote. Each time you press the **SOURCE** button, you change to a different source.

Viewing the On Screen Menus

To view the On Screen Menus, follow these steps:

- With the power on, press the **MENU** button on your remote. The main menu appears. The menu's left side has the following menu options: **Picture, Sound, Channel, Setup, Input, Application, and Support**.
- Press the **▲** or **▼** button on your remote to select a menu option, and then press the **ENTER** button.
- When done using the menu, press the **EXIT** button on your remote to exit.

Changing Channels and Adjusting the Volume

Volume

 
Adjust the volume by pressing the **-VOL+** button on the remote.

Channel

Change the channels by pressing the **▼CH▲** button on the remote.

If your TV is attached to a cable or satellite box, you change the channel using the box's remote.


You can also change the channels by pressing the **▼CH▲** buttons on the front panel of your TV and adjust the volume by pressing the **-VOL+** buttons.

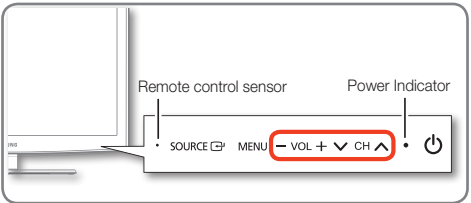

Setting the Clock

Before you can use your TV's On/Off Timer, you must set the clock. To set the clock, follow these steps:

 
- Turn on your TV.
- Using your remote, press the **MENU** button on your remote. Then, select **Setup** → **Time**.
- Select **Clock Mode**, and then press the **ENTER** button. Set Clock Mode to Manual.
 - Select **Auto** if you have a digital channel in your area and are not using a cable/sat box.
- Select **Clock Set**, and then press the **ENTER** button. The Clock Set screen appears.
- Using the number buttons on your remote, enter the **Month, Day, Year, Hour,** and **Minute**. Use the **◀** or **▶** button to move between entry fields.
- Press the **RETURN** button on your remote when done.

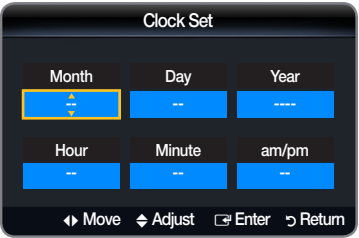

Connecting a USB Device for Media Play

You can enjoy photo, music, and movie files stored on a USB device by connecting it to the TV and using the Media Play feature. To connect a USB device for Media Play, follow these steps:

 - Turn on your TV.
- Connect a USB device containing photo, music and/or movie files to the USB jack on the side of the TV.
- When the Application selection screen appears, press the **ENTER** button on your remote to select **Media Play (USB)**.

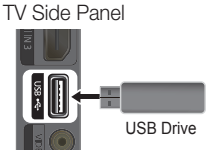

BN68-02664A-01