 


VIVOLUXE

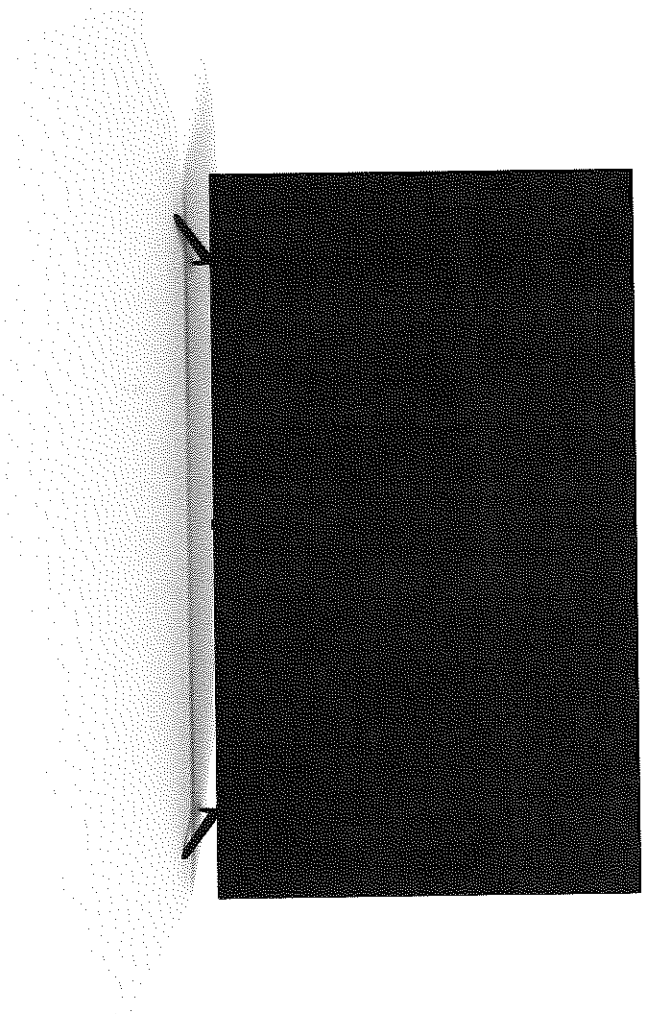

USER MANUAL

Model Size:VL-65VUHGE

LED TELEVISION STANDINSTALLATION GUIDE

1 Please find the following parts that are included in the box.

Stands 2 pcs




Screws 4 pcs




2 Place the TV face down on a soft and flat surface (blanket, foam, cloth, etc), to prevent any damage to the TV.

 3 Attach the stands to the bottom of the TV, and secure them by using the supplied screws (4pcs)

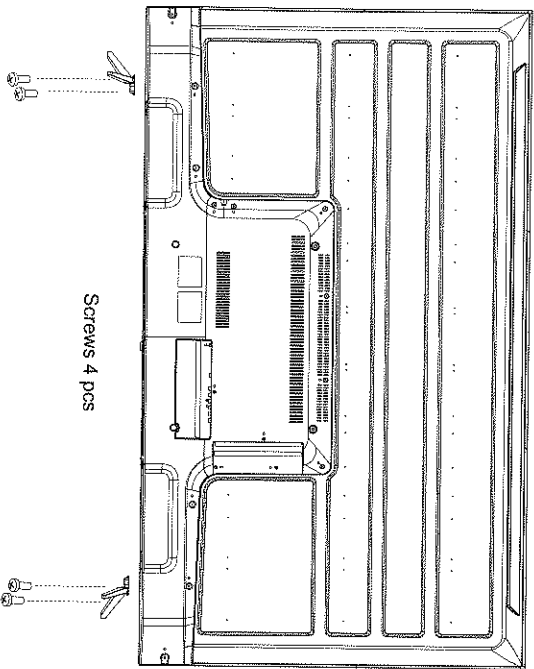

(Bottom view)

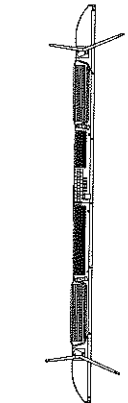 


TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charging for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	• This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	• Check if the TV's AC power cord is plugged into the outlet. • Unplugging the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.
No picture	• Check antenna connections at the rear of the TV to see if it is properly connected to the TV. • Possible broadcast station trouble. Try another channel. • Adjust the contrast and brightness settings. • Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	• Increase the volume level by pressing the VOL+ button on the remote control or on the TV side control panel. • Press the MUTE button on the remote control to ensure mute is off.
Good sound but poor color	• Adjust the contrast, color and brightness settings.
Poor picture	• Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.
Snowy picture and noise	• Check the antenna connection.
Horizontal dotted line	• This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.
Television not responding to remote control	• Check whether the batteries are working. Replace if necessary. • Clean the remote control sensor lens on the TV. • You can still use the buttons on the side of your TV.
Pixels(dots) that are always dark or always lit	• Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. • These types of occurrences are inherent to this type of product and do not constitute a defective product.

IMPORTANT SAFETY INSTRUCTIONS

 - 1) Read these instructions.
- 2) Keep these instructions.
- 3) Follow all warnings.
- 4) Do not use this apparatus near water.
- 5) Clean only with dry cloth.
- 6) Do not block any ventilation openings. Install in accordance with the instructions.
- 7) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 9) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Personnel Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 14) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 15) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 16) Attention should be drawn to the environmental aspects of battery disposal.
- 17) The use of apparatus in moderate climate.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids such as vases, shall be placed on the apparatus.

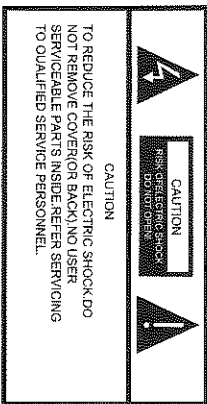

The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: Replacement of a battery with an incorrect type may defeat a safeguard; disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery may result in an explosion. Leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas. The battery may become very hot and the leakage of flammable liquid or gas may result in an explosion or the leakage of flammable liquid or gas. CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type!

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical/replacement parts.

 
This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

HDMI™ the terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby Audio Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

- 1) Lire les instructions.
- 2) Gardez les instructions.
- 3) Considérez tous les avertissements.
- 4) Suivez toutes les instructions.
- 5) N'utilisez pas cet appareil près de l'eau.
- 6) Nettoyez uniquement avec du linge sec.
- 7) Ne bloquez pas les ouvertures de ventilation, n'installez conformément aux instructions.
- 8) N'installez pas près de sources de chaleur telles que les rayonnements, les registres de chaleur, les poêles ou tout autre appareil (y compris les amplificateurs) qui produisent chaleur.
- 9) N'endommagez pas le but de sécurité de la prise polarisée. Si la prise fournie ne rentre pas dans votre prise, consultez un électricien pour le remplacement.
- 10) Protégez le cordon d'alimentation contre le fait d'être marché ou pincé. Particulièrement aux prises, réceptacles de commodité, et le point où ils sortent de l'appareil.
- 11) N'utilisez que les pièces jointes/accessoires spécifiés par le fabricant.
- 12) Débranchez cet appareil pendant les orages ou ne pas faire usage de pendant une longue période de temps.
- 13) Contact pour l'entretien avec le personnel de service qualifié. Entretien est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce soit, comme le cordon d'alimentation ou le bouchon est endommagé, le liquide a été renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou a été chuté.
- 14) La prise principale est utilisée comme to déconnecter l'appareil, il doit encore rester électrifié.
- 15) Les ouvertures de ventilation ne doivent pas être recouvertes d'articles, tels que journaux, nappes, rideaux, etc.
- 16) Évitez les sources de chaleur directes, telles que les bougies allumées, doivent être placées sur l'appareil.
- 17) La procédure de l'élimination des batteries doit être exercée dans une méthode respectueuse de l'environnement.
- 18) L'utilisation d'appareils dans un climat modéré.
- 19) L'appareil ne doit pas être exposé à des gouttes ou des éclaboussures et qu'aucun objet rempli de liquides, comme des vases, ne doit être placé sur l'appareil.

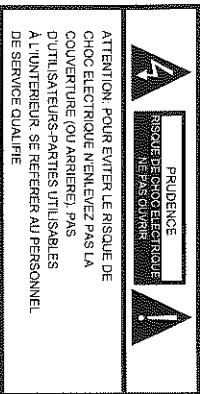

Ce symbole est pour avertir l'utilisateur d'éviter le risque de choc électrique. Cet équipement peut être seulement désassemblé par un personnel de service qualifié.

Ce symbole est pour avertir l'utilisateur de la présence d'une opération importante et des instructions de maintenance dans la littérature accompagnant l'équipement.

 
ALERTE: Pour réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou à la humidité.

ALERTE: Les piles ne doivent pas être exposées à une chaleur excessive comme le soleil, le feu ou autres.

AVERTISSEMENT: - le remplacement d'une batterie par un type incorrect peut faire échouer un sélecteur; - mise au rebut d'une batterie dans un four chaud ou broyage mécanique ou la coupe d'une batterie, peut entraîner une explosion; - laisser une batterie dans un environnement à température extrêmement élevée, comme le soleil, le feu ou une surface chaude peut entraîner un incendie ou une explosion; - une batterie soumise à une pression d'air extrêmement basse peut entraîner une explosion ou la fuite d'un liquide ou d'un gaz inflammable. PRUDENCE: Risque d'incendie ou d'explosion si la batterie est remplacée par un type incorrect !



Ce symbole a beaucoup de indiquer que ce produit intègre une double isolation entre la tension du réseau dangereux et parties accessibles. L'entretien doit seulement être avec pièces de rechange identiques.



Ce logo apposé sur le produit signifie qu'il s'agit d'un appareil dont le traitement en tant que déchet rentre dans le cadre de la directive européenne 2012/19/UE relative aux Déchets d'Équipements Électroniques et Électroniques (DEEE), qui impose que les appareils ménagers usagés soient collectés séparément afin d'optimiser le taux de récupération et le recyclage des métaux qui les composent, et réduire l'impact sur l'environnement et la santé humaine.

HDMI™ HIGH-DEFINITION MULTIMEDIA INTERFACE Les termes HDMI, Interface multimédia haute définition HDMI et le logo HDMI sont des marques commerciales et des marques déposées de HDMI Licensing Administrator, Inc.

Dolby Audio Fabrique sous licence de Dolby Laboratories. Dolby, Dolby Audio et le symbole double-D sont des marques de commerce déposées de Dolby Laboratories Licensing Corporation.

3. Press the **OK** button to display the pairing. If remote control is paired shows up, the connection is successful.
4. If fails, please wait for 30 seconds then repeat previous steps from 1-3 again.
5. Press **BACK** button return to the previous menu.

 
ADD AND USE OF MULTI MEDIA PLAYER

1. In the HOME interface, select the + icon in the APP column to add the application, and click **OK**. Press the + /> button to select the Multimedia Player application, and click **OK** to add it to the HOME interface.
2. Select **OK** button to enter Multimedia Player and display Video, Photo, Music, Text. After inserting the USB flash drive, you can view the corresponding files in the USB flash drive.

NOTE

The menu may be different depending on when you purchased the TV.

PICTURE

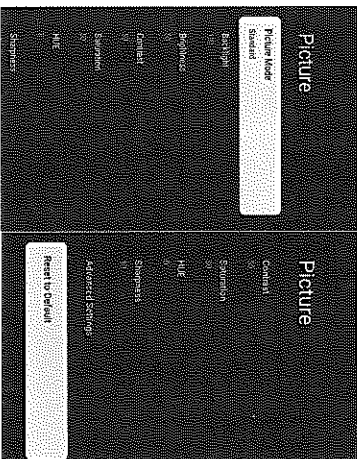

Picture Mode - Press **▲/▼** button to select the option button to enter the sub-menu.

 
(Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

Backlight/Brightness/Contrast/Saturation/HUE/Sharpness - Press **▲/▼** button to select the option. Press **◀** to decrease the parameter. Press **▶** to increase the parameter.

Advanced Settings - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

Reset to Default - Reset all settings to the factory defaults.

SOUND

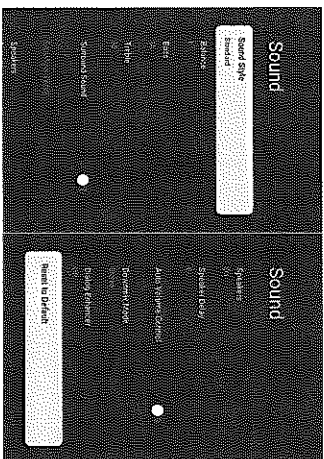


Sound style - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu. (Optional: user, Standard, Vivid, Sports, Movie, Music, News).

Balance/Bass/Treble - Press **▲/▼** button to select the option. Press **◀** to decrease the parameter. Press **▶** to increase the parameter.

Surround Sound - Press the **OK** button to choose ON/OFF.

 STORAGE

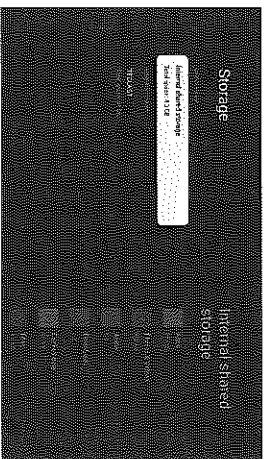


Internal shared storage - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

Removable Storage - Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

NOTE

Show external devices if available.

 RETAIL MODE

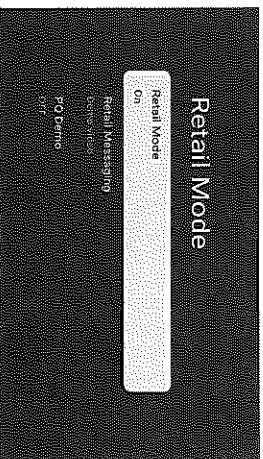

Retail mode - Press **▲/▼** button to select the option then press **OK** button to choose ON/OFF.

BUTTON CONTROL AND PERIPHERAL CONNECTION

BUTTON CONTROL

⏻/OK
 In the standby mode, press to turn on the TV.
 In the boot state, long press to shut down.
 Under the menu page, function equivalent to the OK key.

 
CH- / CH+

In the non-menu page, you can adjust the TV channel under the program addition and subtraction.
 Under the menu page, you can move the cursor up and down.

VOL- / VOL+


In the non-menu page, under the menu page, press the left and right keys to adjust the volume addition and subtraction.

PERIPHERAL CONNECTION

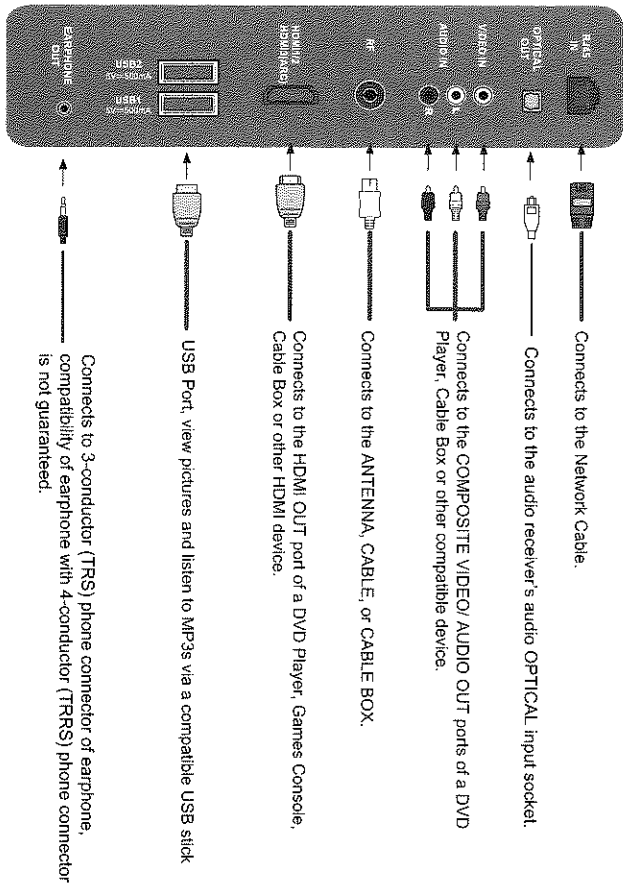


*Please note that the configuration of the button and connection ports may vary from model to model.
 Please check the button and connection port of the purchased model.

 
PRECAUTIONS AND REMINDERS

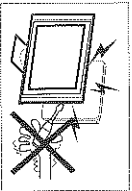

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

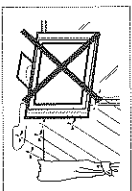

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

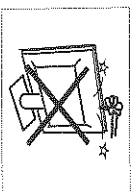

 Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

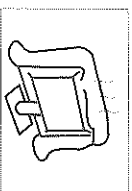

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

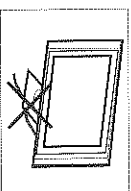


Do not trap the power supply cord under the television receiver.



 
If you are going to clean the product,Unplug the TV,use soft fabric,no water,never chemicals.

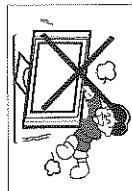

 
Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

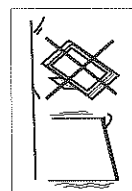

 
Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.

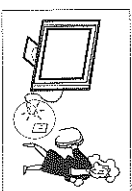

 When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

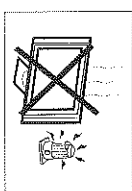

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

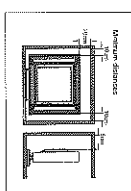


If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained.Heat build-up can reduce the service life of your television, and can also be dangerous.

Note,the use of apparatus in moderate climates.


OPERATING INSTRUCTIONS

 USING THE REMOTE CONTROL

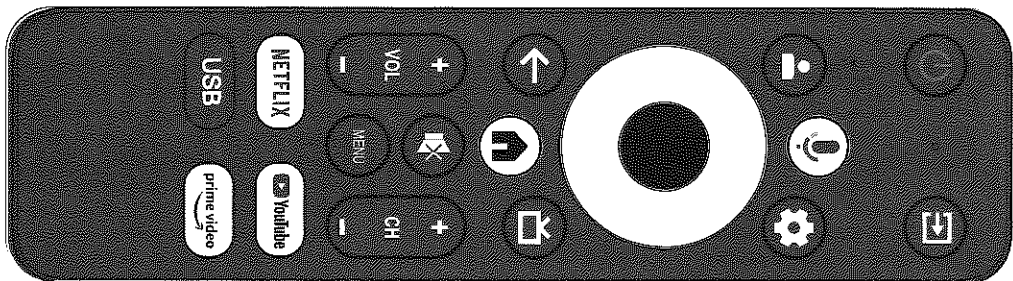

Item	Descriptions
	Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord.
	Press to open the input source list.
	Google account login status.
	Press to open the google assistant or start a voice search.
	Press to open or close the on-screen in Live TV. Press to open Setting in Home Launcher.
	Press to navigate the on-screen menu.
	Enter the selected option or perform the selected operation.
	Return to the previous menu.
	Press to open the Live TV.
	Press VOL+ or VOL- to adjust volume level.
	Press CH+ or CH- to change TV channels.
	Press to switch the sound on or off.
	Press to open or close the on-screen menu.
NETFLIX	Press to open the NETFLIX.
YouTube	Press to open the Youtube.
USB	Press to open the USB.
Prime video	Press to open the prime video.

 
3. Press OK to enter setting.

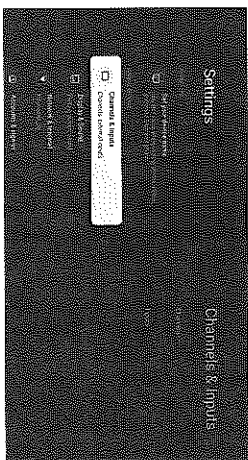

Press BACK to return to the previous menu. If the main menu is displayed, pressing BACK will close the onscreen menu.


Network

 1. Press ▲/▼ button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, press OK button to save and return to the previous menu.

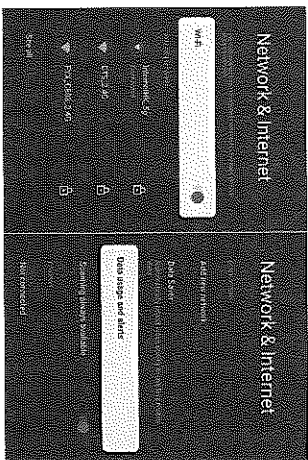

DEVICE PREFERENCES

 HDMI---Press Menu---Settings----Device Preferences

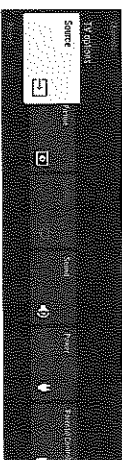


ABOUT


In this menu, you can read the information and settings of TV.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to adjust.
3. After finishing your adjustment, Press BACK button to return to the previous menu.

 About

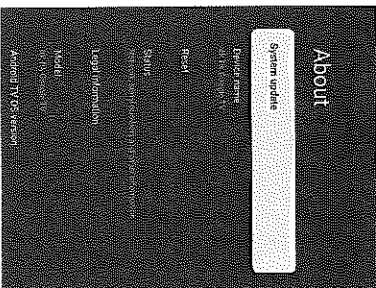

DATE&TIME

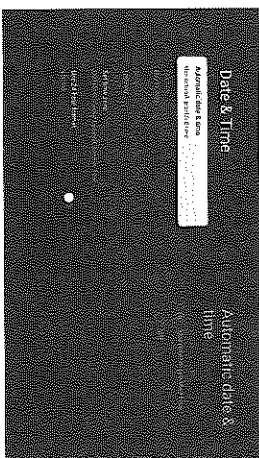 

Automatic date & time - Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Use network-provided time, Off)

NOTE

Manually adjusting date & time settings will automatically change the Automatic date & time to OFF.

Set date - Press the ▲/▼ button to select the option then press OK button to enter the sub-menu.

Set time - Press the ▲/▼ button to select the option then press OK button to enter the sub-menu.

Set time zone - Press the ▲/▼ button to select the option then press OK button to enter the sub-menu.

Use 24-hour format - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.