

Base Camp Leveling

Prior to Operation

1. Park on level ground.
2. Chock all tires.
3. Make sure battery is on and fully charged.
4. Disconnect from the tow vehicle.


Accessing the controls

1. Tap the screen to wake it up
2. Enter the PIN and press the GREEN ENTER button

Controls

The Base Camp touchscreen transitions between three modes depending on prior inputs. Controls can be found on multiple screens. Grayed out buttons will become available after the expected prior action is taken.

1. Adjust the front of the RV using the EXTEND and RETRACT buttons (A & B, or F & G).
2. Press the AUTO LEVEL button (C or H) to go to the Camping screen, then press the top button (D) to go to the primary setpoint.
3. After a successful auto level, press RETURN TO HITCH HEIGHT (F) to return to the saved hitch height
4. Press RETRACT ALL (I) to retract all jacks.

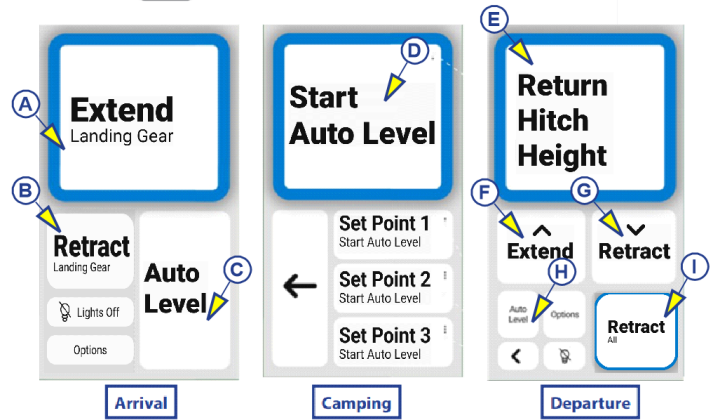

Place controller information sticker here



Download the
OneControl
App



Access the
Owner's
Manual on
the web



Manuals and documents
<https://support.lci1.com/base-camp-leveling>



(432)-LIPPERT



warranty@lci1.com

Rev 2023.07.14