


General Care & Maintenance Of Your Hickory Springs RV Step.

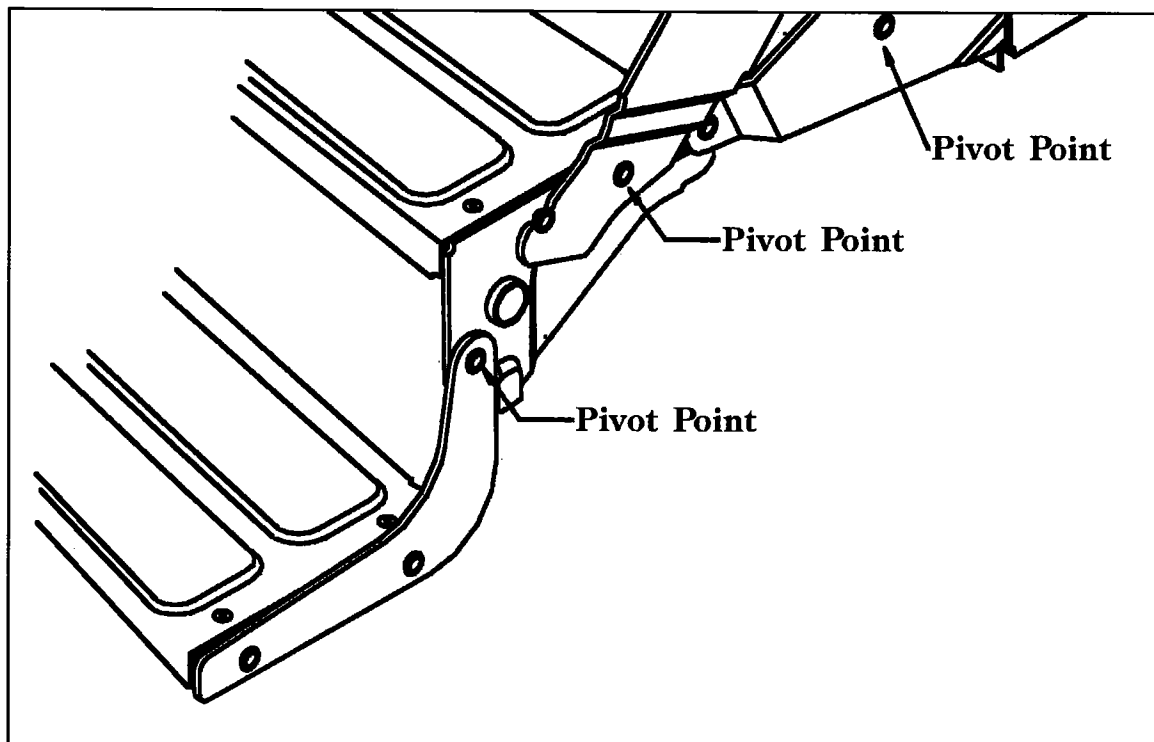

COVERING NICKS & SCRATCHES

- Seal any nicks or scratches with an automotive grade primer to prevent rust.
- Once the nick or scratch has been sealed, cover the damaged area with an automotive grade high-gloss paint.

LUBRICATING THE MECHANISM

It is recommended that you lubricate the mechanism every 30 to 60 days.

- Carefully clean the area around the pivot points (the rivets involved in the motion of the mechanism — see diagram for example).
- After cleaning, lubricate the pivot points between the parts (to pinpoint this area, locate the washer between the parts).
An automotive grade, non-staining lubricant is recommended.

CAUTION: To prevent the possibility of a person slipping on the RV step, avoid letting any excess lubricant come in contact with the surface of the RV step itself. Carefully clean the entire RV step after lubricating the mechanism.

Hickory Springs Mfg. Co.
P.O. Box 1667 • Fort Smith, AR
(501) 646-6161 • (800) 643-2102