




RV STEP MAINTENANCE

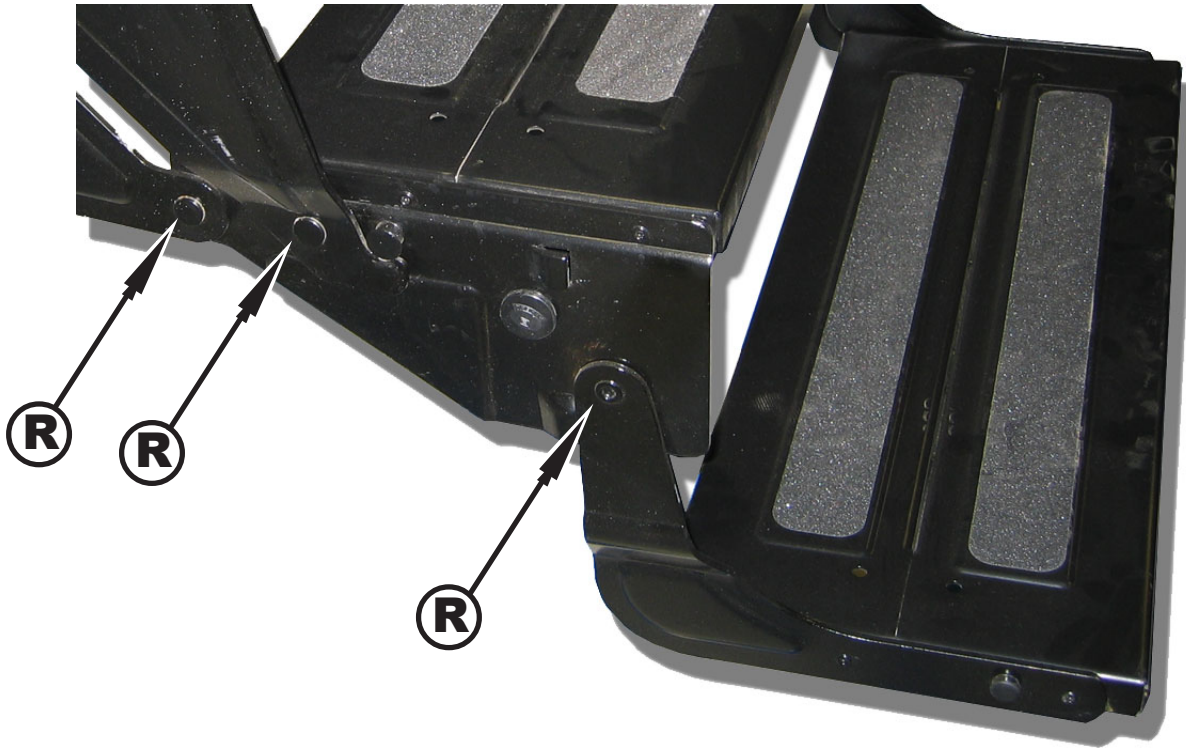

SCRATCH MAINTENANCE

1. Clear any chipped paint or material adhering to scratched area.
2. Apply automotive grade primer to scratch.
3. Paint primed area with automotive, high gloss paint.

LUBRICATION OF HINGE AREAS

1. Remove all dirt and foreign matter from hinge areas - see diagram for locations.
2. Lubricate hinge areas in between the sheet metal portions of the steps.
3. Utilize a dry lubricant such as silicone. Wet lubricants will attract dirt and possibly cause damage to the hinge areas.

WARNING!

Do not allow lubricant to contact the actual step surfaces. Lubricant may cause slipping resulting in personal injury, property damage or death.