


ELECTRICAL REMOTE WIRING

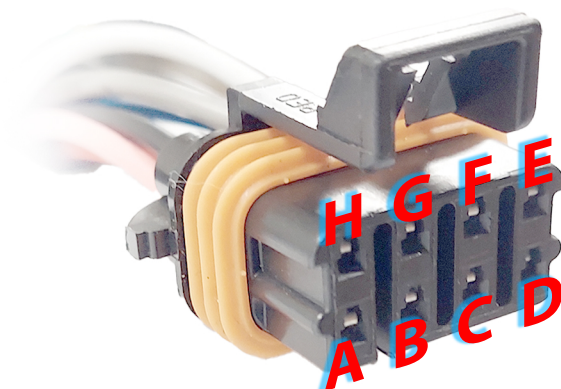

Location	Color	Function	Uses	Connection to invoke function
A	Pink	12VDC	12DC - Light, Timer	D
B	Red	Prime	Prime Gasoline	D
C	Blue	Start/Stop	Start Stop Generator	D
D	Black	Ground	Ground	N/A
E	White	Reset +	Reset Overload	F
F	Grey	Reset -	Reset Overload	E
G	White	FUTURE DEVELOPMENT		-
H	Black	FUTURE DEVELOPMENT		-

Function Discription

Prime Gasoline	Used to prime the gasoline pump before starting
Start / Stop	Works like the Start / Stop switch on generator
Reset	Reset the generator when overloaded

Mating Connection Parts Delphi Metri-Pack

12047931	HOUSING
12045773	TERMINAL
12048086	SEAL
12059168	PLUG
12066304	LOCK