

AWNINGS

Purpose

A limited number of specific Edge™ awnings produced by Lippert between 02/14/2020 and 04/12/2023 are considered fully extended when in the position shown in Fig. 3. This document outlines the steps to achieve proper full extension. Anything outside of these steps could cause an over-extension of the arms.

Variant Identification

1. Examine the variant sticker located on or near the roll tube of the awning.
 - A. If the variant sticker contains the word "EDGE" (with or without a space) anywhere in the variant code text (Fig. 1), disregard this QR. This procedure is not for these awnings.
 - B. If the variant sticker **DOES NOT** contain the word "EDGE" anywhere in the variant code text (Fig. 2), continue to the "Procedure" section of this document to follow the preferred extend operation for the awning.

Fig. 1


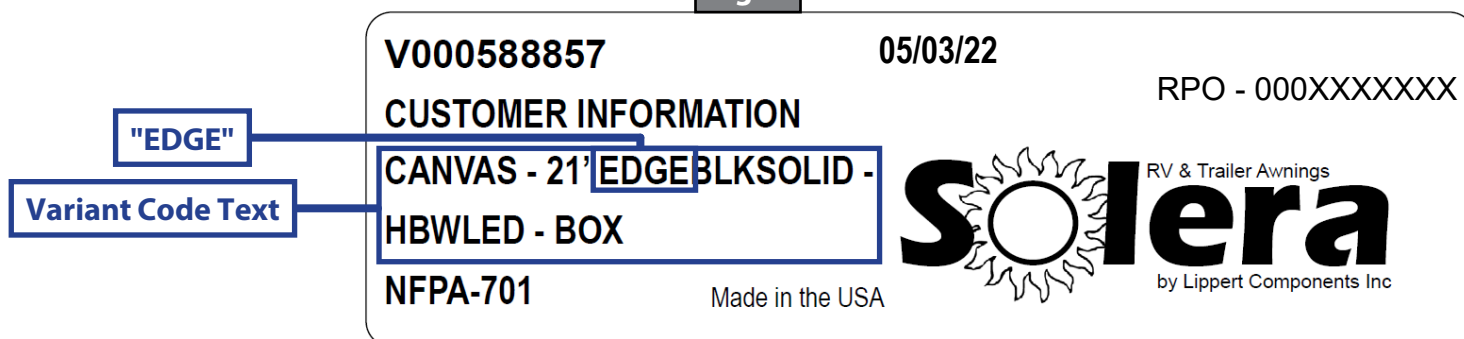


Fig. 2

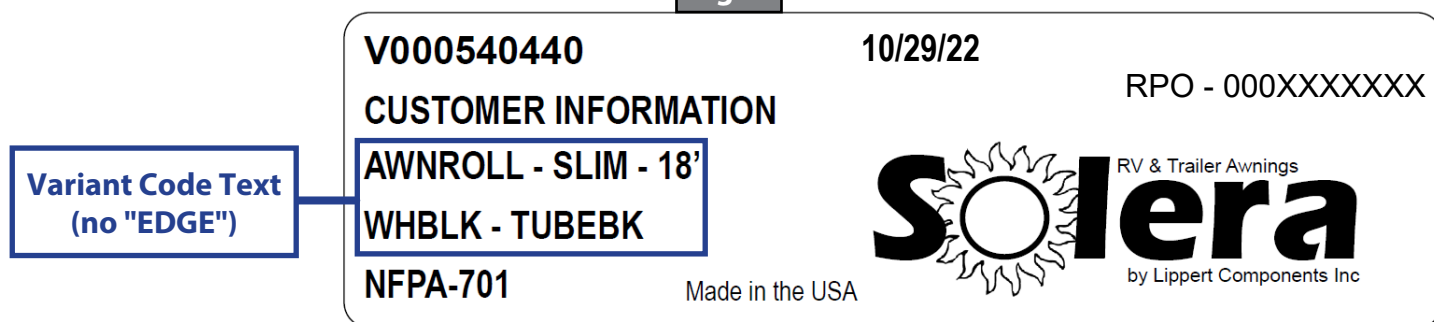

AWNINGS

Procedure

1. Extend the awning as normal by pressing "EXTEND" on the wall switch. When the edge of the valence becomes visible and the awning is almost extended, stop pressing "EXTEND."
2. Press "EXTEND" in short, controlled intervals until the full valence hangs down from the INSIDE EDGE of the roll tube.
3. The awning may continue to be extended as needed until no more than 1" of roll tube (Fig. 3A) is exposed between the top of the valence (Fig. 3B) and the awning fabric (Fig. 3C).

⚠ CAUTION

Extending the awning past 1" of visible roll tube may damage the awning.
DO NOT extend the awning farther.

Fig. 3

