

# QUICK START GUIDE: Super SolarFlex

## Getting Started with Solar

**1. OEM & Super SolarFlex Battery Disconnect into the "On" position**  
 Battery heat and disconnect switch can be found by remote center.



**2. If you're NOT plugged into Shore Power, turn on inverter using the Magnum ME-RC.**

**3. Download the VictronConnect App**

Turn on bluetooth to connect with products. Pair all products with app and then select your BMV-712. Confirm settings.

App Store



Google Play



User Manual



Default pin code is 000000. After connecting, the pin code can be changed by going into "Settings" (upper right), select "Menu" (:), "Product Info", and here you can change the product name and pin code.

| ← Battery settings  |                    |
|---|--------------------|
| Battery capacity  | 510Ah              |
| Charged voltage   | 14.3V              |
| Discharge floor   | 20%                |
| Tail current  | 4.00%              |
| Charged detection time  | 3m                 |
| Peukert exponent  | 1.05               |
| Charge efficiency factor  | 99%                |
| Current threshold   | 0.10A              |
| Time-to-go averaging period   | 3m                 |
| <input checked="" type="checkbox"/> Battery starts synchronized<br>Battery SOC after a reset will be 100% |                    |
| State-of-Charge   | 94.8%              |
| Manually set the current state-of-charge  |                    |
| Synchronize SOC to 100%   | <b>SYNCHRONIZE</b> |
| Zero current calibration  | <b>CALIBRATE</b>   |

**4. Remotes to Live By**

See user manuals for more information.

**Precision Circuits Monitor Panel**  
 Energy Management



User Manual




**Magnum ME-RC**  
 Inverter Settings



User Manual



**JPP MPPT Remote**  
 Solar Management

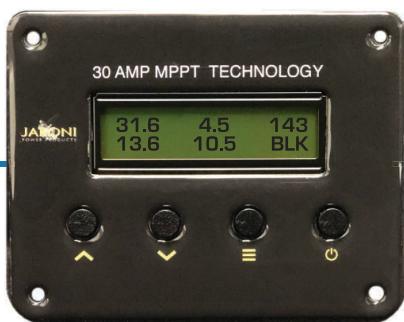

User Manual



**Victron BMV-712**  
 Battery Monitoring



User Manual



**5. For more information, see our [Basic User Guide](#).**

