

**SYNTEC<sup>®</sup>**  
INDUSTRIES



**beauflor**  
a new innovation in resilient flooring

**REPAIR GUIDE**  
For  
**ALL BEAUFLOR PRODUCTS**

 **Cut / Slice Repair**

# Tools Needed



- Small Putty Knife
- Seam bond adhesive
- Screwdriver
- Acrylic emulsion adhesive
- Masking Tape

# CUT / SLICE




# REPAIR PROCEDURE

# Application of adhesive



- With a small putty knife, work acrylic emulsion flooring adhesive under the material as far as possible in all directions.


# Seam Treatment

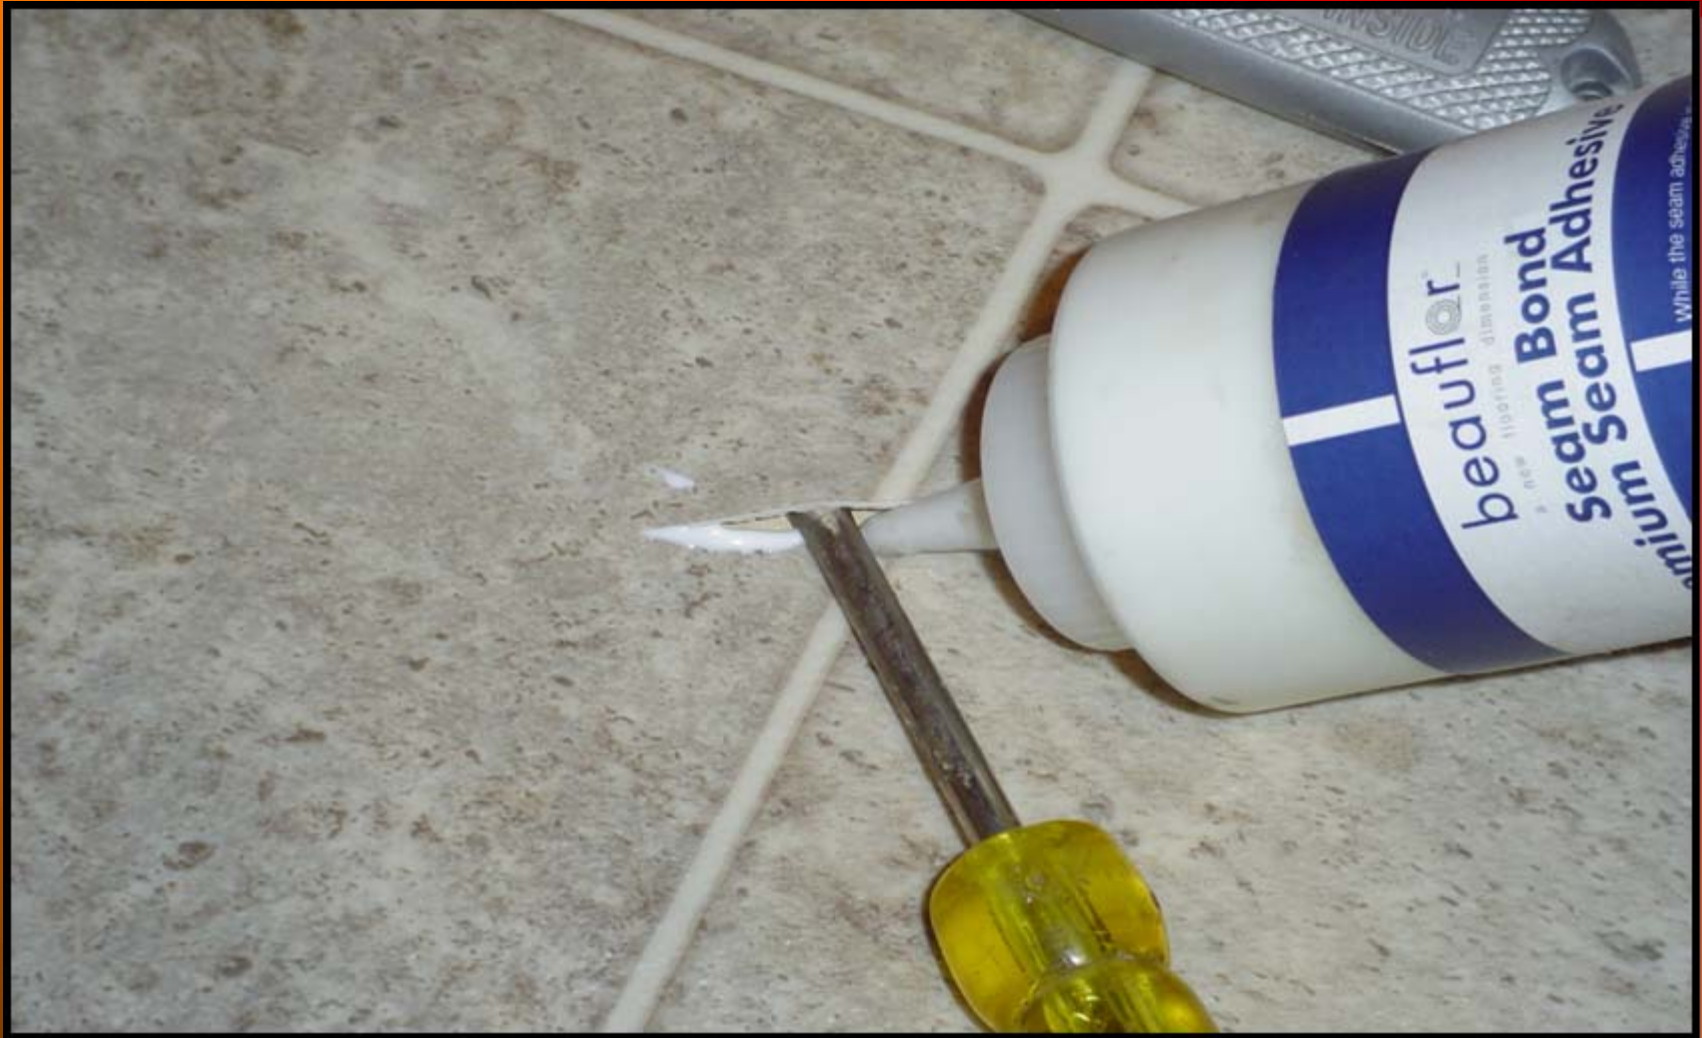

- Using a clean screwdriver hold the edge of the material apart and apply seam bond adhesive.

# Adhesive Application


**Remove all traces of excess seam bond adhesive while wet**

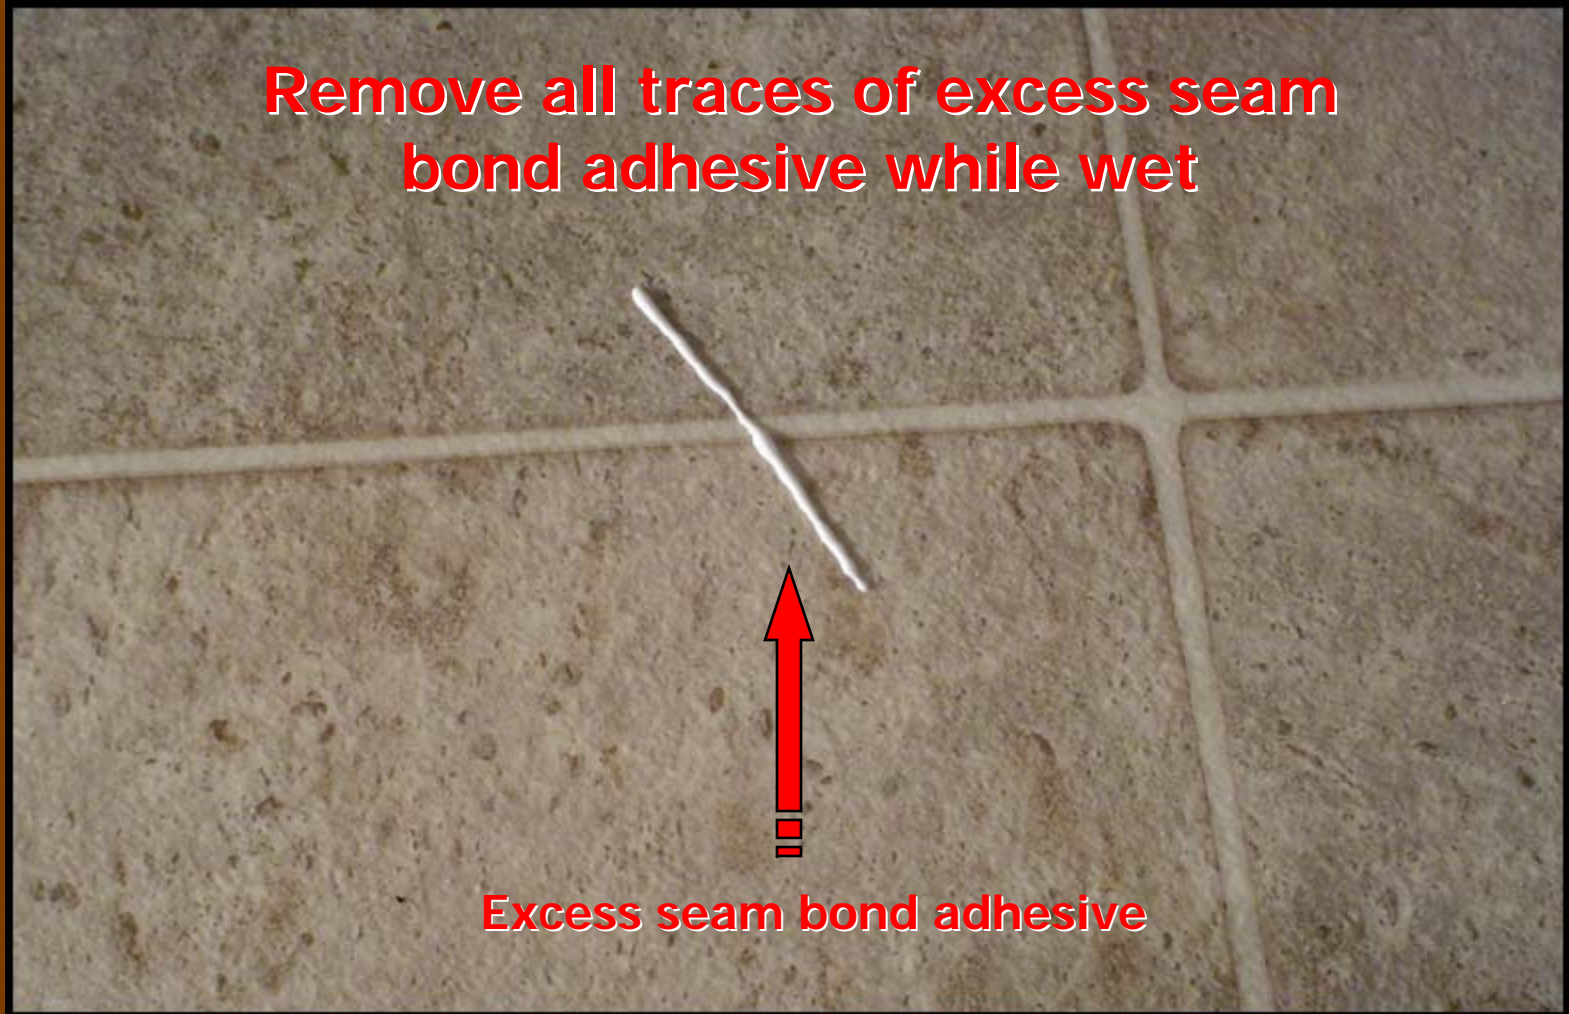

**Excess seam bond adhesive**

- Force the seam bond adhesive up into the seam.
- Clean off the seam bond adhesive with a clean damp white cloth.

# Clean-up & Secure

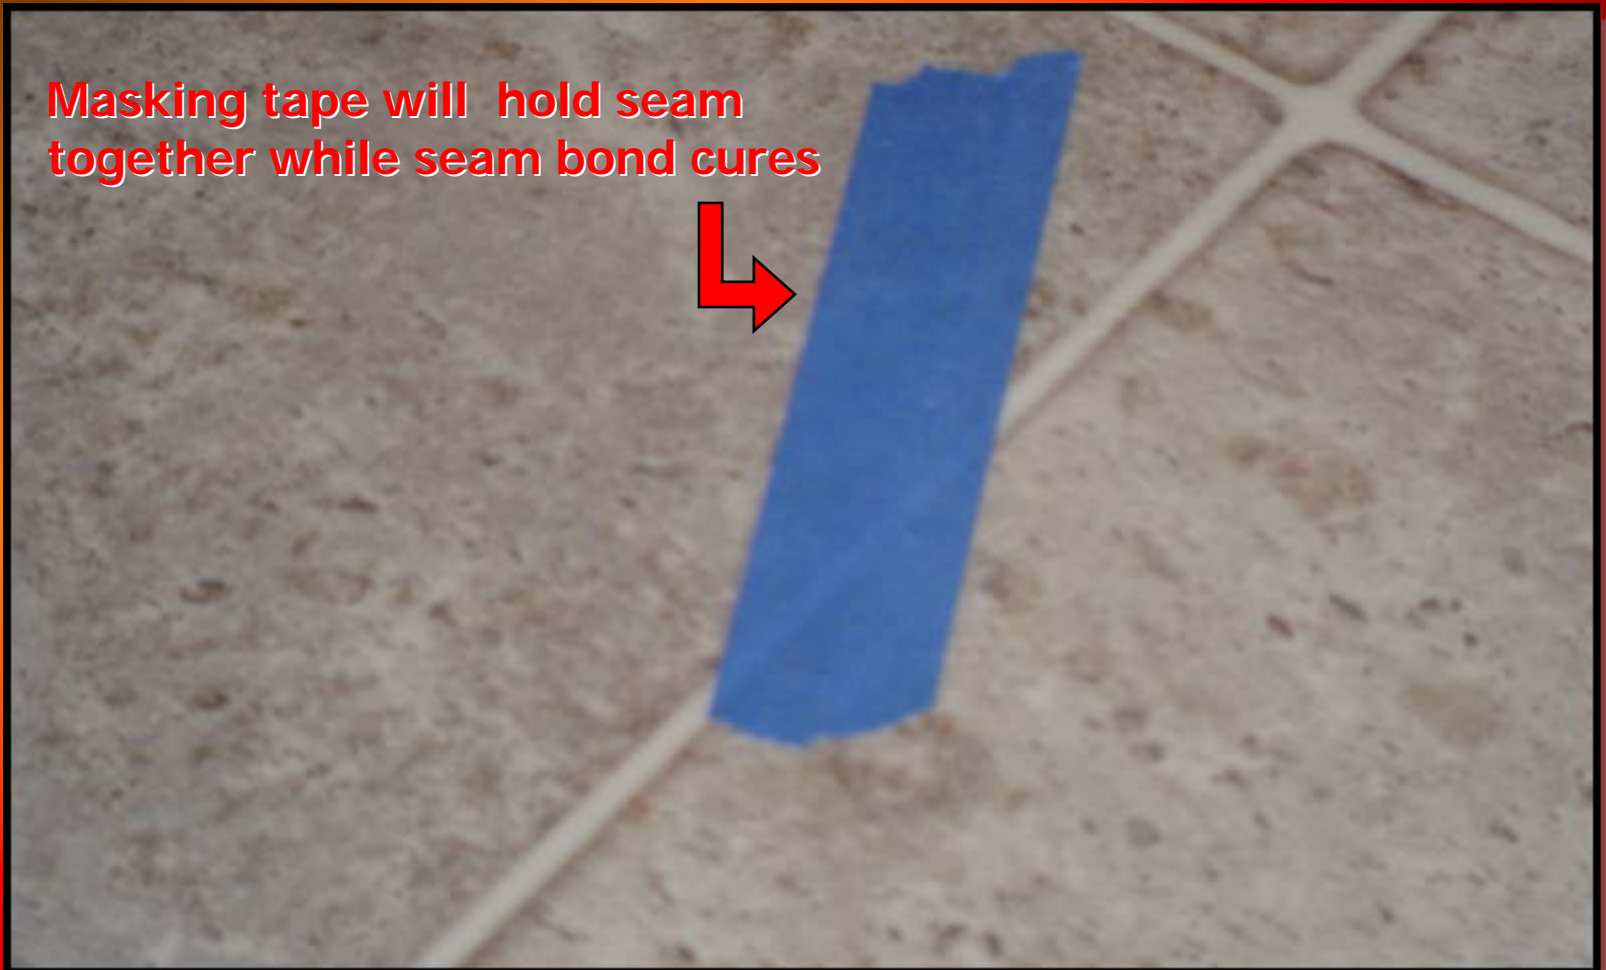

- Roll the area around the repair using a hand roller.
- Use masking tape to hold the seam together while the adhesive sets



# Completed Permanent Repair



- Protect repaired area from foot and rolling traffic for 12 hours.