


# Removing the kickboard and drawer

**Tool needed to remove the kickboard--battery drill  
with Phillip bit and tape measure**

To replace the kickboard and drawer, you will need to remove the items in the drawer. When you pull the drawer out, you will find that each slide track is attached to the side of the drawer a black plastic release. On one side you will push the release down and on the other you will pick it up. Pull out gently when drawer is released.



With the drawer removed, you will want to mark the edges of the drawer on the kickboard, or leave the L brackets that are on the kickboard for replacement of the drawer. (If you are **REPLACING** the kickboard, measure and record the distances from the edges of the old kickboard to each side of the drawer front, and then mark the new kickboard for upcoming drawer reattachment) Then, **take off the kickboard** by removing the domed-Phillips screws from the inside of the drawer.

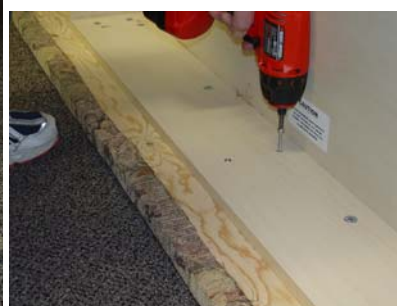

To **reattach the drawer**, center the new drawer in between the marks you made on the kickboard, or between the L brackets you left. Make sure the bottom edge of the drawer is against the 1/2" wide wood stop on the backside of the kickboard, and that the L brackets from the backside of the kickboard are against the sides of the drawer.


**TIME GIVEN TO INSTALL A NEW KICKBOARD IS .20  
SEE NEXT PAGE FOR CONSTRUCTION OF A NEW DRAWER.**

Issue date 3/21/07

# How to construct a 54" & 60" drawer

**Tools needed to construct the drawer--battery drill with Phillips bit, wide standard screw driver and trim stapler with 1/2" staples**


All parts that are needed to construction a new drawer are seen below.

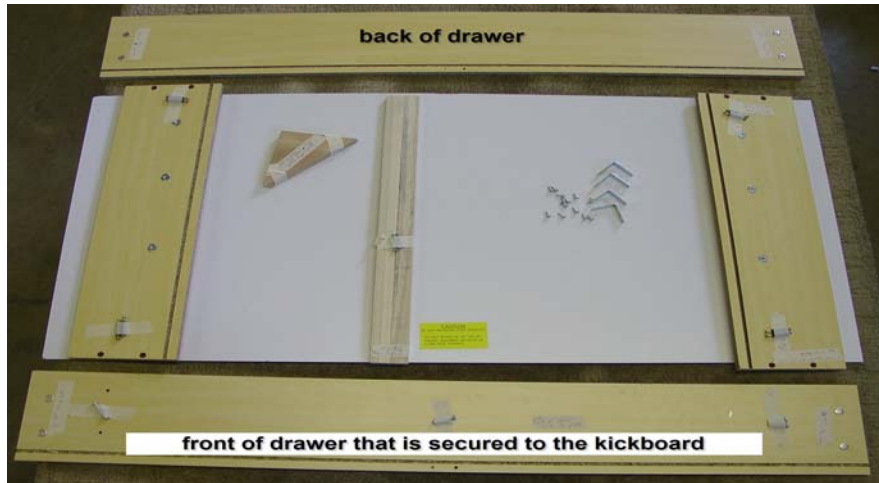


Start **constructing the drawer**. Install the side screws - only finger tighten. If you use a screw driver, DO NOT over tighten them into the side board panels. Then, slide the front and back panels of the drawer onto one side panel (making sure that the open end of the slide track is toward the back drawer panel), and turn the flat-Phillips screws 1/2 turn clockwise. Make sure the 3 drawer panels are locked together.




Issue date 3/21/07

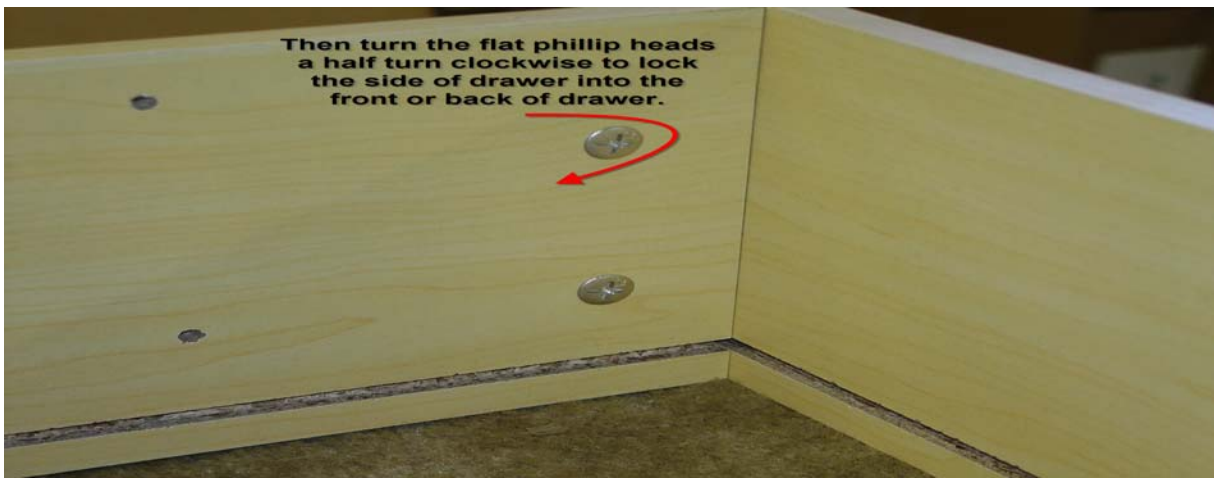

After putting together one side panel with the front and back panels, it is time to **install the bottom of the drawer**. Slide the bottom panel into the slotted groove between the front and back panels, then into the one side panel. Make sure that the sticker is up and towards the front of the kickboard. Then, install the other side panel (making sure that the open end of the slide track is toward the back drawer panel), and turn the other flat-Phillips screws ½ turn clockwise.

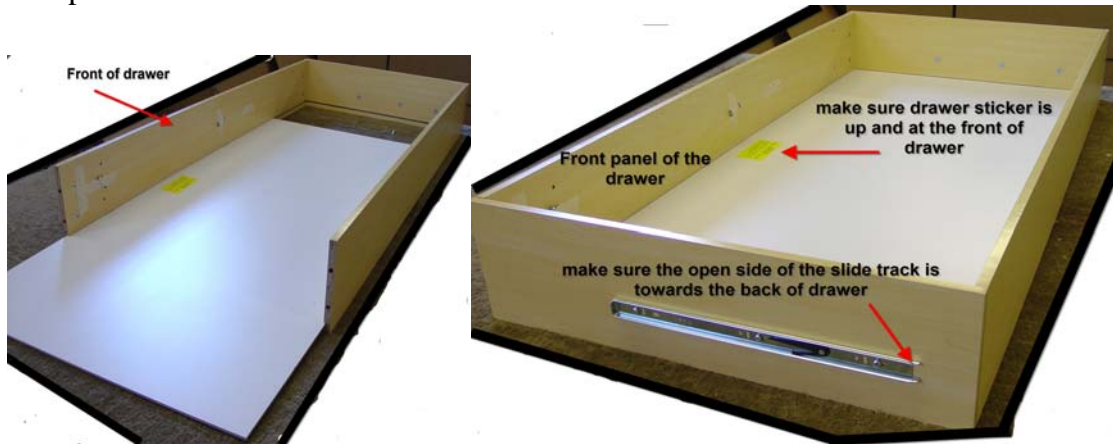

Turn the drawer over and install the center drawer support and corner supports. Install the triangles with a trim stapler.

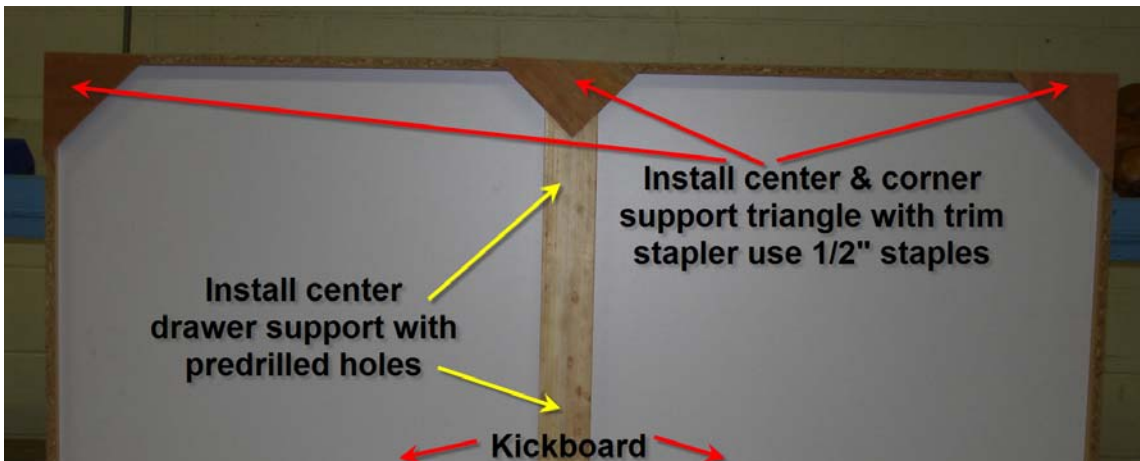

Install L brackets on the back of the kickboard and connect them to the out side of the drawer end panels. Then, install the drawer to the backside of the kickboard using the predrilled holes in the backside of the drawer panel. Now slide the drawer into the bottom of the sofa.



**TIME GIVEN TO BUILD THE NEW DRAWER & INSTALL  
THE DRAWER ONTO KICKBOARD IS .75**

**If you have any question please call Flair Interiors and ask for  
Mark or Jessica 574-534-2163  
Or e-mail [flairwarranty@maplenet.net](mailto:flairwarranty@maplenet.net)**

Issue date 3/21/07