




# iN·Command<sup>®</sup>

CONTROL SYSTEMS


## NCSP3CM

RV CONTROL AND MONITORING SYSTEM

### Installation and Operation Manual (English)

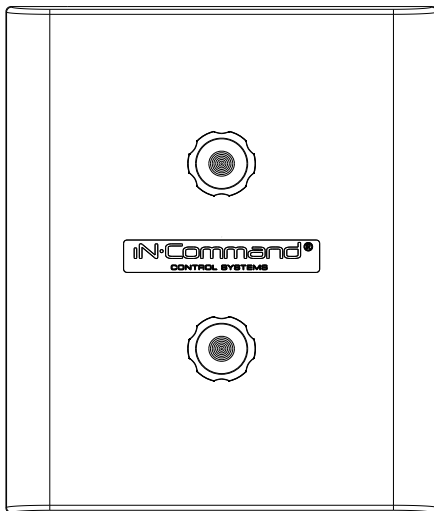

NCSP3CM

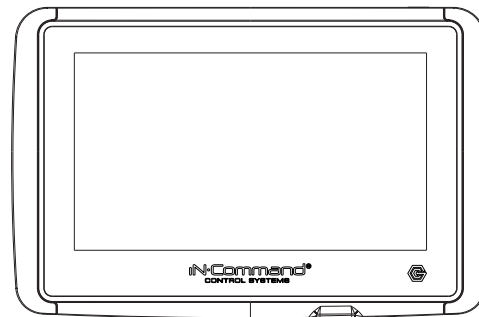

NCSP3DCCT

Patent # (D776,068)  
Patent # (D762,644)  
Patent # US 9,679,735



## Important Safety Information



Read the iN-Command Manual, and these warnings and instructions carefully before using this product. Failure to follow the use instructions in this owner's manual, or improper use of the Mobile Application, Display Commander and/or Body Control Module, could result in personal injury, including death.

### **Do not operate while vehicle is being driven.**

The Mobile Application, Display Commander and/or Body Control Module should not be used while the vehicle is being driven. Use of the Mobile Application, Display Commander and/or Body Control Module while the vehicle is being driven is dangerous and may cause personal injury or property damage.

### **For adult use only.**

The Mobile Application, Display Commander and Body Control Module are intended for adult use only, and are not to be used by persons under the age of 18. Use by children may cause personal injury or property damage.

### **Operate only when you have a clear line of sight.**

Do not operate any moving parts (including, but not limited to, awnings, jacks and slides), unless you have a clear line of sight to the moving part. The Mobile Application, Display Commander or Body Control Module may be used only if you are giving instructions to, and receiving instructions from, another person at least age 18 or older who can clearly see the moving part. Failure to follow these instructions may result in serious personal injury or property damage.

### **Do not operate under the influence of alcohol or drugs.**

Do not operate the Mobile Application, Display Commander or Body Control Module while under the influence of alcohol or drugs. Doing so may result in personal injury or property damage.

### **Avoid moisture.**

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

### **Use recommended accessories.**

To reduce the risk of fire or electric shock and annoying interference, use only the recommended accessories.

• **TABLE OF CONTENTS**

TABLE OF CONTENTS .....	3	MOBILE DEVICES: .....	18
INTRODUCTION .....	4	Pairing iOS Mobile Device to DC .....	19
Thank You! .....	4	Pairing Android Mobile Device to DC .....	22
Features .....	4	Loading the DC Floor Plan .....	24
Precautions .....	4	CHECKING ACTIVE BLUETOOTH SESSION* .....	25
Packing List .....	4	LANGUAGE SELECTION .....	26
INSTALLATION .....	5	UNITS .....	27
Tools and Supplies .....	5	HVAC .....	28
Disconnecting the Battery .....	5	Vent Fans .....	28
Selecting the Mounting Location .....	5	Fan Only Mode .....	28
Mounting the Display Commander (DC) .....	5	AC Cooling .....	28
WIRING .....	6	Heating .....	29
RV-C SYSTEM LAYOUT .....	7	Auto .....	29
SETUP MENU LIST .....	8	Date & Time .....	30
TRAVEL LOCKOUT (Safety) .....	9	HVAC Schedule .....	31
OVERRIDE SWITCHES * .....	10	AUTO GENERATOR START .....	31
DISPLAY COMMANDER BUTTONS .....	10	Generator Schedule .....	32
SPECIFICATIONS .....	11	SOFTWARE UPDATE* .....	33
FCC NOTES .....	11	GLOBAL CONNECT* .....	36
PASSCODE PROTECTION .....	12	FLOOR PLAN .....	39
PANIC WARNING .....	12	Reset .....	39
SETTINGS .....	12	Custom* .....	40
Text Editing* .....	12	Notifications .....	41
Scroll List Editing .....	14	TOUCH SCREEN CALIBRATION .....	43
Triggers .....	15	SYSTEM CALIBRATION * .....	44
Generator Fuel .....	15	TROUBLESHOOTING .....	46
Alarm Inputs .....	15		
Passcode .....	15		
Set Passcode Timer .....	16		
Change Passcode .....	17		
Clear Passcode .....	17		
Reset All Settings .....	17		

## • INTRODUCTION

### • Thank You!

Thank you for choosing a iN-Command product. We hope you will find the instructions in this owner's manual clear and easy to follow. If you take a few minutes to look through it, you'll learn how to use all the features of your new iN-Command system for maximum enjoyment.

### • Features

Features of iN-Command system include:

- Simultaneous control by up to three Android Devices and one iOS Device
- Control four zones of Interior Lighting
- Control three zones of Exterior Lighting
- Monitor all water and fuel tank levels
- Control and monitor the Water Heater (switches between LP, AC, or both)
- Control and monitor the Water Pump
- Control and monitor the Generator (including all faults)
- Control Awnings & Awning Lights
- Control Electric and Hydraulic Slides
- Control Jacks (non-automatic function)
- 4 Programmable Auxiliary 12V Triggers
- 4 Alarm Inputs (12V)
- Monitor Battery Voltage with Low Voltage Alert
- Auto Generator Start
- HVAC
- Global Connect

### • Precautions

#### • Use the Proper Power Supply.

This product is designed to operate with a 12 volt DC, negative ground battery system (the standard system in a North American vehicle).

#### • Use Authorized Service Centers.

Do not attempt to disassemble or adjust this precision product; contact a professional for assistance.

#### • Avoid Moisture.

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

### • Avoid Cleaning Products.


The front of this unit should only be cleaned with a slightly damp cloth. Do not use cleaning products.

### • Use Recommended Accessories.


TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.

### • Packing List


(1) Cover, (2) Thumb Screws

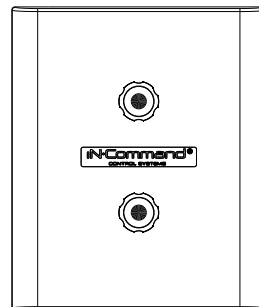

(1) Body Control Module (BCM)

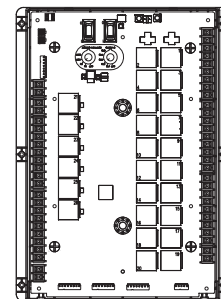

(1) Display Commander (NCSP3DCCT)

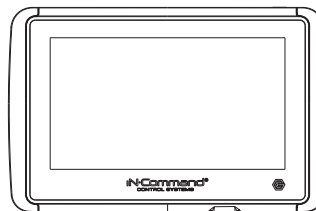

## • INSTALLATION

It's a good idea to read all of the instructions before beginning the installation.

### • Tools and Supplies

You will need these tools and supplies to install your iN-Command:

- Phillips screwdriver
- #2 square drive bit
- Wire cutters and strippers
- Electrical tape
- Volt meter/test light
- Crimping tool
- Fork Crimp connectors
- Minimum of 24 gauge wire required to connect DC to BCM
- 10 gauge wire for power and slide connections
- 14 and 18 gauge wire for all other connections
- Four #8 PH (0.164" x 0.75") screws for the DC
- Six #8 PH (0.164" x 1.0") screws for the BCM

### • Disconnecting the Battery

To prevent a short circuit, be sure to turn off 12V power and remove the negative (-) battery cable prior to installation.


### • Selecting the Mounting Location

Select a mounting location, taking care to avoid the following:

- Places exposed to heat-radiating appliances such as electric heaters
- Adjacent to other equipment that radiates heat
- Poorly-ventilated or dusty places
- Moist or humid locations

### • Mounting the Display Commander (DC)

- Use the mounting hole diagram to measure and cut a mounting hole, allowing space below for future programming via USB drive
- Route power wires through the hole and connect
- Check and ensure correct operation
- Mount the unit using four #8 PH (0.164" x 0.75") screws
- Attach Trim ring

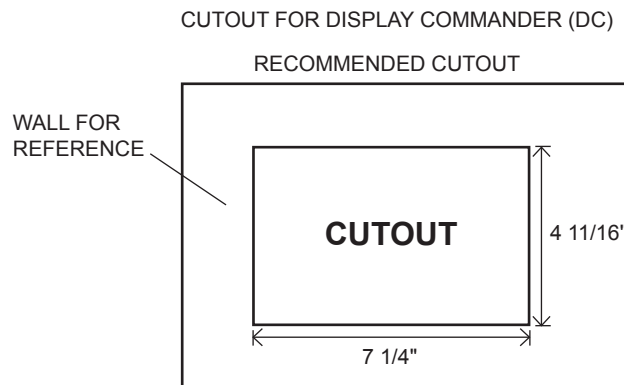



---

**NOTE:** Before cutting the mounting hole, make sure the area behind the mounting location is clear of wires, fuel and vacuum or water lines; ensure there is at least a 2.75" clearance below the Display Commander to allow for programming by USB stick.


---

# • WIRING

The Wiring Diagram Depicts All The Wiring Connections Required For Proper Operation Of The Unit.  
Body Control Module (BCM) Connections


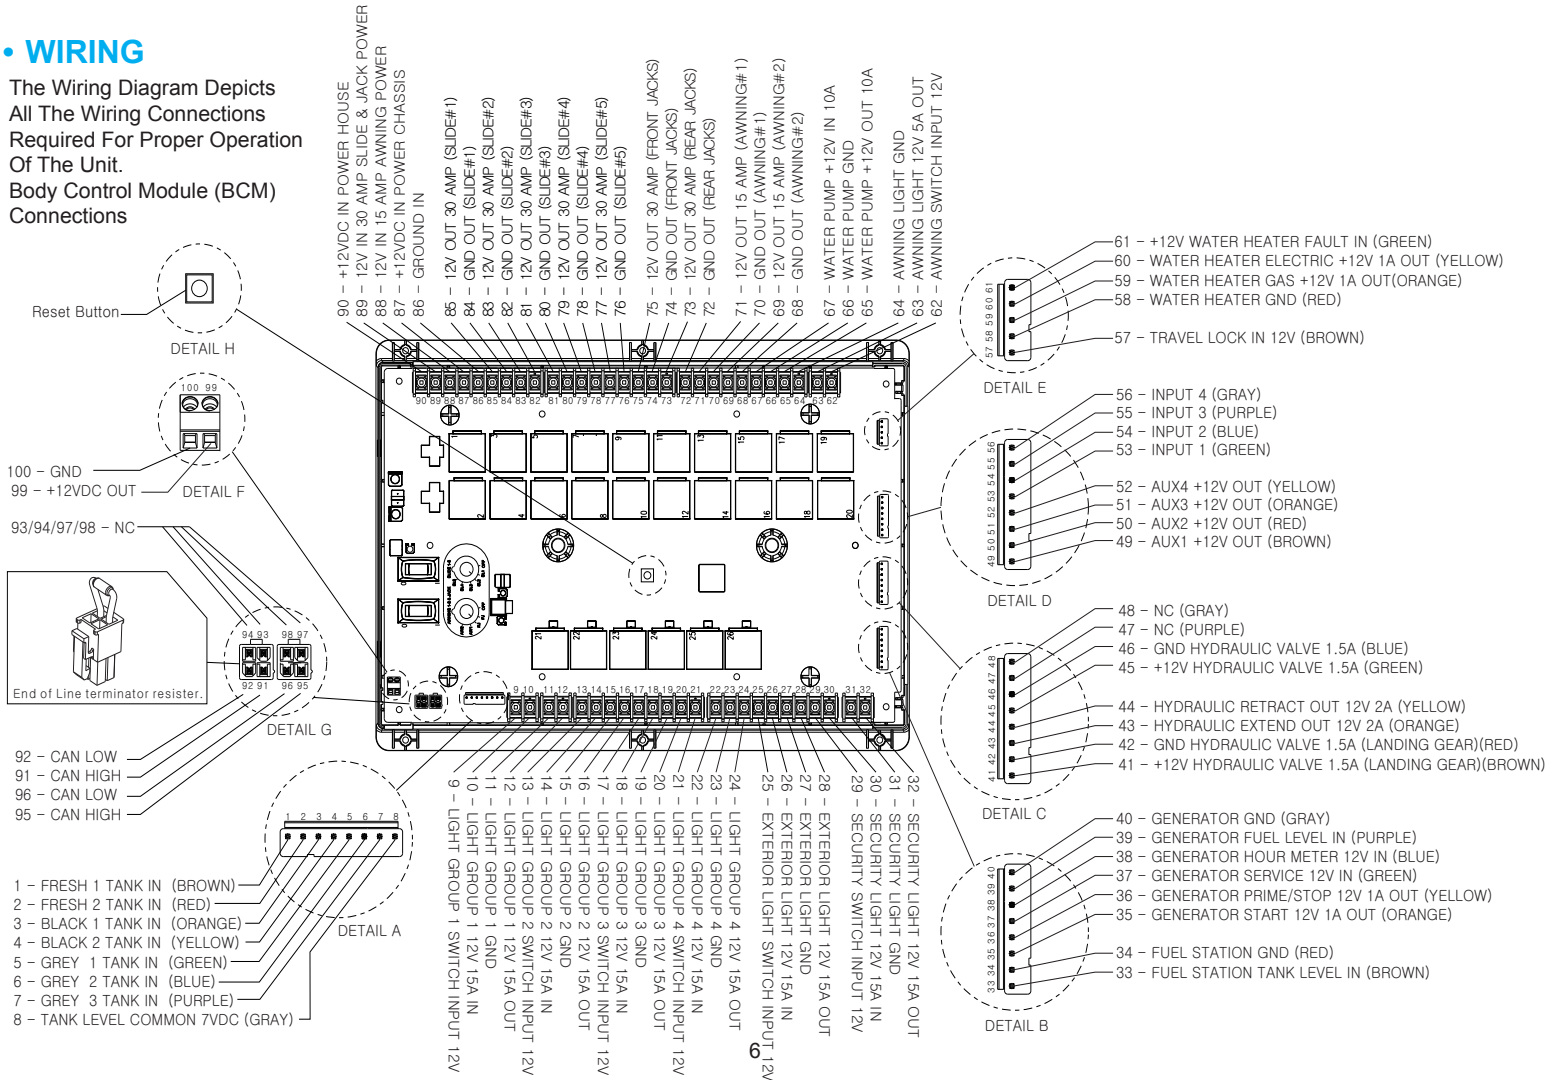


# RV-C SYSTEM LAYOUT

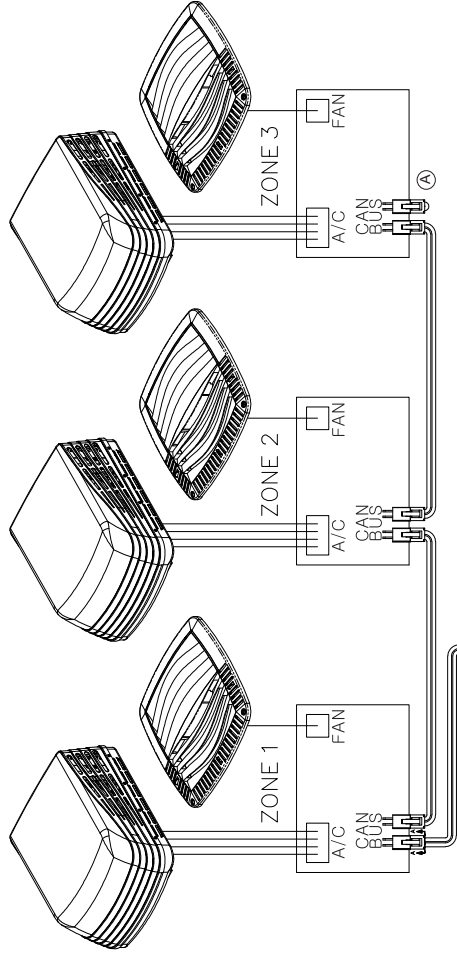

## CEILING/ROOF

DISPLAY COMMANDER

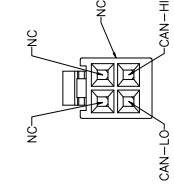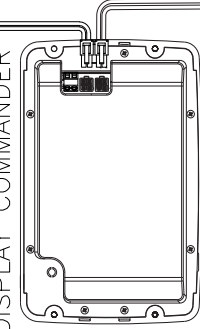


VIEW, A-A  
WIRE INSERTION VIEW

End of Line terminator resistor.

## FLOOR

BODY CONTROL MODULE

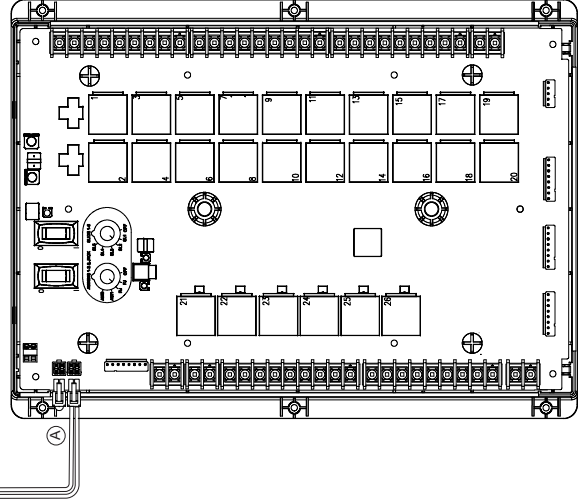



• **SETUP MENU LIST**


Awnings	
Awning Light	No, Yes
Awning 1	In, Out
Awning 2	In, Out

HVAC (Zone1, Zone2, Zone3)	
Mode	On, Off, Fan, Cool, Heat, Auto
Vent	Open, Shut
Vent Fan	Off, Low, Medium, High
Schedule	Start time, Stop time

Lights	
Light Group 1	No, Yes
Light Group 2	No, Yes
Light Group 3	No, Yes
Light Group 4	No, Yes
Awning Light	No, Yes
Dimmer Light 1	No, Yes
Dimmer Light 2	No, Yes
Dimmer Light 3	No, Yes

Slides	
Hydraulic	In, Out
Slide 1	In, Out
Slide 2	In, Out
Slide 3	In, Out
Slide 4	In, Out
Slide 5	In, Out

Hitch	
-	

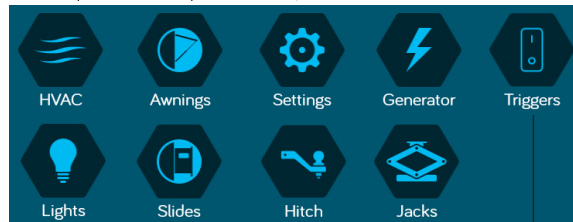

Jacks	
Front	Up, Down
Rear	Up, Down

Settings	
Bluetooth	Scan
Wi-Fi	On, Off, Scan, Add, Clear Account
Date & time	Edit
Edit	Alarms, Awnings, Generator, Triggers, Lights, Slides
Passcode	Setting
Brightness	Up, Down
Calibration	Set
Reset Floor plan	OEM Floor Plan , Default Floor Plan
Information	Information notes
Software	DC, App, BCM, OTA, Floor plan
Global Connect	Login, Show Passcode, Clear Account
Administration	App Data, Generator Hour Meter, Log File, Tanks
Language	English, French
Units	Temperature

Generator	
Prime, Start, Manual	
Schedule	Start time, Stop time

Triggers	
Trigger 1	No, Momentary , Latch
Trigger 2	No, Momentary , Latch
Trigger 3	No, Momentary , Latch
Trigger 4	No, Momentary , Latch




## • TRAVEL LOCKOUT (Safety)

iN-Command is equipped with a Travel Lockout feature to ensure certain system functions are unavailable during transit.

When the Brake Signal (Towable) or Ignition (Motorized) is activated, the iN-Command will lock down all motorized functions. The Display Commander (DC) and mobile devices will also display "Travel Lock Engaged" and the affected buttons will cease to activate.

The lights, water pump, water heater, generator and tanks sensors will continue to function.


To turn the Travel Lock off, press "Disengage" on the Display Commander (DC), inside the RV, once the brake signal has been removed.

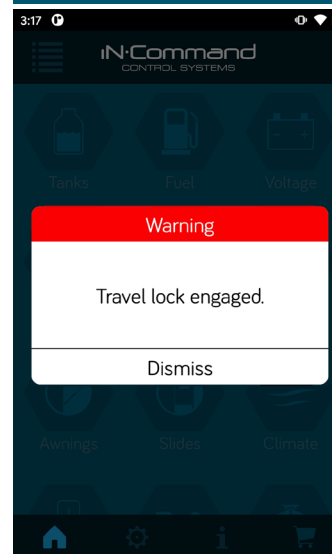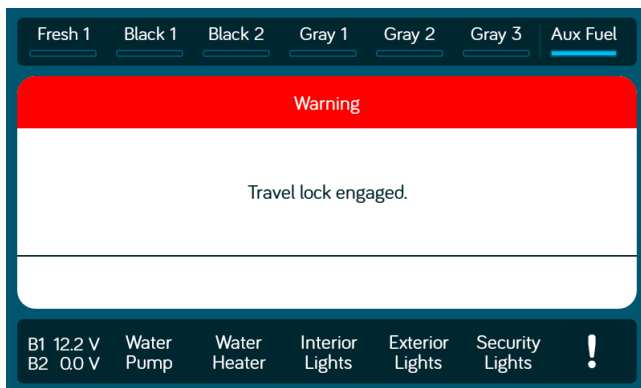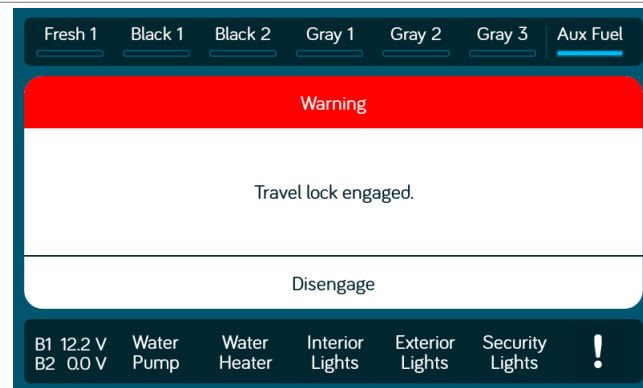

## • OVERRIDE SWITCHES \*

The Body Control Module has a bank of override switches. The rotary switches below each rocker switch correspond to an electric function\* made by the Display Commander. The left switch controls the awning and jacks. The right switch controls the slides. To use the override switches, locate the switch needed to actuate the desired component. Rotate the switch underneath the rocker switch to select the motor. Press up or down on the rocker switch to select the motor. Press up or down on the switch. The switch is momentary and will activate the motor only while pressed in either direction.


\* The hydraulic overrides are located on the hydraulic pump; consult the hydraulic pump owner's manual for more information.

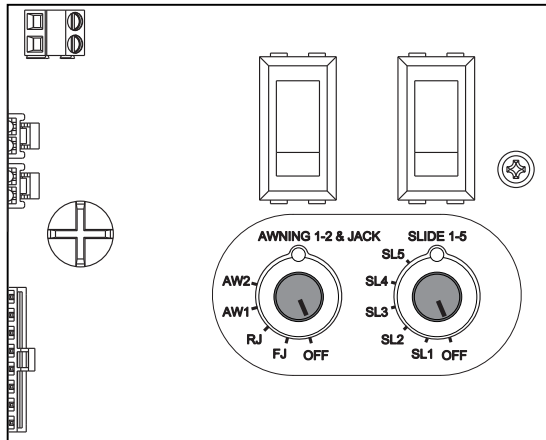

## • DISPLAY COMMANDER BUTTONS

The DC (Display Commander) has Power buttons on the Top of it.

The Power Button turns the DC on and off (long press) and revives it (short press).

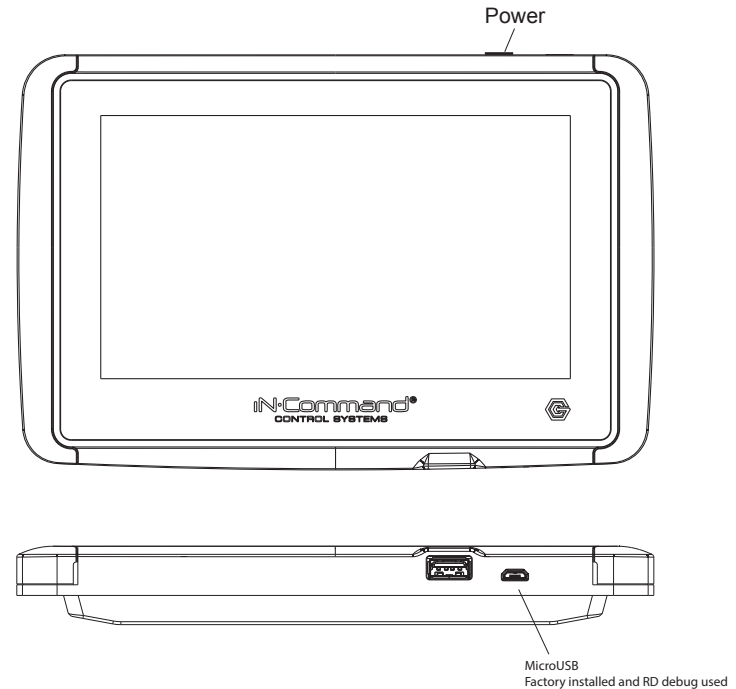

## • SPECIFICATIONS

### **Display Commander (NCS3DCCT)**

Operating Voltage	12VDC
Maximum Current Draw	1.5A@12VDC
Minimum Operating Voltage	9VDC
Maximum Operating Voltage	16VDC

### **Body Control Module (NCSP3CM)**

Operating Voltage	12VDC
Maximum Current Draw	8.5A@12VDC
Minimum Operating Voltage	9VDC
Maximum Operating Voltage	16VDC

### **NCSP3CM System**

EPROM Non-Volatile Memory	YES
Bluetooth Version	4.0 BLE

### **General**

Body Control Module	14.9" (W) x 17.9" (D) x 1.8" (H)
Display Commander	8.280" (W) x 5.397"(D) x 1.016" (H)

## • FCC NOTES

### **NOTICE 1:**

*The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

### **NOTICE 2:**

*This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.*

### **IMPORTANT NOTE:**

*To comply with the FCC RF exposure compliance requirements, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. No change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.*

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## • PASSCODE PROTECTION

A passcode is required to access the system.

1. On the first time use of the system, the user is required to enter and confirm a new passcode.

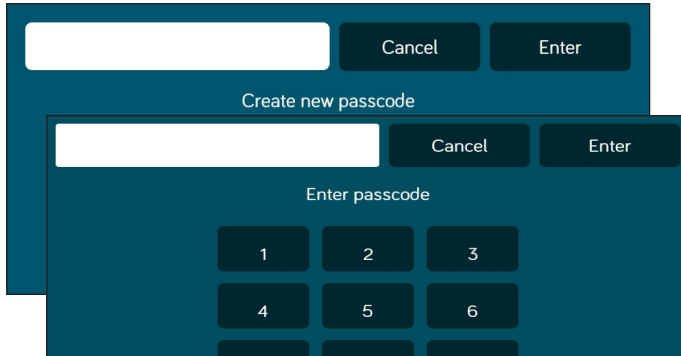

## • PANIC WARNING

When the “Panic” button is engaged from the DC Home Page or mobile devices app, the Interior and Exterior lights will alternate cycling on and off. Press the “Panic” button again to disengage the panic function.



Press and hold button for 3 seconds. —↑

## • SETTINGS

From the Menu screen you can:

- Connect devices with Bluetooth
- Connect DC to Wi-Fi
- Change the Passcode
- Customize the Floor Plan
- Edit iN-Command function text and reposition functions
- Customize Notifications
- Select Units of temperature measurement
- Touch Screen Calibration
- Control the Brightness of the DC screen
- View iN-Command’s Legal documents and customer support information
- View the software versions
- Check status of Global Connect
- Change Date and Time
- Switch the Menu Language between English and French

The Administration page is used by the manufacturer.

### • Text Editing\*


1. Select “Settings”.




2. Press "Edit" to enter Edit page.




3. Select the function to edit.

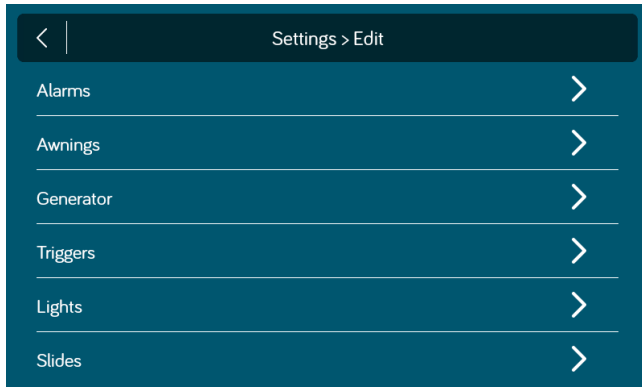

4. Long press the intended text, e.g., "Light Group 3".

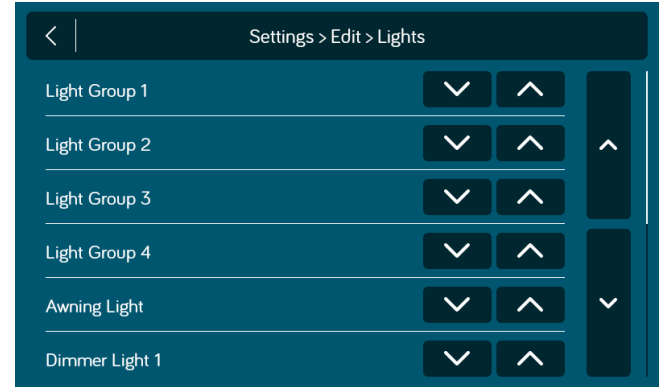

5. Use the keyboard to edit the name, then press "Save".

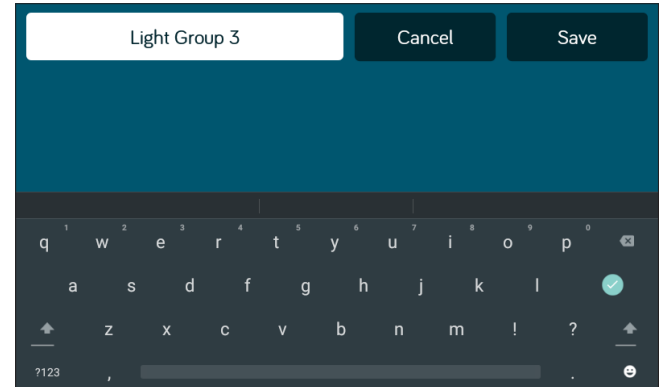


**Note: Editing the text on the DC will not change the text on a device's App.**

## • Scroll List Editing


1. Select "Settings".




2. Press "Edit" to enter "Edit" page.

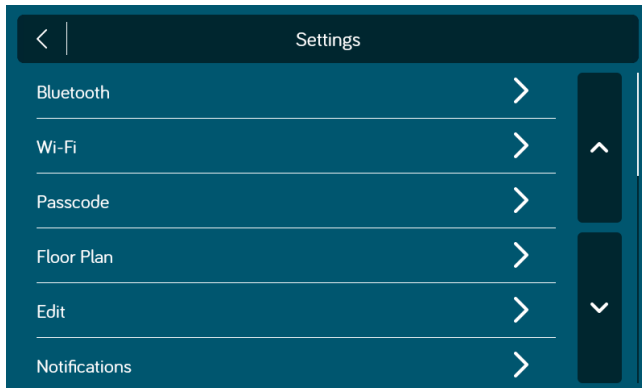

3. Select the function to edit.

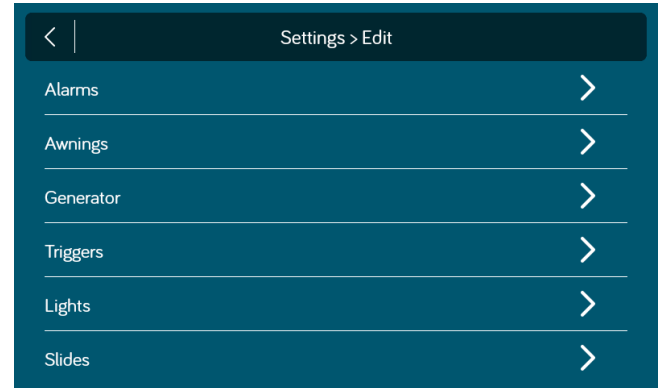


4. Use the Up and Down arrows next to the function to move the item in the list.

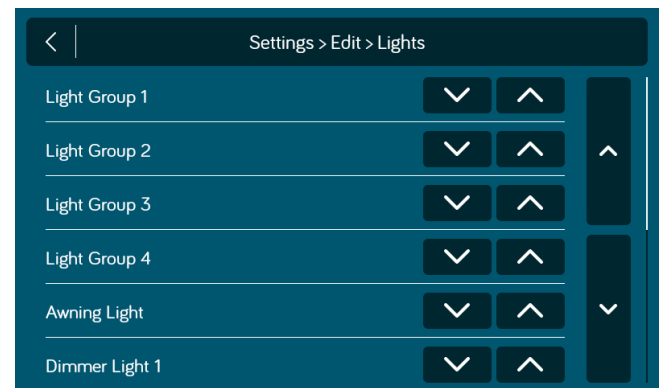


### • Triggers

Triggers can be added to the system. “Momentary” or “Latch” can be selected for each Trigger. Note: Desired devices need to be correctly wired to the BCM to function.

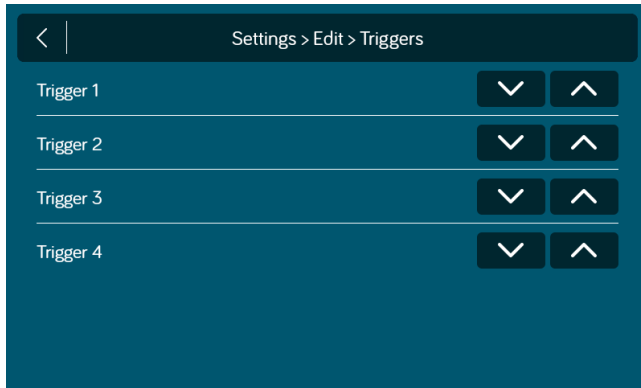

### • Generator Fuel


In the Generator Page, Gasoline or Propane can be selected for the fuel type.

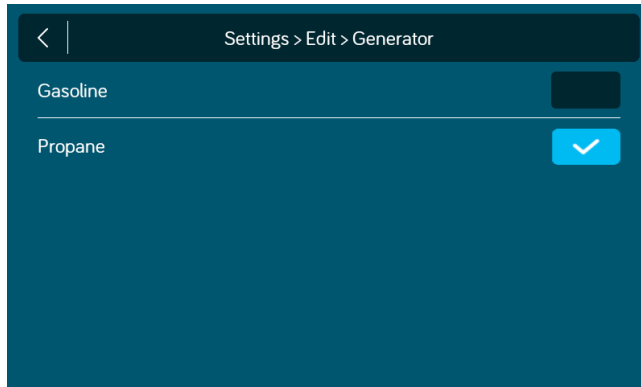

### • Alarm Inputs


Alarm inputs can added to the system.

Note: Desired devices need to be correctly wired to the BCM to function.

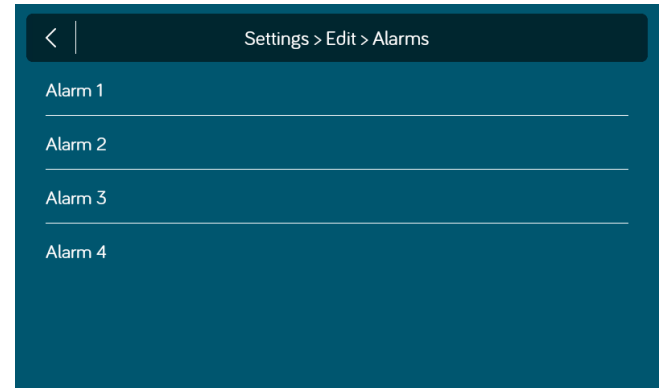


### • Passcode

1. Select “Settings”.

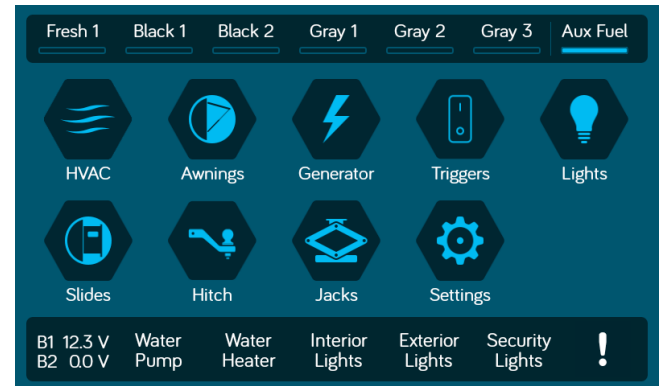





2. Press "Passcode" to enter passcode setup.

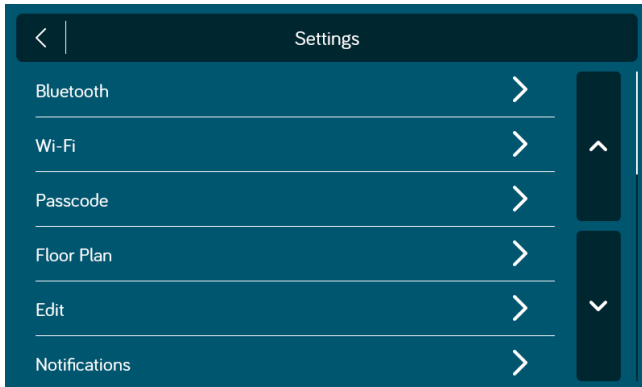

2.1 Enter the correct passcode to proceed.

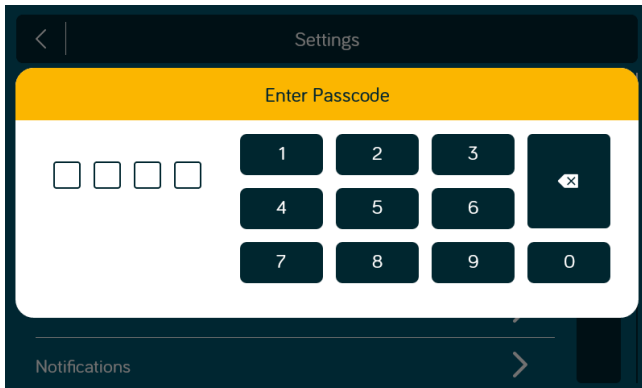


3. The passcode setup window will open.

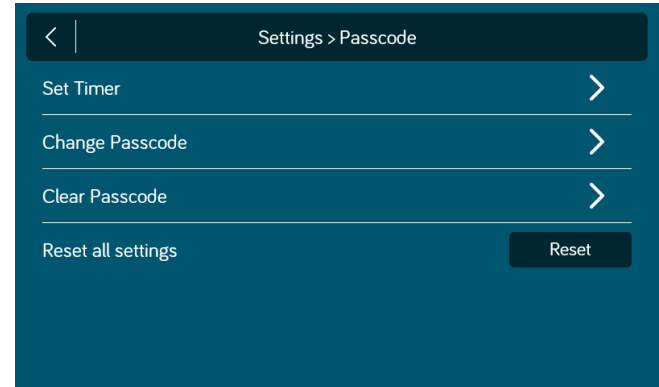

### •Set Passcode Timer

Press "Set Timer" select the idle time to activate the passcode protection.

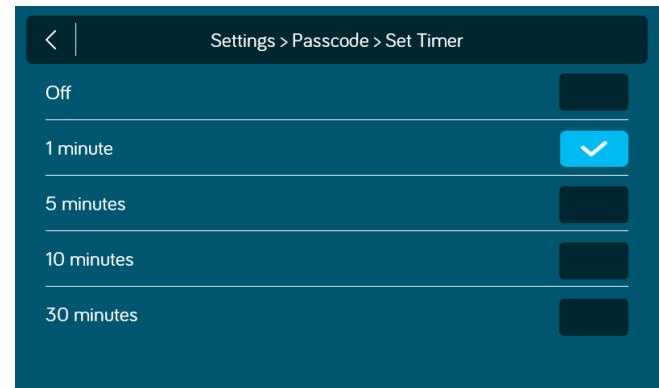

### •Change Passcode

1. Press the “Change Passcode” button to change to a new passcode.
2. Enter the new passcode.

3. Confirm new passcode.


### •Clear Passcode

Press the “Clear Passcode” to clear the passcode. It will have the user create a new passcode.

### •Reset All Settings

1. Press the Reset All Settings “Reset” button to reset all settings. This will restart the App, take the user to the End-User License Agreement, and have the user setup a new passcode.

2. Confirm.

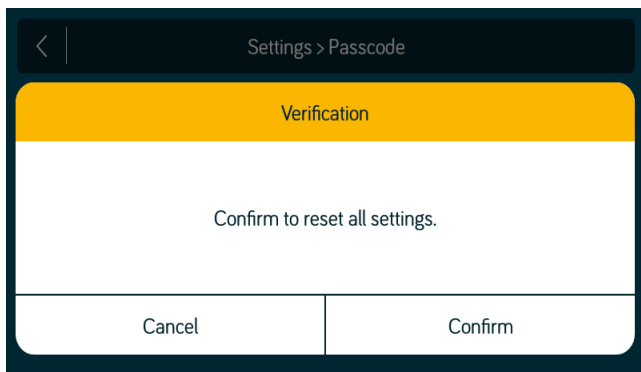


• **MOBILE DEVICES:**

iN-Command is able to pair to Android and iOS devices using the iN-Command App.

Visit the Google Play and Apple App stores on your mobile device to download and use the iN-Command App.


Seven mobile devices are able to be paired to iN-Command at one time, but only 1 iOS and 3 Android devices are able to be actively paired; meaning, 3 Android devices and 1 iOS device can all actively control the iN-Command functions.

To use another device not actively paired to iN-Command, 1 device needs to shut down its iN-Command App to allow another device to actively pair. To do this, shut down the App in the device's settings menu, or press "Disconnect" on the DC's Bluetooth connected devices page.

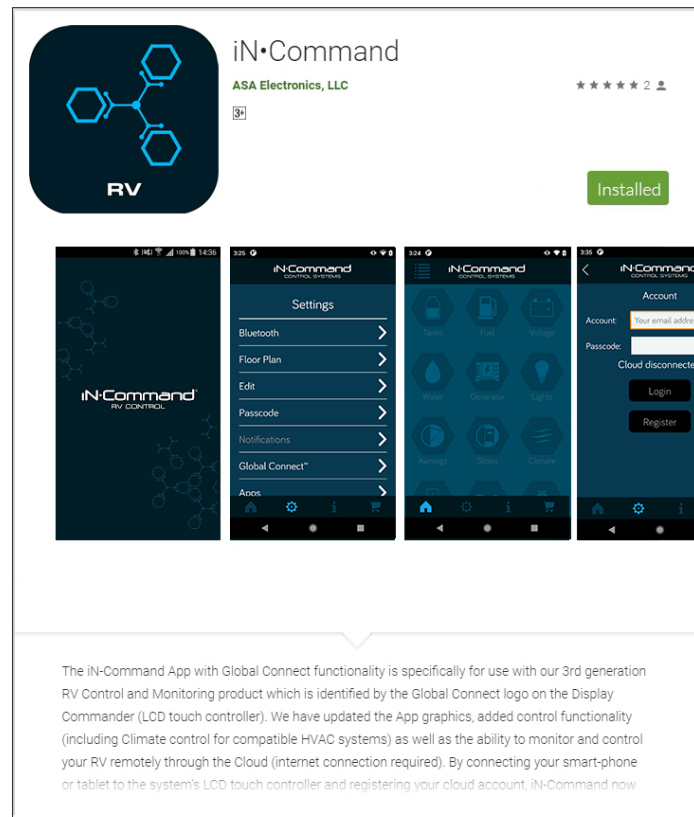


## • Pairing iOS Mobile Device to DC


1. Enable "Bluetooth" in the system settings of the mobile device.

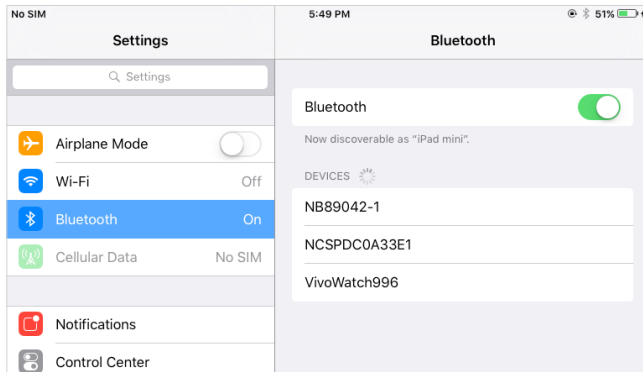


2. From the DC Home page, select "Settings".

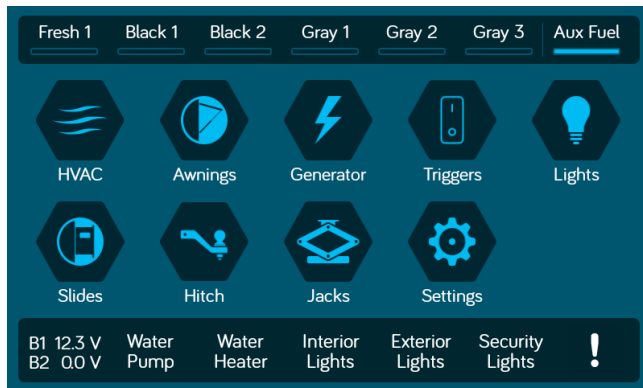


2.1 Select the "Bluetooth" tab.

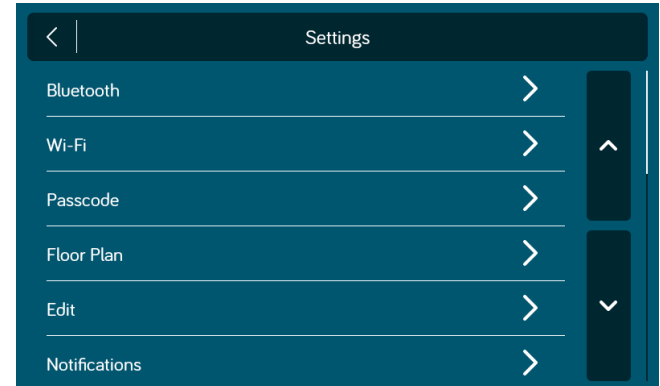


2.2 Select "Pairing" to pair devices and view current paired devices.

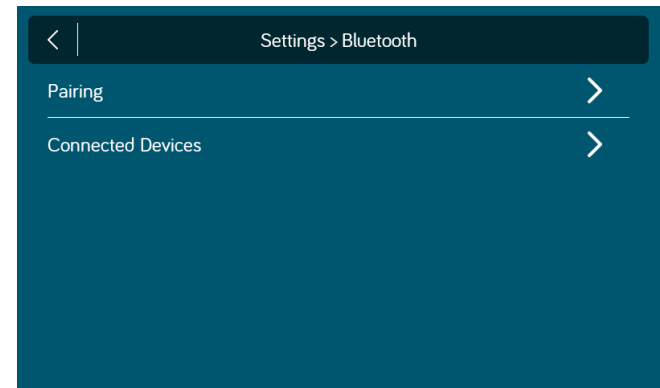


2.3 Press Scan to start scanning for Unpaired devices.  
Locate the mobile device in the Unpaired Device list.  
Select the device by pressing it.

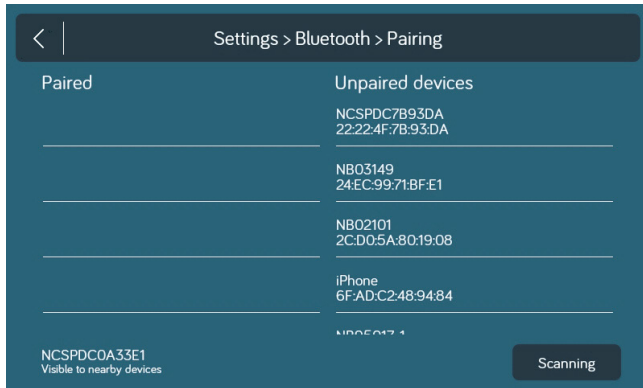


2.4 A Popup with the device name will appear on the display.  
Press "Pair".

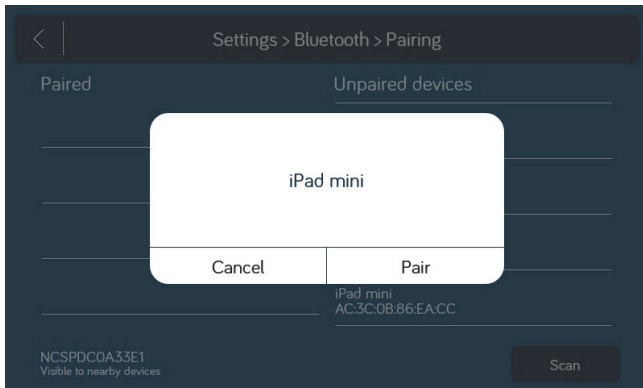


2.5 A Bluetooth Pairing request will appear on the DC and mobile device.  
2.6 Press "PAIR" on the DC.

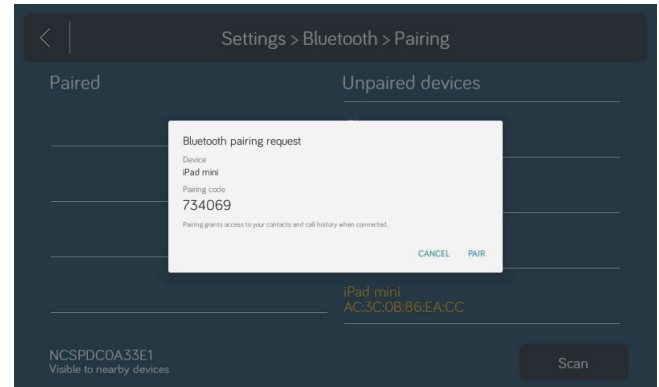


2.7 Press "Pair" on the mobile device.

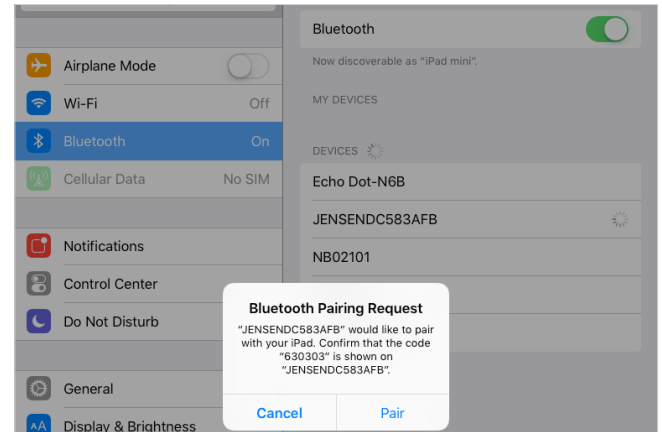


2.8 The mobile device will be displayed in the "Paired devices" list on the DC.

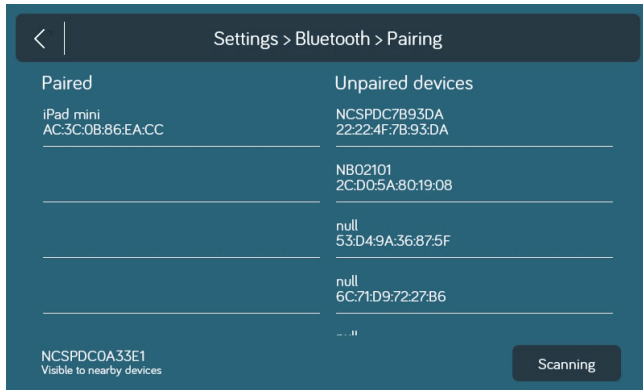

2.9 The DC will be displayed on the mobile device list in the format " NCSPDCXXXXX". Press the DC on the mobile device to connect with it.

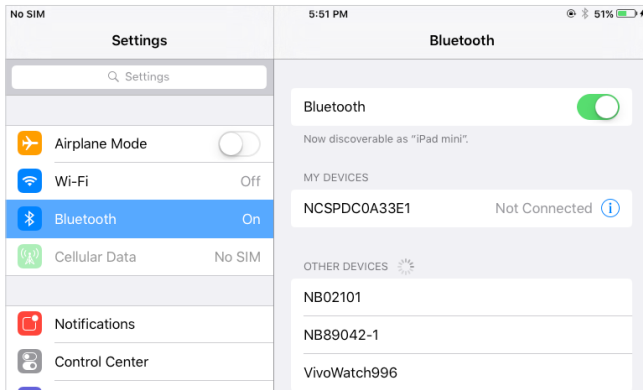




2.10 The mobile device now shows that the DC is connected.

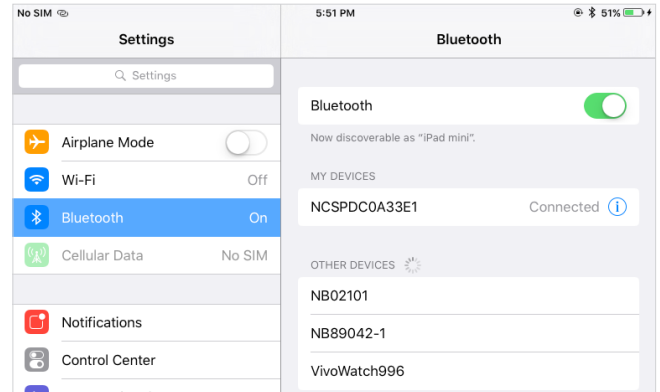



• Pairing Android Mobile Device to DC

1. From the App Home Page select  Settings.
2. Select the "Bluetooth" tab.

3. Press Scan to start scanning for Unpaired devices. Locate the DC in the Unpaired Device list. Select the device by pressing it.

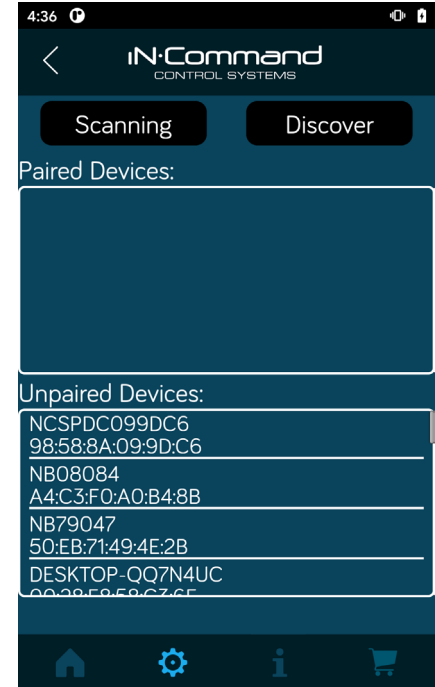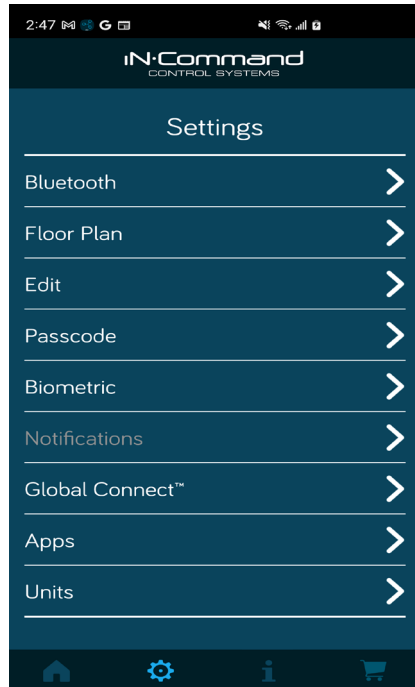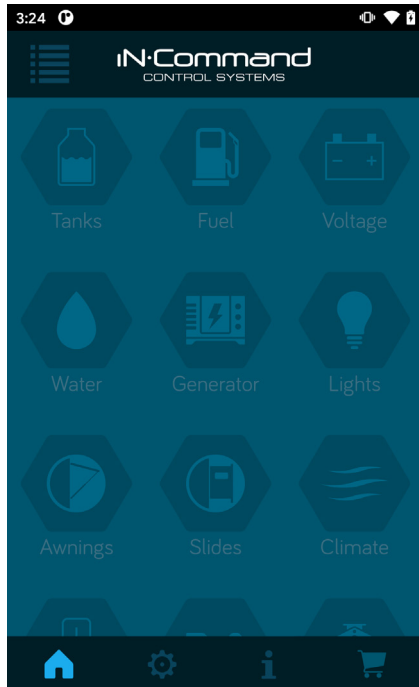




4. A Bluetooth pairing request will appear on the DC and mobile device.
  - 4.1 Press "OK" on the mobile device.
5. The mobile device will be displayed in the "Paired devices" list on the mobile App.

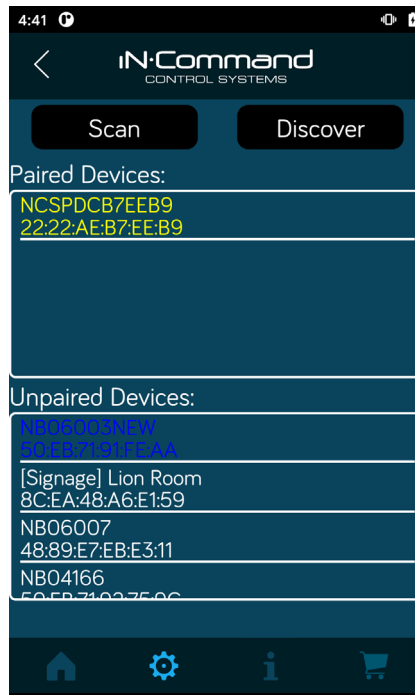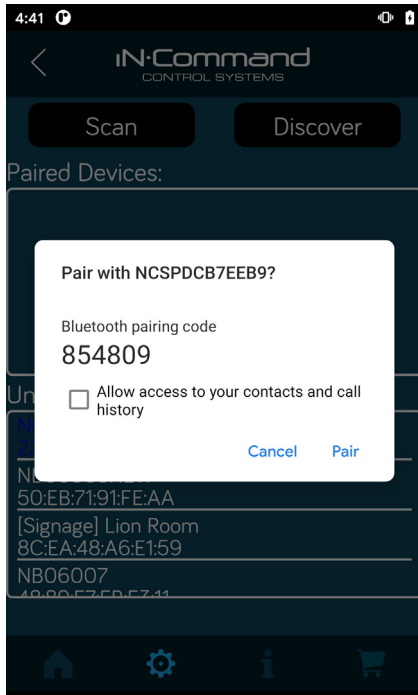




• Loading the DC Floor Plan


1. Press the Floor Plan button in the settings menu page.
2. Press RV Sync to Load the floor plan configuration from the DC. The current settings will be lost/replaced upon doing this.

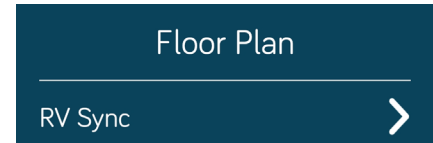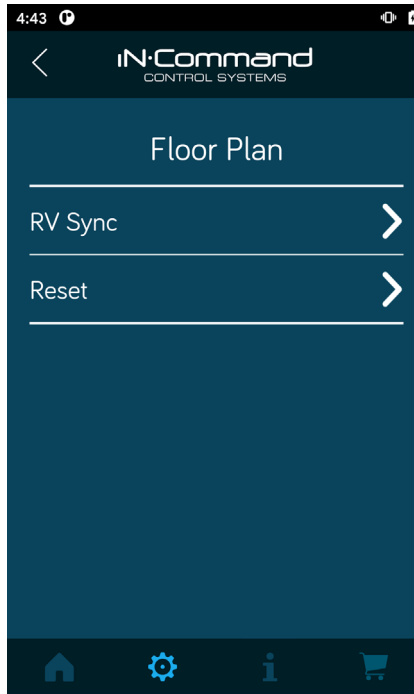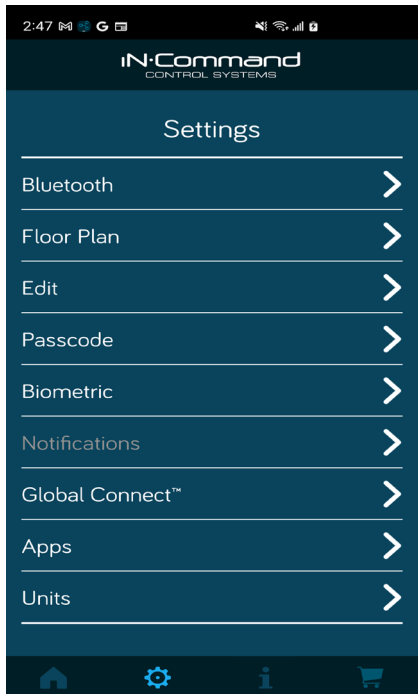

When syncing via Global connect.

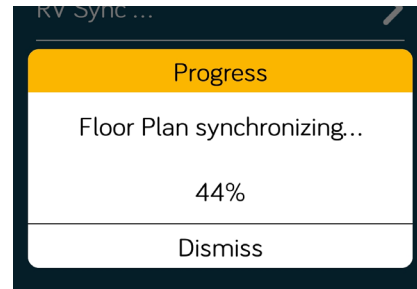


When syncing via Bluetooth.

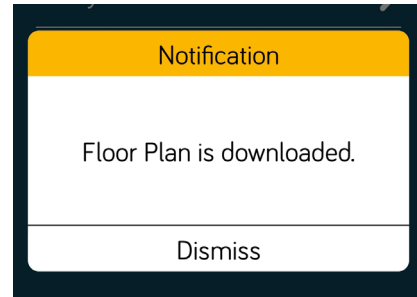


When syncing has completed.

## • CHECKING ACTIVE BLUETOOTH SESSION\*

1. Select “Connected devices”.

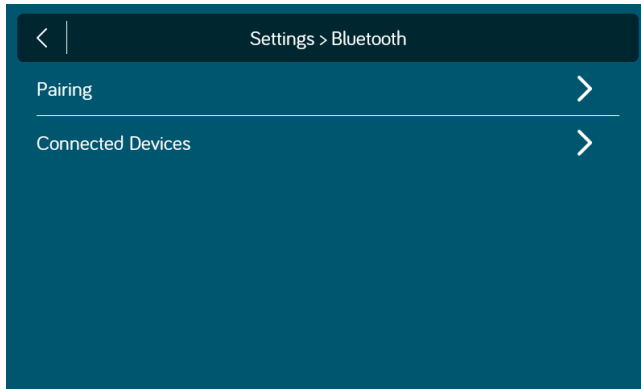

2. The page shows information of current active Bluetooth devices.

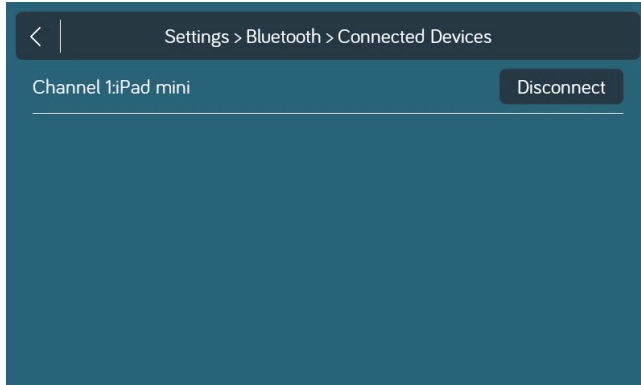


\* To disconnect a handheld device, press “Disconnect”, or simply shut down the device’s App. This function is used to disconnect a device that is not actively being used, and to allow another device to be connected.

## • LANGUAGE SELECTION

1. Select "Settings".




2. Select "Language" in the Settings page.

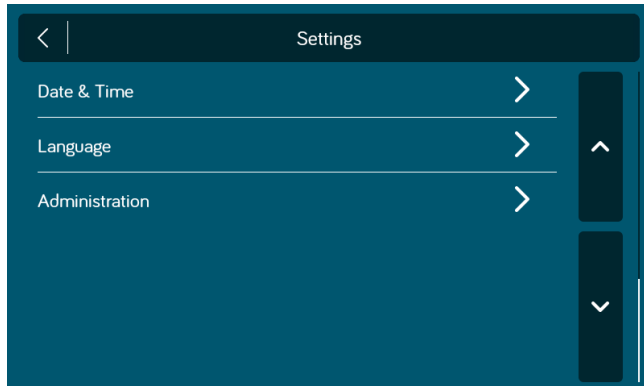


3. Select one of the two options.

- a. English: Select English language.
- b. French: Select French language.

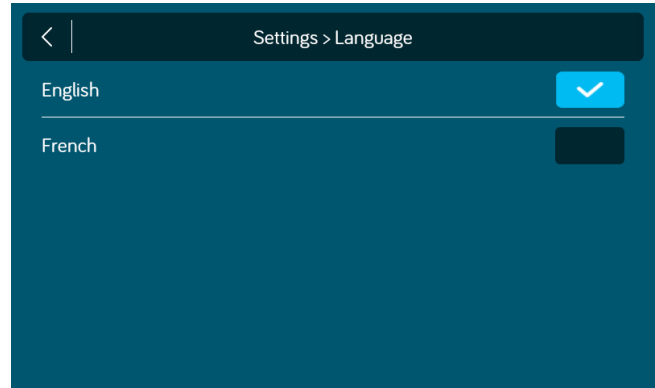

4. Confirm for language selection.

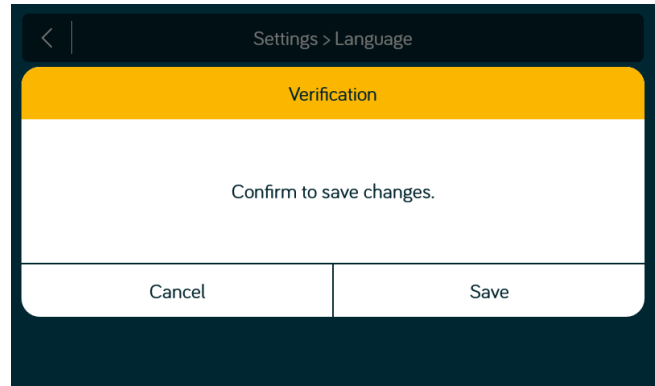


## • UNITS


1. Select "Settings".




2. Select "Units" in the settings page.

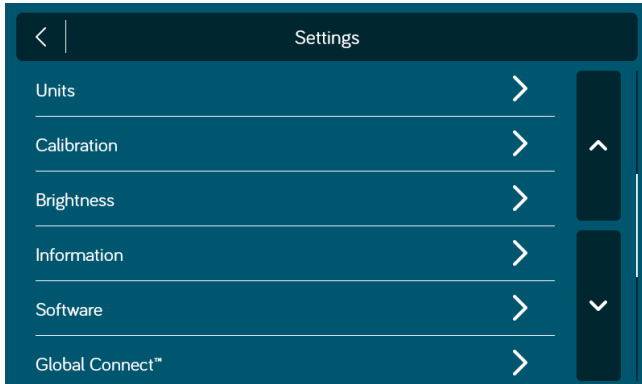

3. Press the "Temperature" box to change between °F and °C.

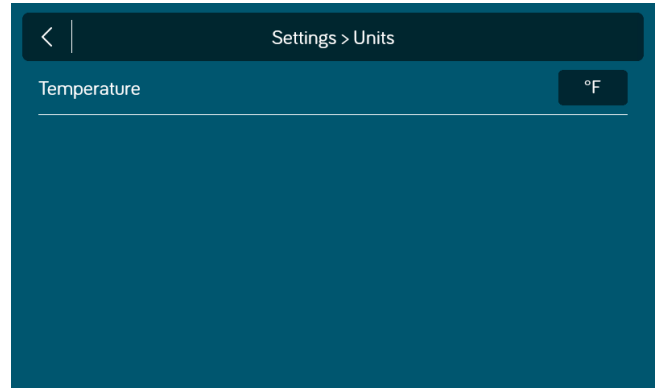

4. Press the back arrow to exit the Settings > Units page.

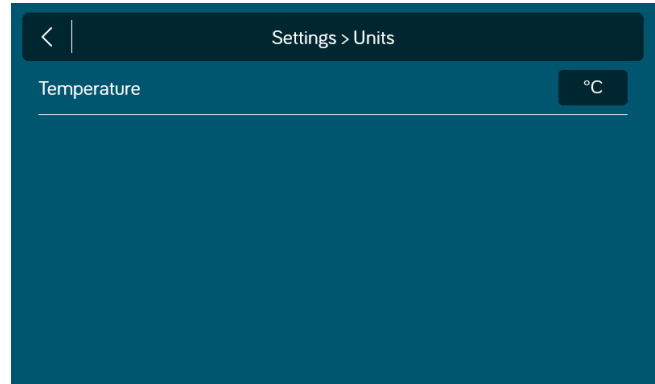


## • HVAC

From the HVAC page, you can control the Heating, Ventilation and Air conditioning functions in the RV.

With iN-Command, you can control up to 4 HVAC zones and schedule times for the HVAC function to be active.


### • Vent Fans

The Vent fans for each zone can be opened, closed and the fan speed can be switched between low, medium and high.

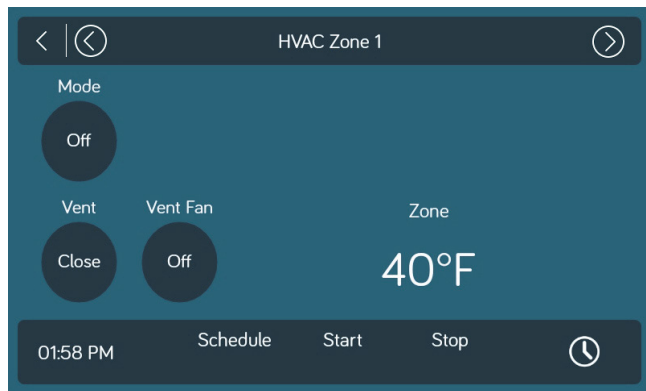


### • Fan Only Mode

1. To have just the AC fan operating in a zone, select the desired Zone, then press the "Mode" button to switch to Fan mode.
2. Press the "Fan" button to switch between Low and High fan speeds.

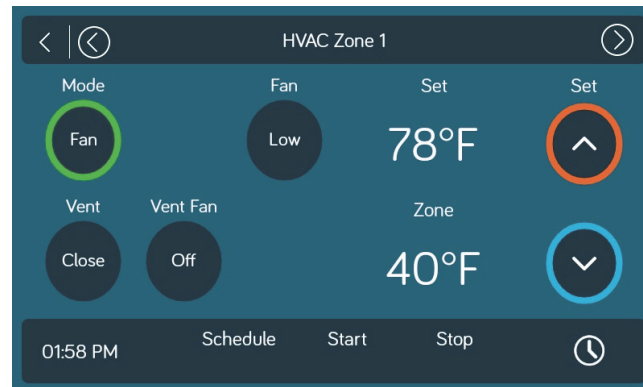


### • AC Cooling

1. Select the desired Zone. Press the "Mode" button to switch to "Cool" mode.
2. Use the "Set" up and down arrows to set the desired temperature for the zone.
3. Press the "Fan" button to switch between Low, High and Auto fan speeds.

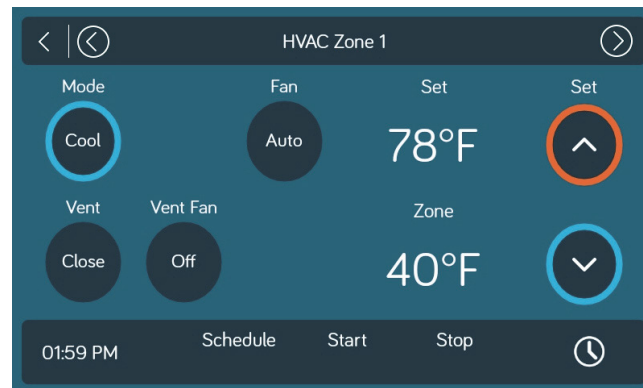

## • Heating


1. Select the desired Zone. Press the "Mode" button to switch to "Heat" mode.

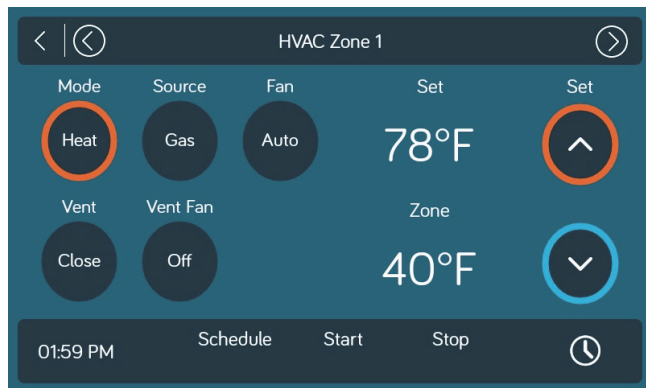

2. Press the "Source" button to select between Gas and Electric. (Available Heat sources depend on Floor Plan)
3. Use the "Set" up and down arrows to set the desired temperature for the zone.
4. Press the "Fan" button to switch between Off, Low, High and Auto. (Off is not available in Electric Heat Source.)

## • Auto

Auto Mode will automatically switch between Cool and Heat modes to reach the desired Set temperature. (Heat Mode is only available in Zones with Heat Mode selected on Floor Plan).

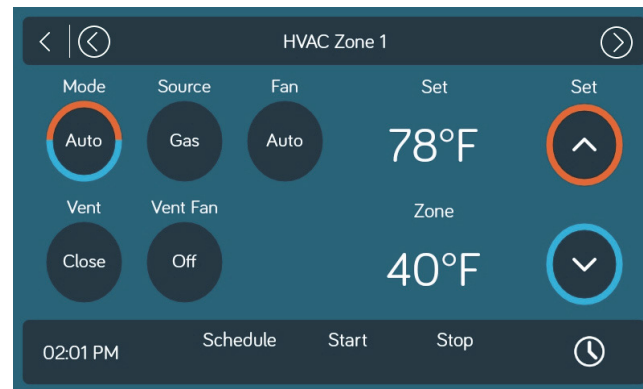

1. Select the desired Zone. Press the "Mode" button to switch to "Auto" mode.
2. Use the "Set" up and down arrows to set the desired temperature for the zone.
3. Press the "Fan" button to switch between Off, Low, High and Auto.


## • Date & Time

The Date & Time feature is used for the Generator and HVAC scheduling functions.


1. Select "Settings".



2. Press "Date & time".

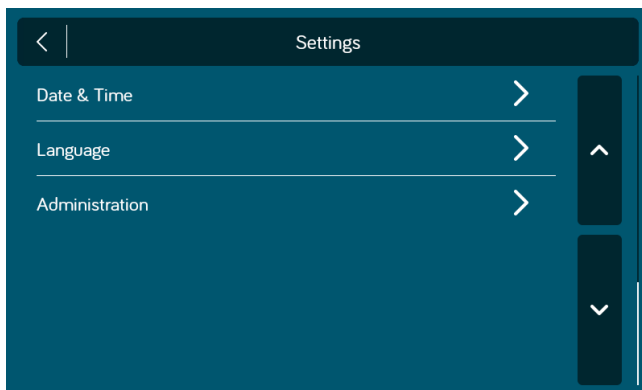

3. In the Date & Time page, press the "Edit" tab to adjust the date and time.

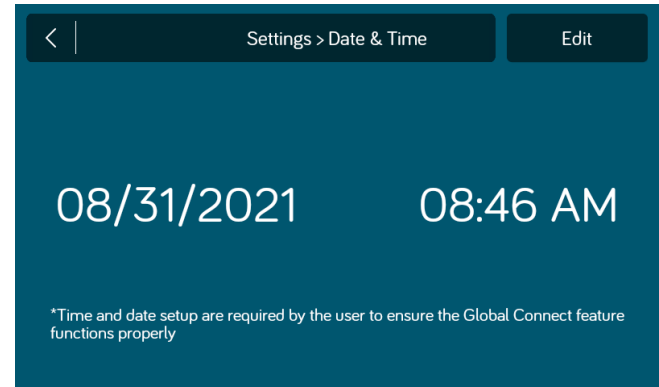


4. Use the Calendar to select the Date and the Clock to change the time. Press "Save".



## • HVAC Schedule

The Schedule function allows you to set a temperature and choose a start and stop for when you want the HVAC function to operate.

1. Press the "Clock" icon at the bottom right corner of the HVAC home screen to enter the Schedule page.

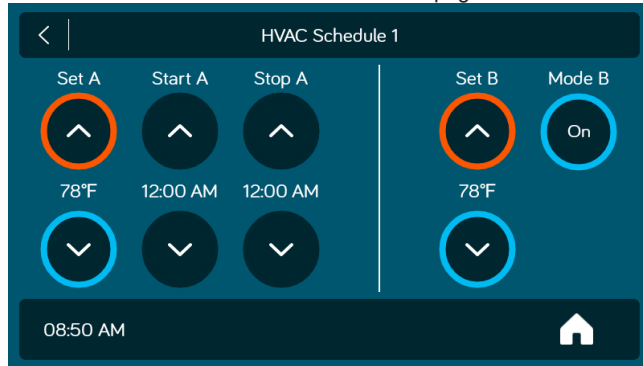

2. Use the "Set" up and down arrows to set the desired temperature.
3. Use the "Start" and "Stop" arrows to set the time frame that you want the HVAC function to operate.
4. Press the Schedule Button to turn "On" the schedule for the Zone selected.




## • AUTO GENERATOR START

1. Press the "Generator" icon.




2. Press the "Manual" button to switch to "Auto" and activate Auto Gen Start.

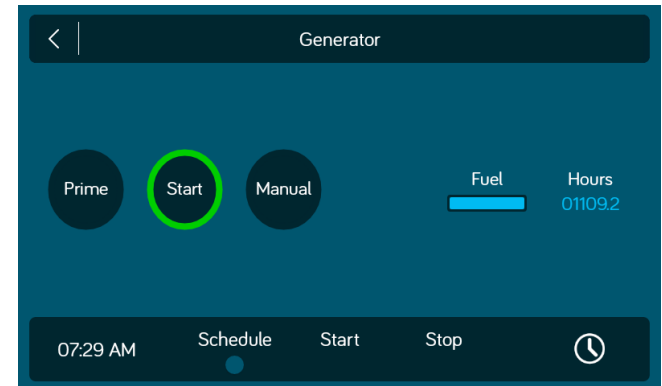





- If the battery voltage is less than the selected voltage threshold for 3 minutes, the system will start the generator. (See "Battery Type" in Custom Floor Plan Settings to select the desired voltage threshold.) To ensure the best performance and reliability, only one air conditioner and minimal 12V devices should be left on while using the Auto Generator Feature.

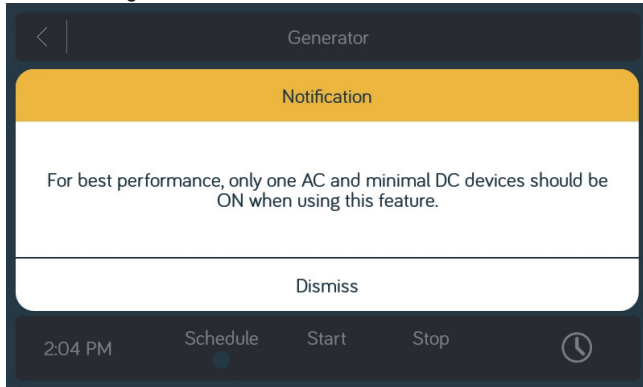

- If the generator is started, the system will run the generator for 60 minutes.

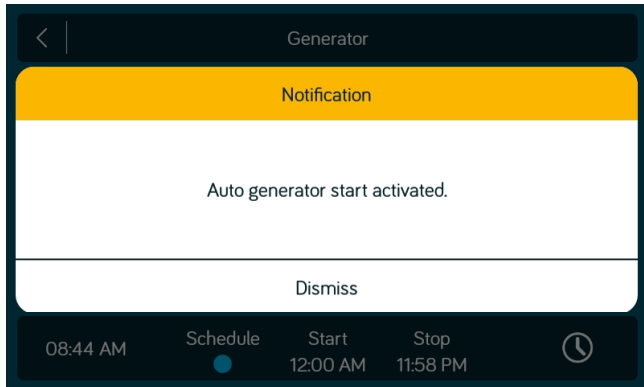


- The system will attempt to start the generator 3 times. If it fails to start after the third attempt, the system will turn off the Auto feature and display a "Check Generator" fault.

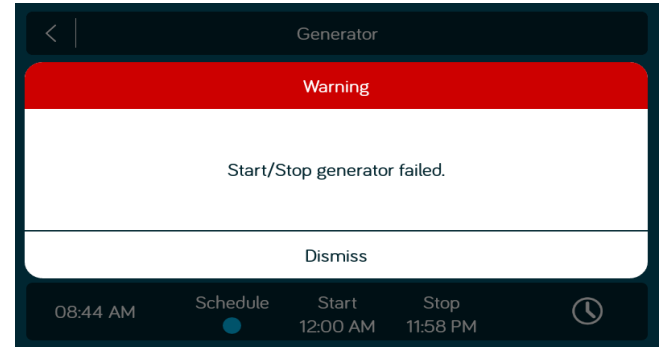

### • Generator Schedule

There is a Generator Schedule function to setup specific times for the generator to operate.

- While in the Generator page, press the clock icon at the bottom right of the page.
- From the Schedule page, you can set the Start and Stop times for the generator.
- Select the schedule button on Generator Home Page.

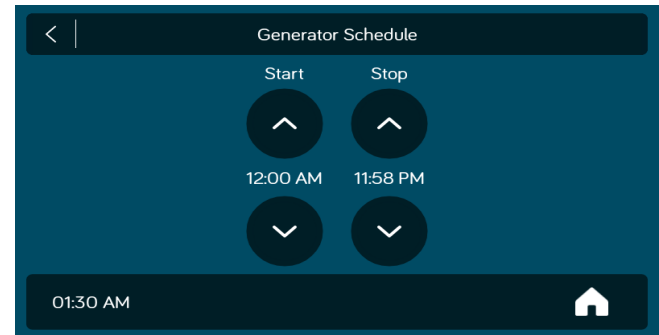


## • SOFTWARE UPDATE\*

Software updates include floorplan redesigns and App version updates.

1. Insert USB drive loaded with updated software into the USB port at the bottom of the DC.
2. Select "Settings".



3. In the Settings page, select the "Software" tab.

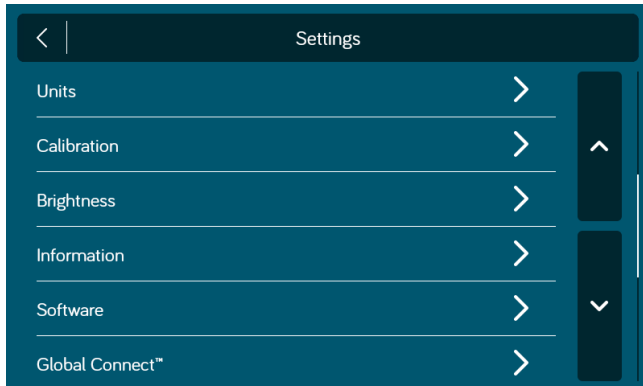


4. In the software page, you can choose to update the Floor Plan, DC Version, App Version and BCM Versions.




The system will look for specific file names for software updates.

- File name: "NCSP3-DC VXXXX.zip" > DC OS update (xxxx is the version number)
- File name: "ncspdcap\_vxxxx.apk" > DC App update (xxxx is the version number)
- File name: "ncspbcmvxxxx.bin" > BCM update (xxxx is the version number)


5. Press the DC Version to update the DC OS system.  
Press "Update".

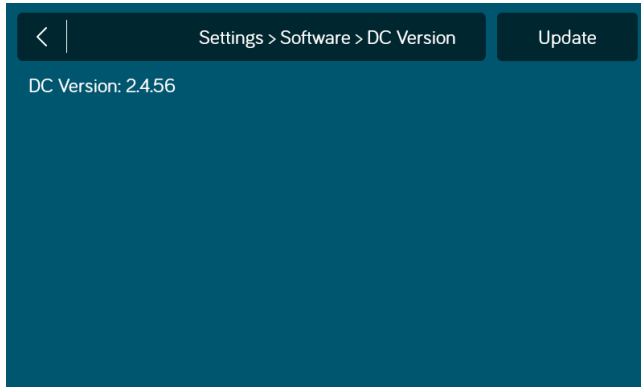


6. Framework Update.

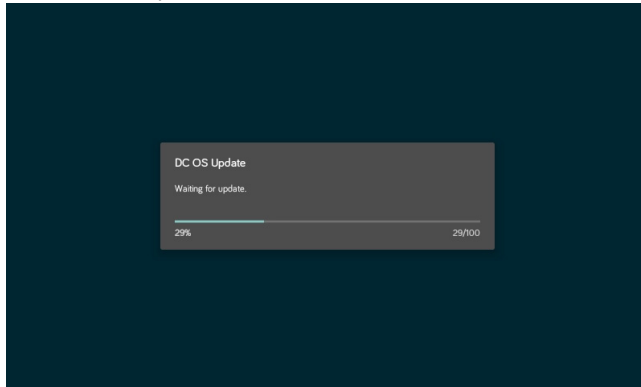


7. Press "Confirm" to continue.

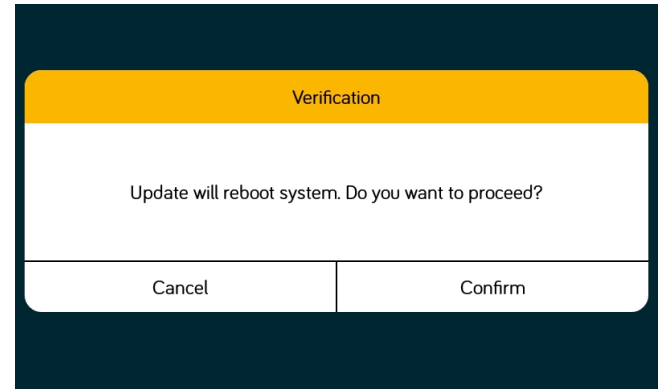


8. Press the BCM Version to update the BCM system.  
Press "Update".

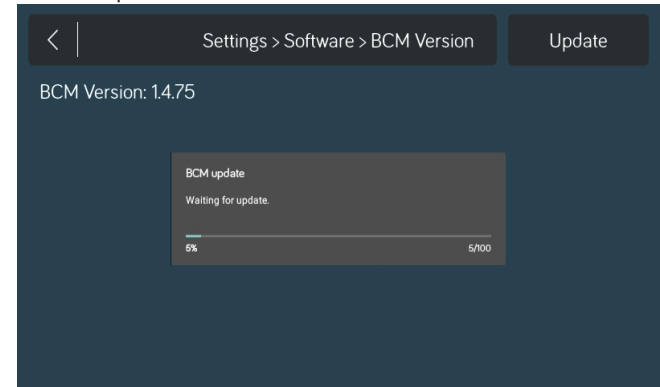


9. Press the App version to update the DC App.  
Press "Update".

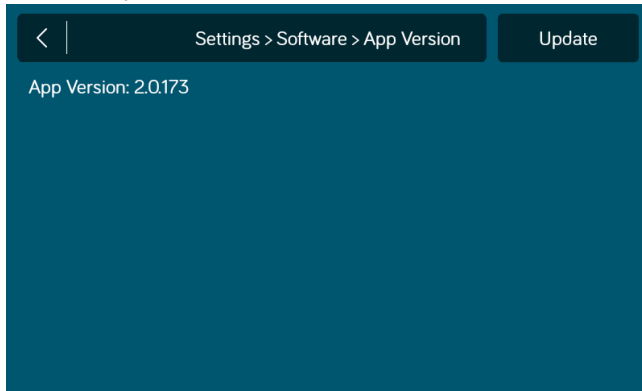


10. Waiting for Update.

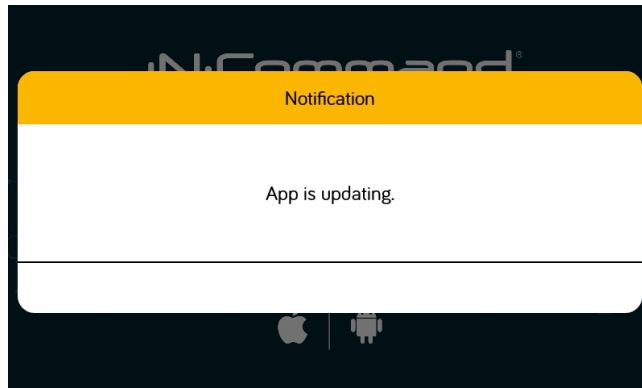

11. Press Floor Plan to select a floor plan.  
Press "Load" to select the floor plan.

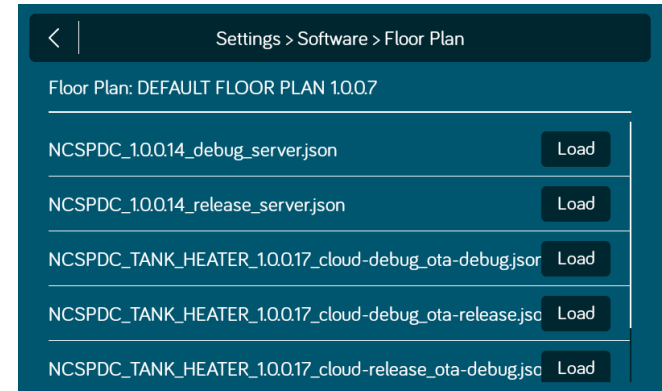

12. Press "Dismiss" to confirm selection.

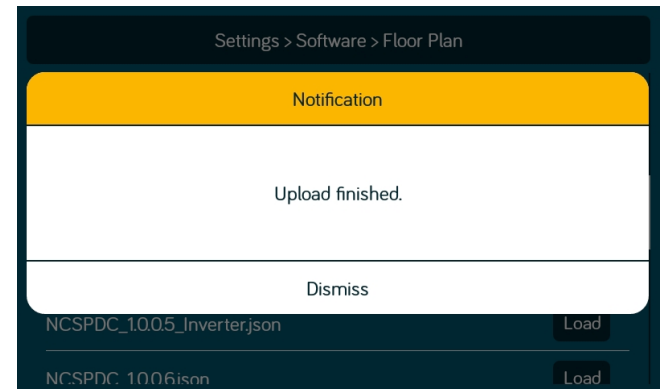

\* If a software update is needed, go to  
<http://www.asaelectronics.com/in-command>

35 \*\* If there is a software issue, Call ASA Electronics Technical Support at 1-877-845-8750 or email them at [info@asaelectronics.com](mailto:info@asaelectronics.com).

• **GLOBAL CONNECT\***

iN-Command is able to connect to Android and iOS devices through the cloud.


\* Requires Wi-Fi services for this feature.

\*\* Motorized functions are not available through the Global Connect feature.


To setup a cloud account, the device app first needs to be paired with the iN-Command via Bluetooth.

(Follow Bluetooth pairing instructions for your device).



1. On the DC, select Settings.

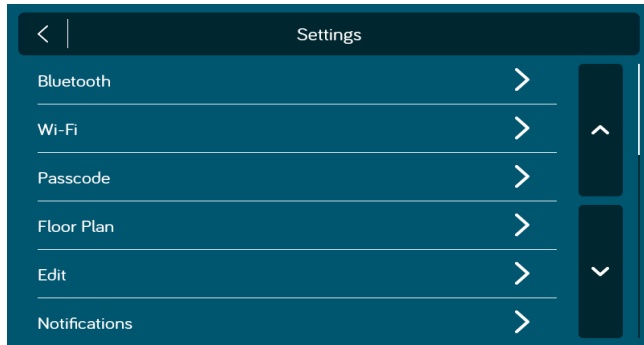


2. Select the Wi-Fi tab. In the Wi-Fi page, press the “Off” button at the bottom of the page to turn Wi-Fi “On” and “Scan” for available Wi-Fi signals in your area.

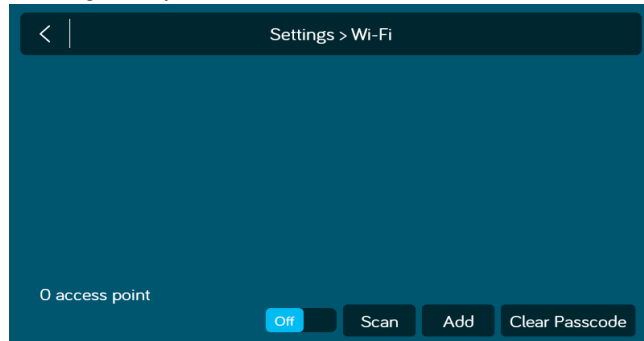


3. Select the Wi-Fi SSID and enter the passcode.

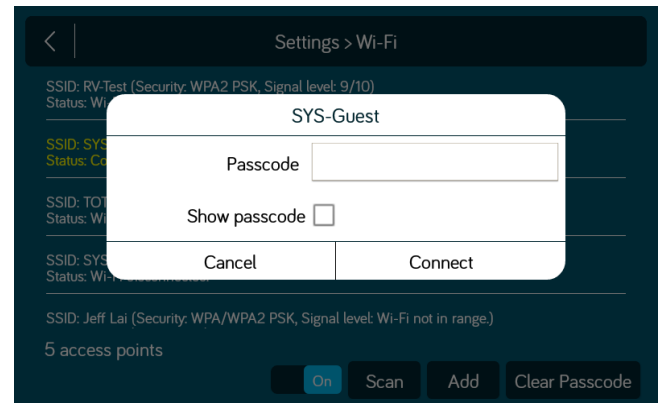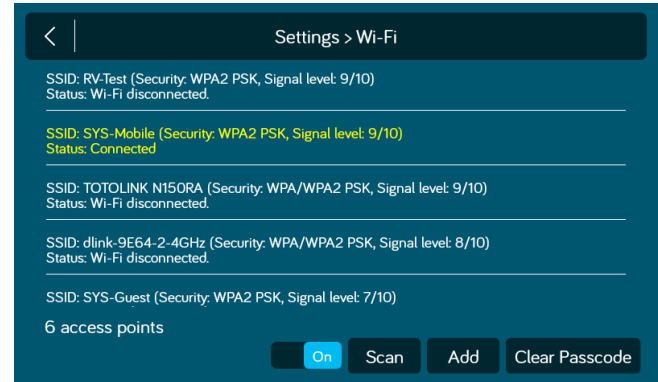


4. From the App Home Page, select  Settings. Select the “Global Connect” tab.

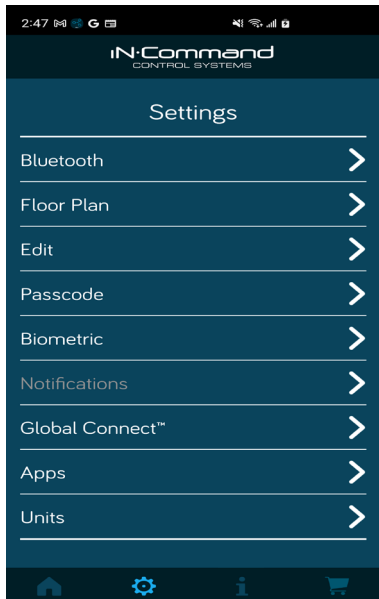


5. Select the “Account” tab.

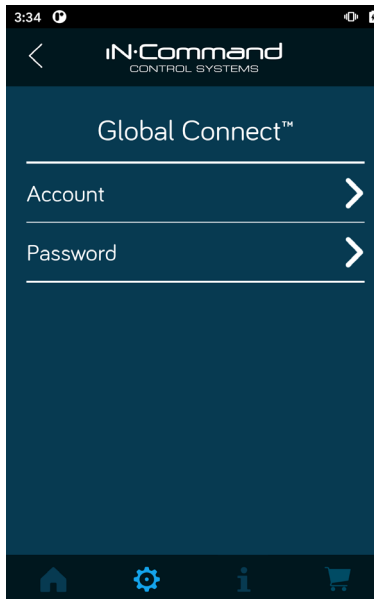


6. Press on the white bar next to “Account:” and Use the device keypad to enter a valid email address.

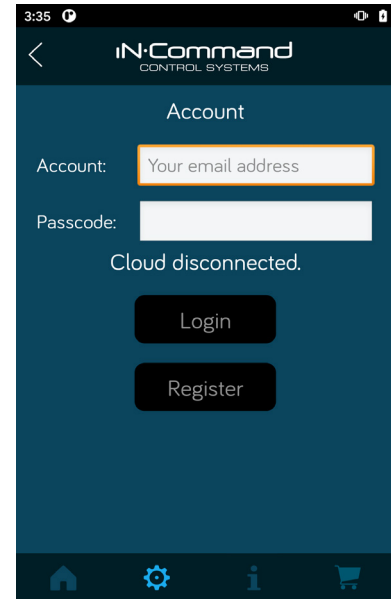


- Press on the white bar next to “Passcode:” and use the device keypad to enter a passcode for the account, then press the “Register” button. After the account is registered, a notification of “Register success” will appear. Press “Dismiss”. The account & passcode will be pushed to the DC.

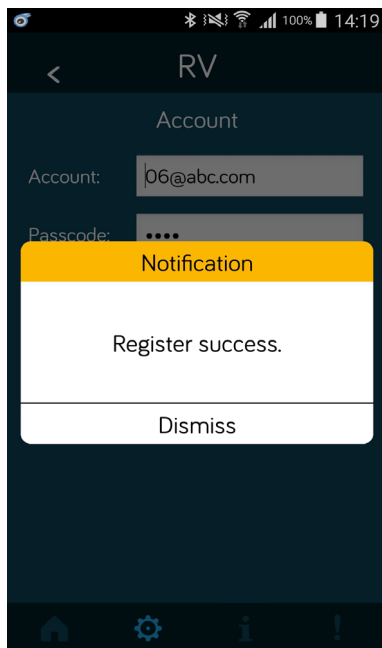

- You can enter the account and Passcode manually. (Note: The account information will automatically be pushed to the DC from the mobile app when the account is created.) In Settings, select the Global Connect Tab.

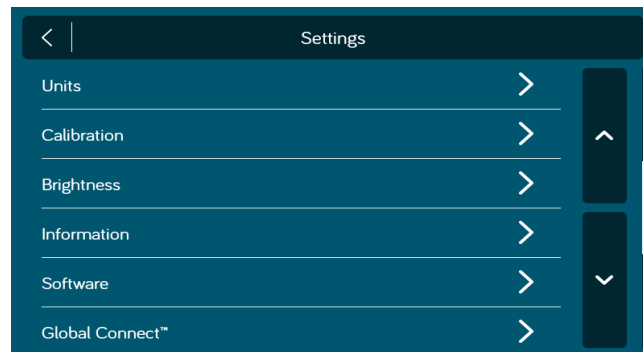

- Enter the account and passcode that you created on the device app. Press “Login”.

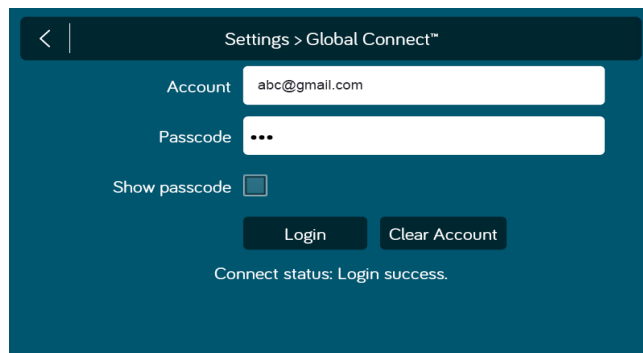


- On the device, turn Bluetooth off. As long as you have internet available through your device and iN-Command, the device app will connect to iN-Command through Global Connect.

## • FLOOR PLAN


Customize or Reset Floor Plan settings.

### • Reset


1. Select "Settings".

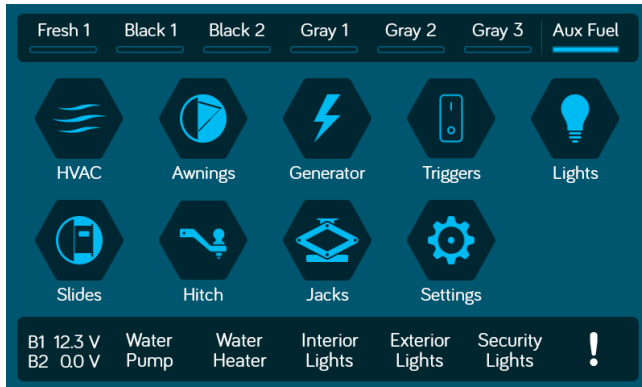

2. Select "Floor plan" in the Settings page.

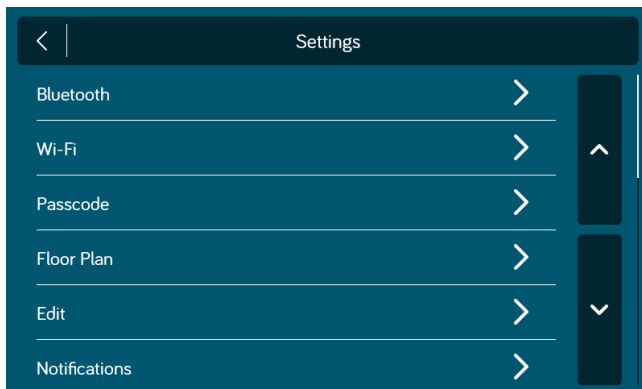


3. Select "Reset"

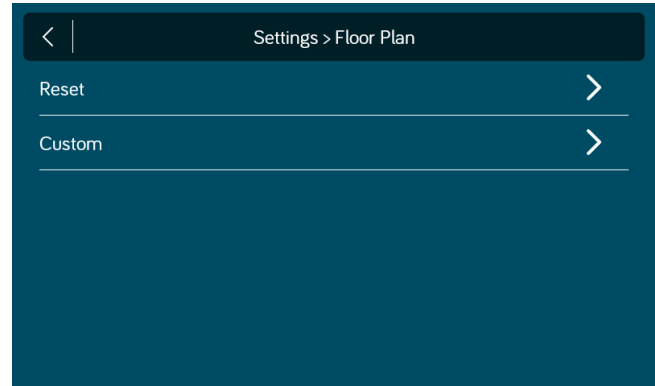


4. Select on of the two options(Default or OEM) to restore to a previous state.

- Default: restores to default settings from ASA.
- OEM: restores to floor plan settings supplied by the RV Manufacturer.

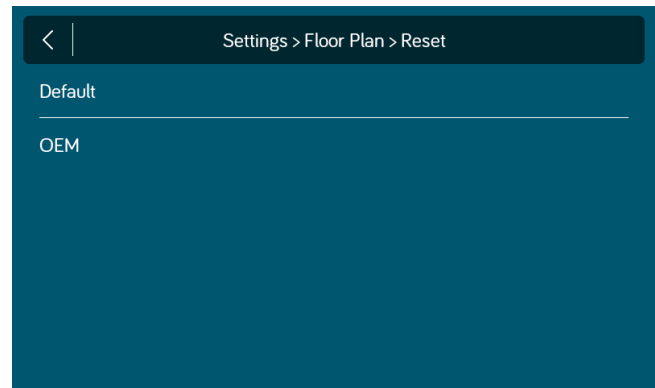



5. Press "Confirm" to reset floor plan back to default or OEM.

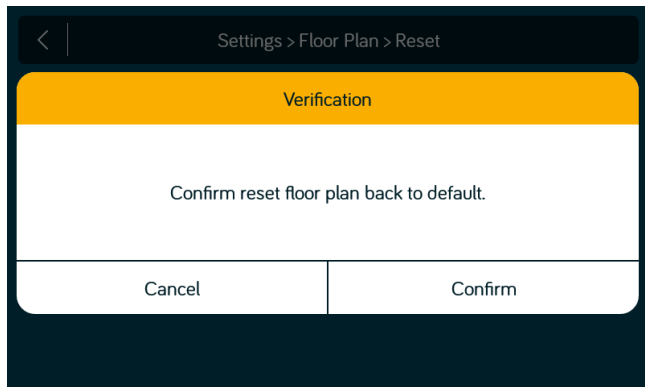

• **Custom\***

The following options are available to customize:

Generator (Off, Gas, Propane)

HVAC 1 (Off, AC Only, Gas, Electric, Gas & Electric)

HVAC 2 (Off, AC Only, Gas, Electric, Gas & Electric)

HVAC 3 (Off, AC Only, Gas, Electric, Gas & Electric)

HVAC 4 (Off, AC Only, Gas, Electric, Gas & Electric)

Battery Type (Standard [11.8], Lithium [12.2, 12.4, 12.6, 12.8, 13.0, 13.2])

Alarm 1 (Off/On)

Alarm 2 (Off/On)

Alarm 3 (Off/On)

Alarm 4 (Off/On)

Trigger 1 (Off, Latch, Momentary)


Trigger 2 (Off, Latch, Momentary)

Trigger 3 (Off, Latch, Momentary)


Trigger 4 (Off, Latch, Momentary)

Note: Default has options populated according to the floor plan loaded by OEM. Any populated fields are dark blue.


1. Select the "Custom" in the floor plan / Settings page.

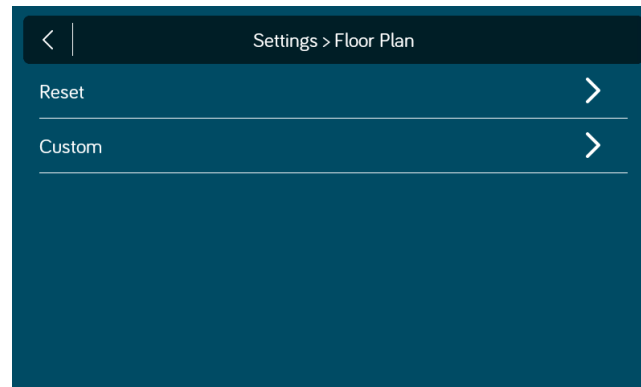

2. Press the box next to the function to turn off, on and cycle through available options.

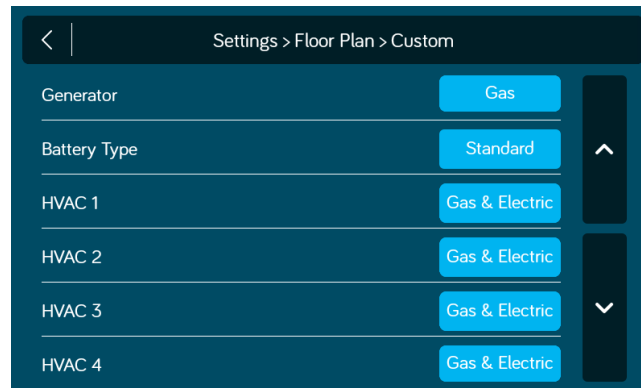

3. When finished making changes, press the Return button.  
Then press "Save"

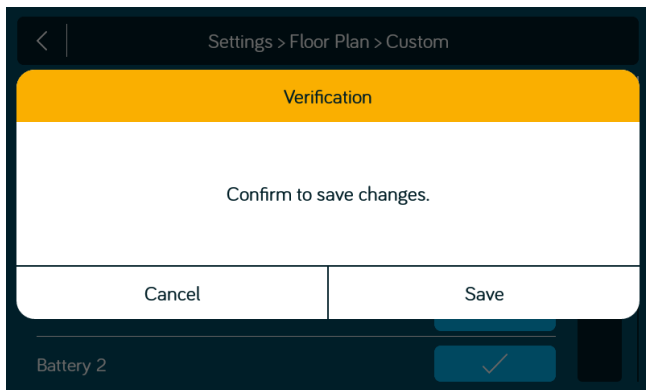

### • Notifications

The following notifications are available to customize:

Alarms

Alarms 1 – 4 (Off, On)

Batteries

Batteries 1 -2 (Off, On with range from 10.8 to 14.4V)

Tanks

Fresh 1 – 2 (Off, 0/3, <1/3)

Black 1 – 2 (Off, >2/3, 3/3)

Gray 1 – 3 (Off, >2/3, 3/3)

Generator Fuel (Off, 0/3, <1/3)

Interior Temperature

-High: Off, On with range from 30°F - 90°F


-Low: Off, On with range from 30°F - 90°F

Note: Only one HVAC Zone can be selected for notifications.




3. Select "Settings"




4. Select "Notifications".

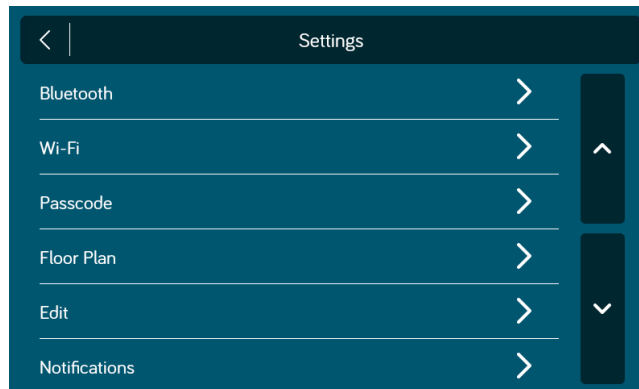

3. To change notification settings, press the box next to the function to cycle through options.

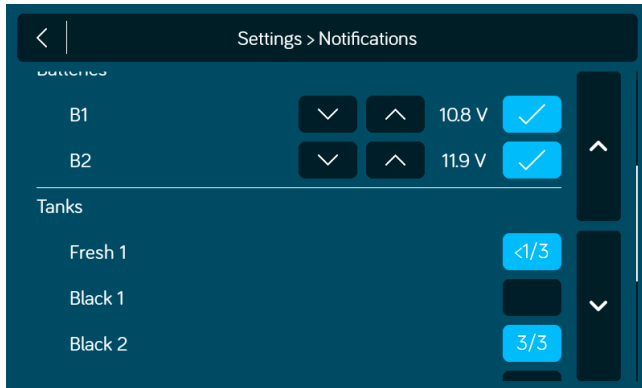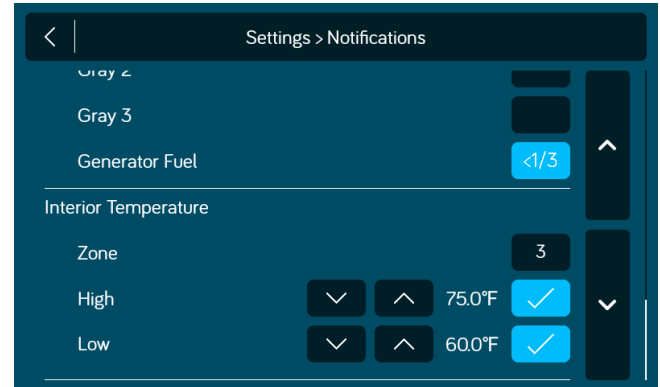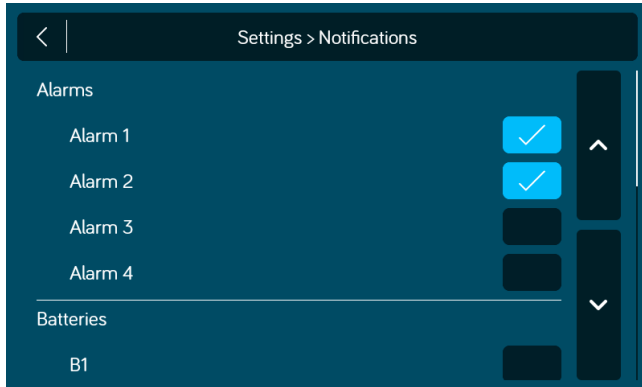

4. When finished making changes, press the Return button. Then press "Confirm".

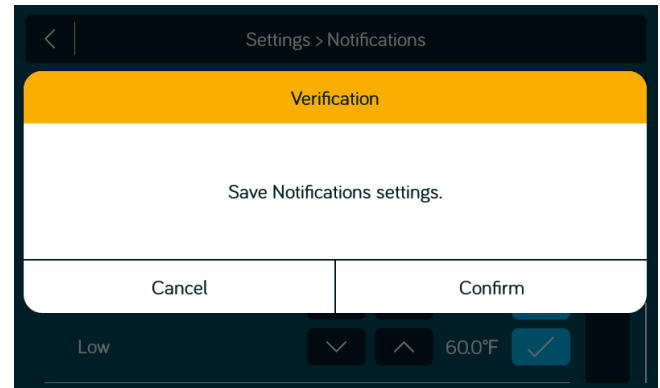


## • TOUCH SCREEN CALIBRATION


1. Select "Settings".



2. Select "Calibration".

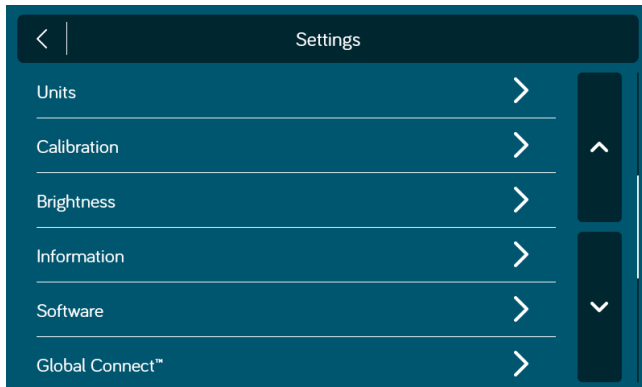

3. To calibrate the Touch Screen, select "Set". Follow the instructions. The DC will restart after calibration.

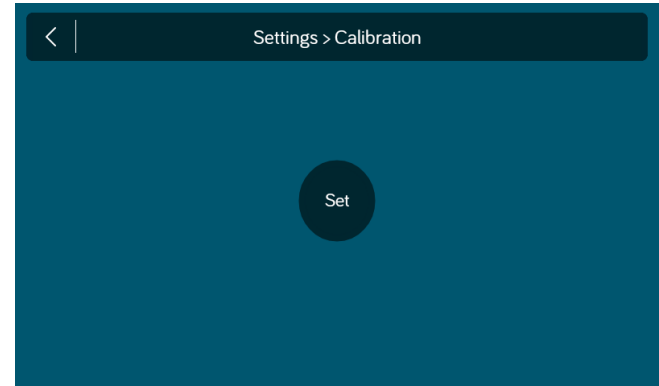

4. Touch the center of the cross.




## • SYSTEM CALIBRATION \*

From the Administration page, the App Data can be deleted, the Generator Hour Meter can be set, and the Water Tanks can be calibrated.


1. From the Settings page, press "Administration".




2. Enter Administrator passcode to proceed.\*\*

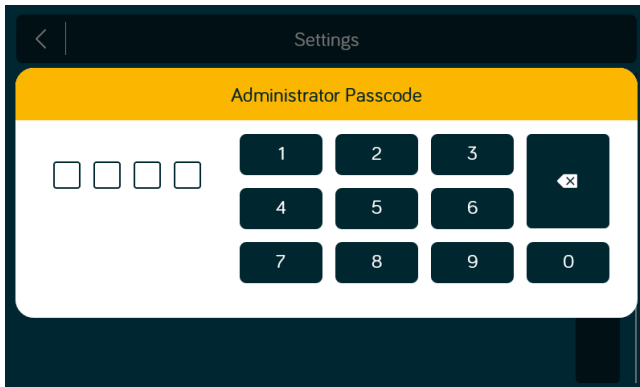



3. Make Selection.

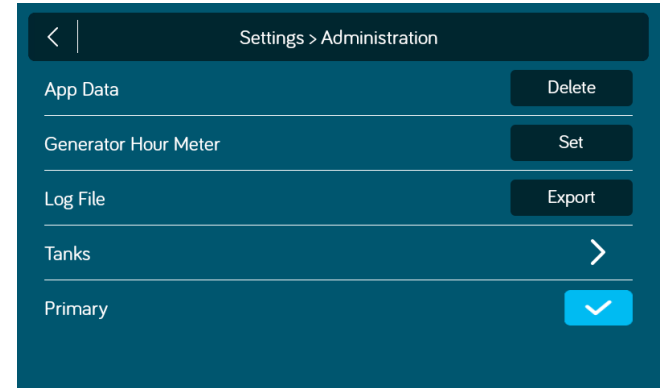

4. Select "Tanks" to set resistor reference value for every tank.


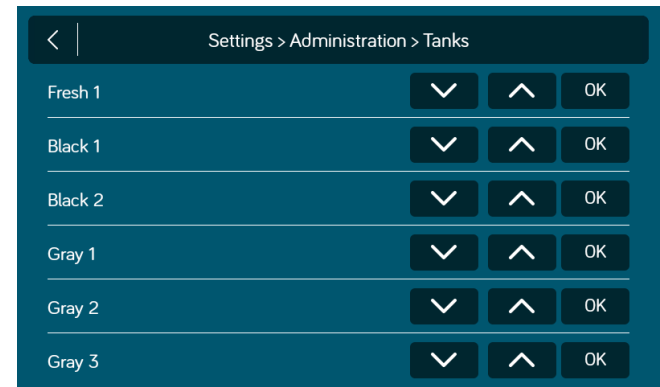


5. Press the Generator Hour Meter "Set" button to set the meter time.

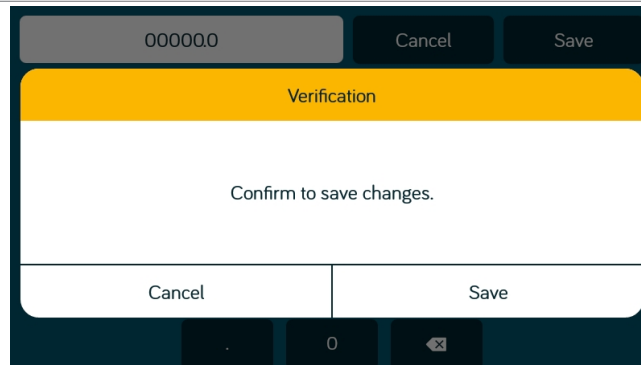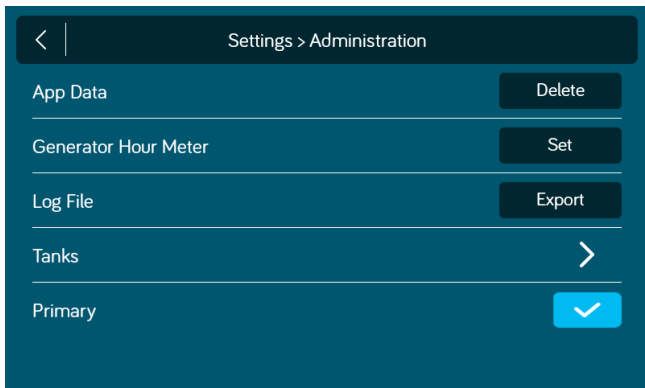

6. Press the App Data "Delete" button to clear current App data.

**Note: This will remove the floor plan settings from the RV Manufacturer.**

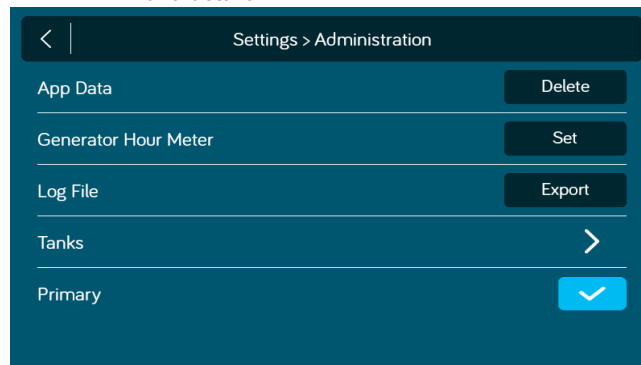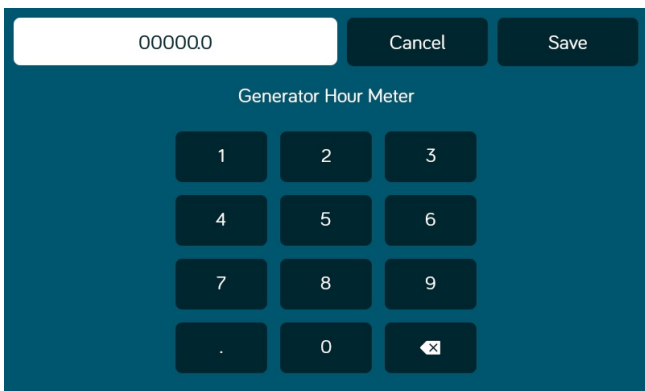

\* The system is calibrated by the manufacturer and should only be accessed for troubleshooting.

\*\* The Administration Passcode is used by the manufacturer for programming and troubleshooting purposes. Should there be a calibration issue, call ASA Electronics Technical Support at 1-877-845-8750 or email them at [info@asaelectronics.com](mailto:info@asaelectronics.com).

## • TROUBLESHOOTING

Symptom	Solution
Display Commander (DC) will not turn ON or no front panel operation	Check for +12VDC on Positive (+) input on back of the DC.
	Check for Ground on Negative (-) input on back of the DC.
	Check fuse in Distribution Panel.
	Try cycling power with the power button.
No power to the Body Control Module (BCM)	Check for +12VDC on pin 90.
	Check for Ground on pin 86
	Check fuse in Distribution Panel.
DC screen flashing on and off after installation	Disconnect power wires from the back of the DC.
	Shut off all power to the DC and BCM.
	Reconnect power wires to the DC.
	Return power to the DC and BCM.
	Press Reset button on the BCM
Awnings do not move	Check for +12VDC on Pin 88. Ensure the relay activates.*
Slide Rooms do not move	Check for +12VDC on Pin 89. Ensure the relay activates.*
*Relay not activating	Replace the relay with one from an unused circuit. See label on BCM cover for relay identification.
DC shows 0V and no functions activate from DC	Check for shorts in RV-C cable and for loose pins in the connection.

For additional troubleshooting, call ASA Electronics Technical Support at 1-877-845-8750, email [info@asaelectronics.com](mailto:info@asaelectronics.com) or visit our website <http://www.asaelectronics.com//in-command>.

